



ESPLOSO
Asta Decespugliatori
205028 - 205031

BRUSHCUTTER MACHINE SPARE PARTS LIST





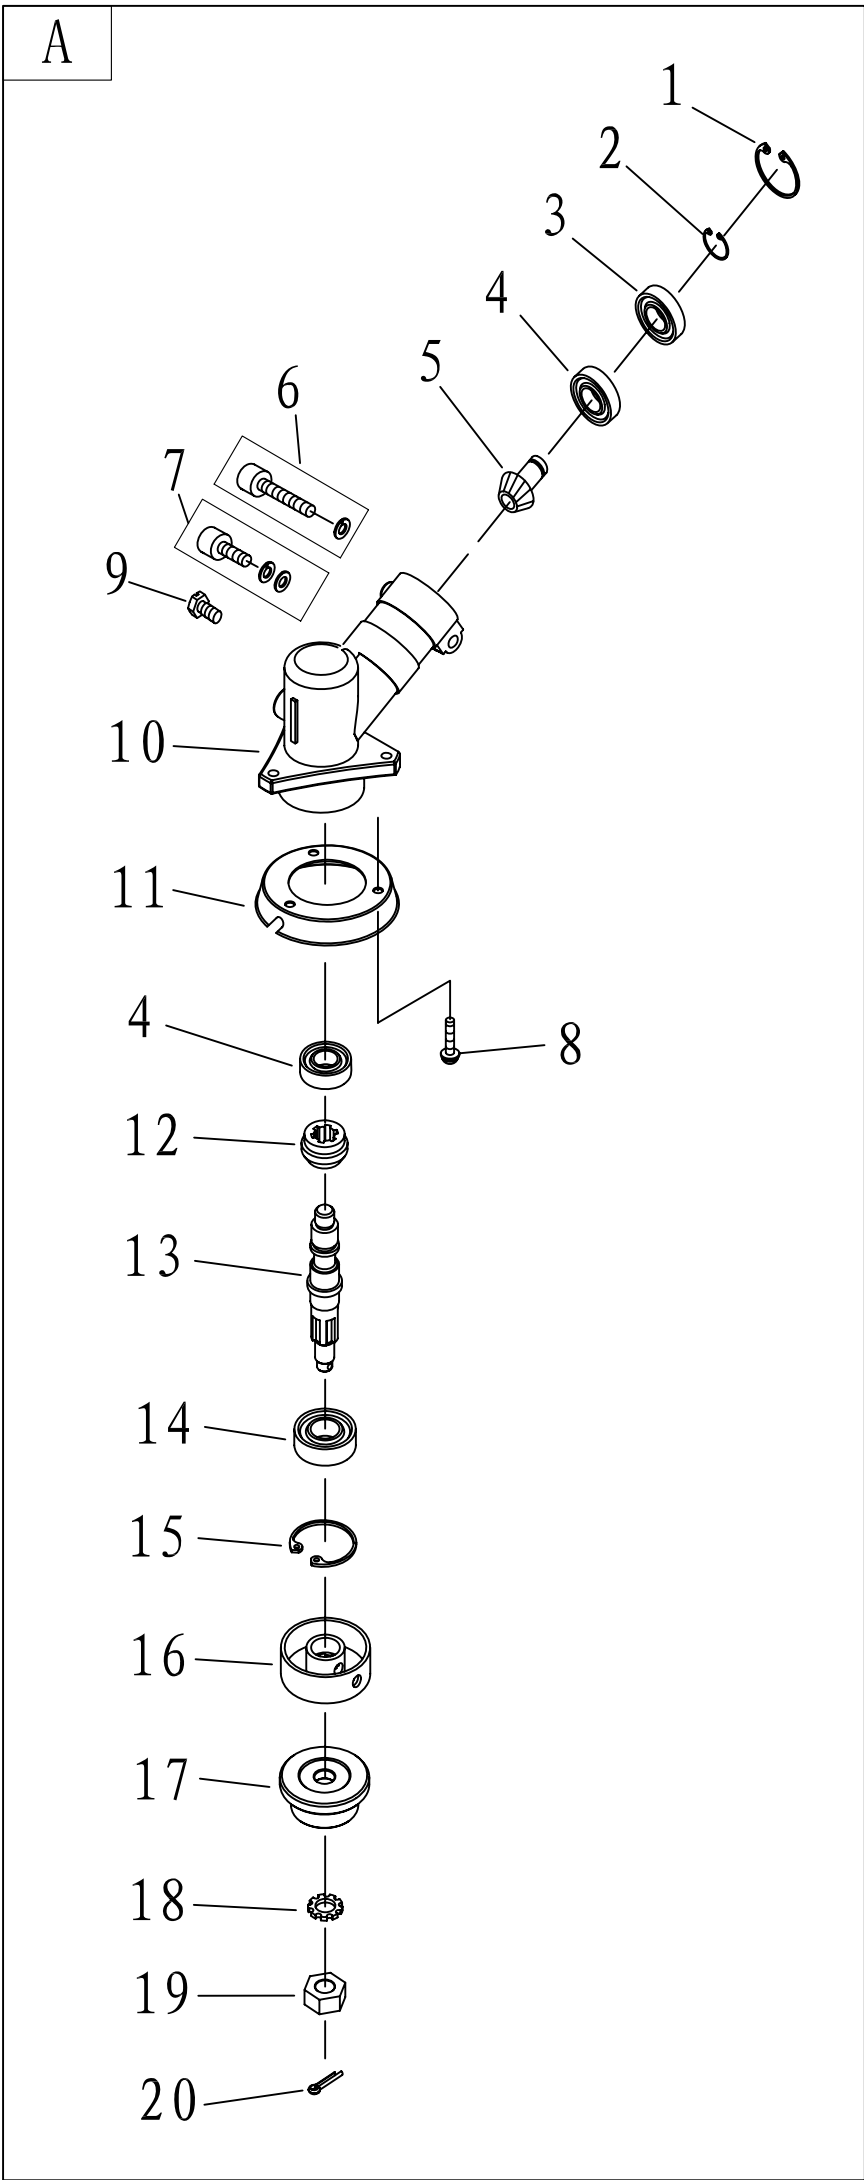


NO.	PART NO.	PART NAME	QTY.
A	CG415. 3A	Gear Case Ass' y	
1	GB/T893. 2	Stop Ring 26	1
2	GB/T894. 1	Stop Ring 10	1
3	GB/T276	Bearing 6000-2RS/P6	1
4	GB/T276	Bearing 6000/P6	2
5	CG415D. 6-4	Pinion	1
6	GB70+GB93	Screw M5×25	1
7	GB70+GB93+GB97	Screw M5×12	1
8	GB/T9074. 4	Screw M5×12	3
9	GB/T9074. 11	Bolt M5×12	1
10	CG415. 3A-1	Gear Case	1
11	CG415. 3A-2	Safety Guard	1
12	BG-328. 9. 5-2	Gear	1
13	CG305F. 1-1	Gear Shaft	1
14	GB/T276	Bearing 6002-2RS/P6	1
15	GB/T893. 2	Stop Ring 32	1
16	BG305. 12. 4-5	Holder A	1
17	CG305F. 1-3	Holder B	1
18	GB/T862. 1	Washer 10	1
19	CG305F. 1-4	Left Nut	1
20	GB/T91	Pin 2×16	1

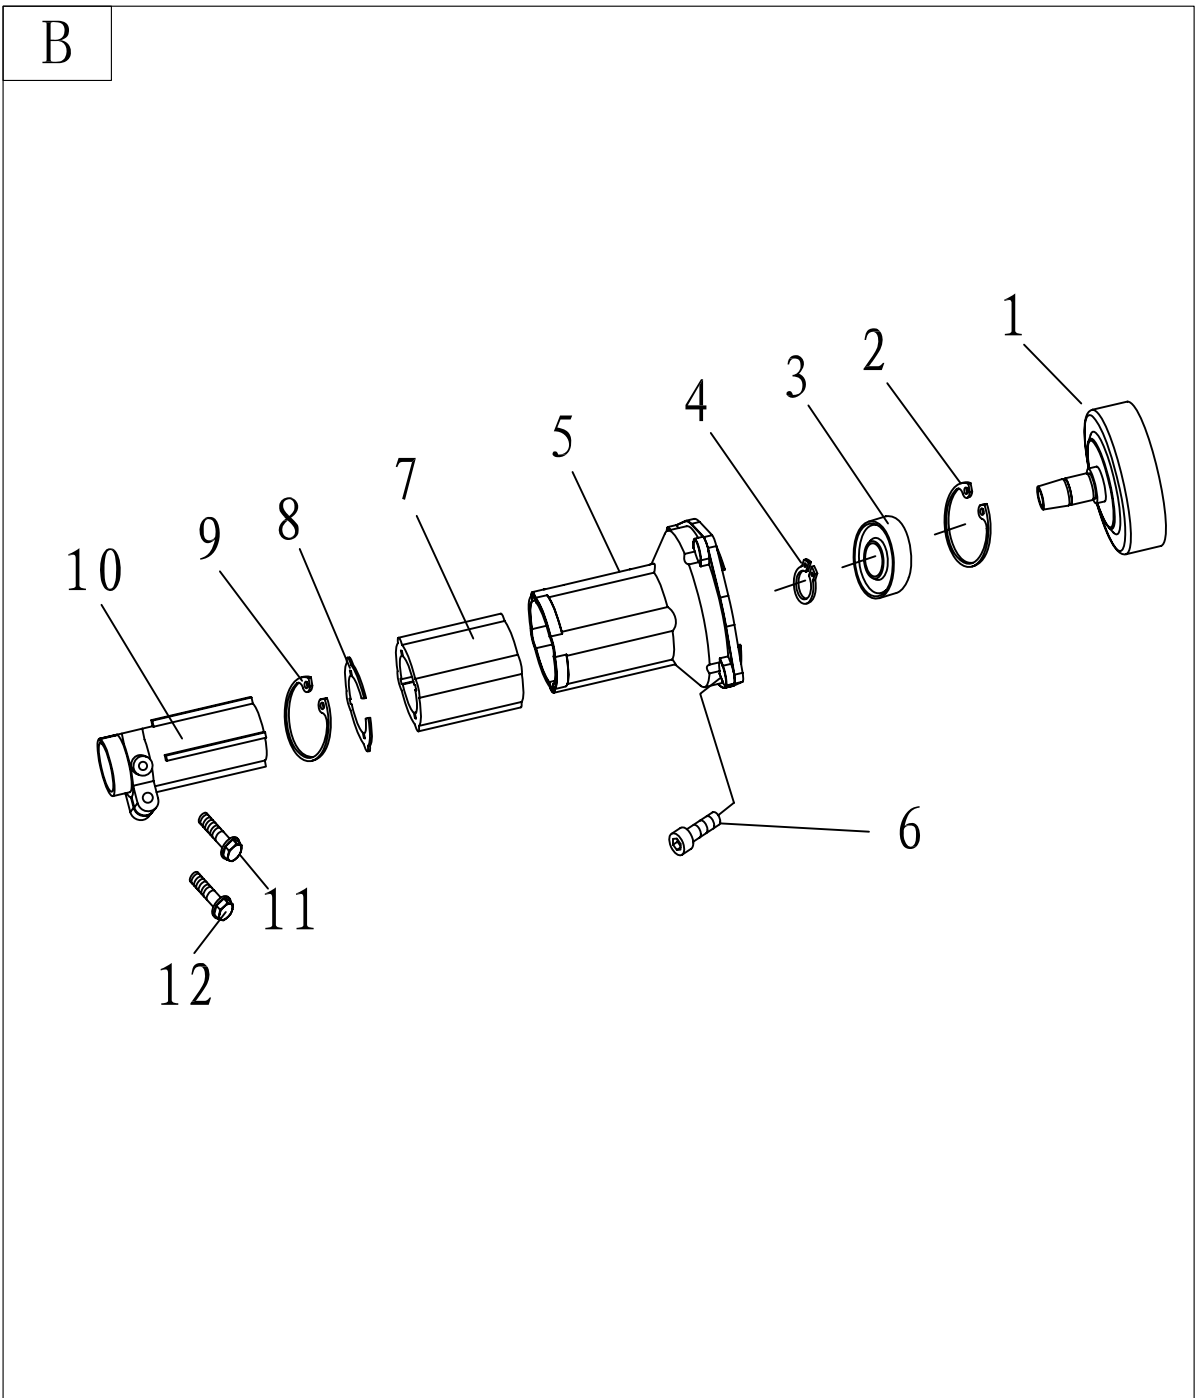

NO.	PART NO.	PART NAME	QTY.
B	CG330A-3E. 3	Clutch Comp.	1
1	CG415D. 1. 1A	Clutch Drum Comp.	1
2	GB/T893. 1	Stop Ring 35	1
3	GB/T276	Bearing 6202-2RS/P5	1
4	GB/T894. 1	Stop Ring 15	1
5	CG330A-3E. 3-1	Clutch Case	1
6	GB70+GB93+GB97	Bolt M6×20	4
7	CG330A-3E. 3-2	Rubber	1
8	CG63. 3-4	Washer	1
9	GB/T893. 1	Stop Ring 48	1
10	CG330A-3E. 3-3	Linker	1
11	GB70+GB93+GB97	Bolt M6×30	1
12	GB/T70	Bolt M5×12	1

BRUSHCUTTER MACHINE SPARE PARTS LIST

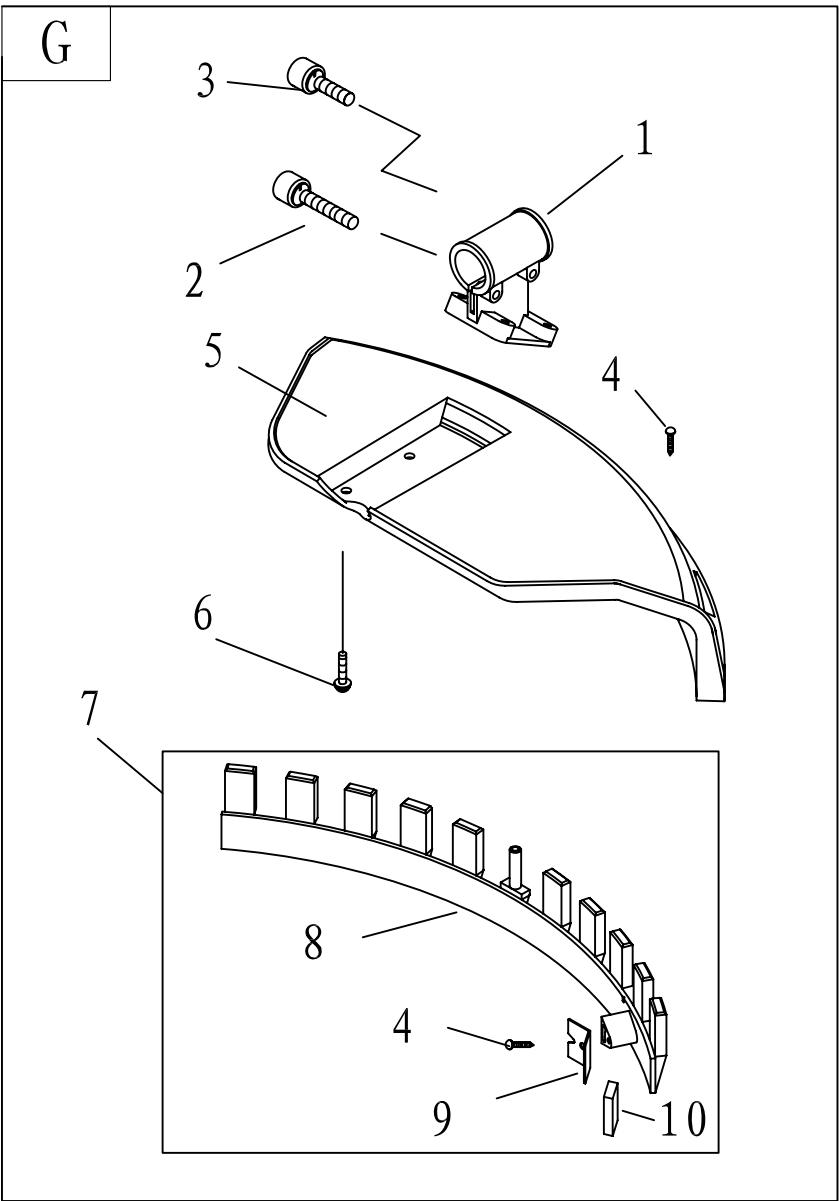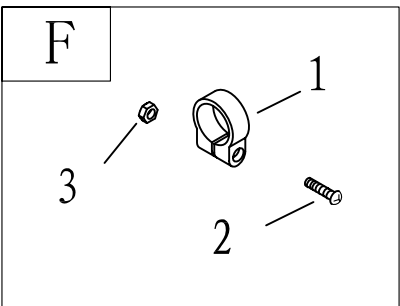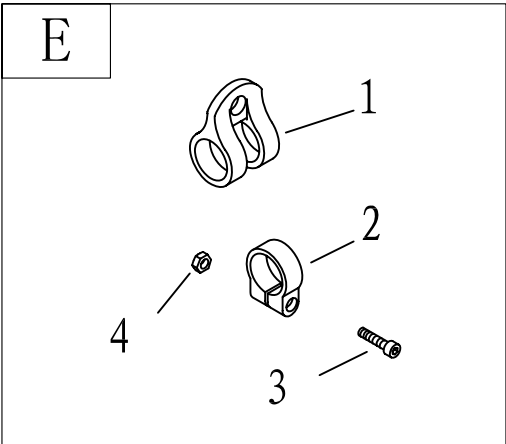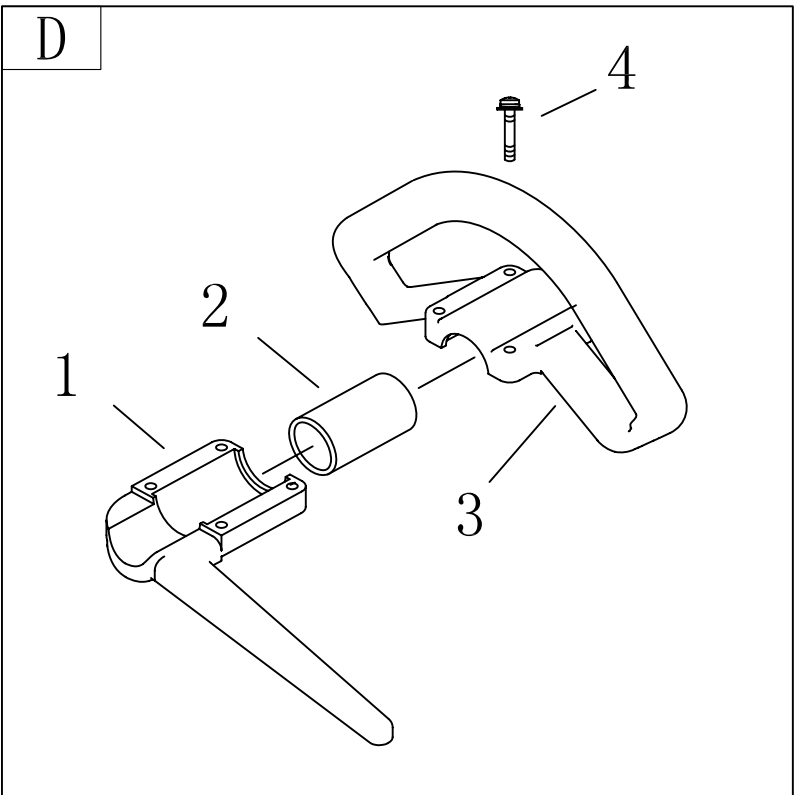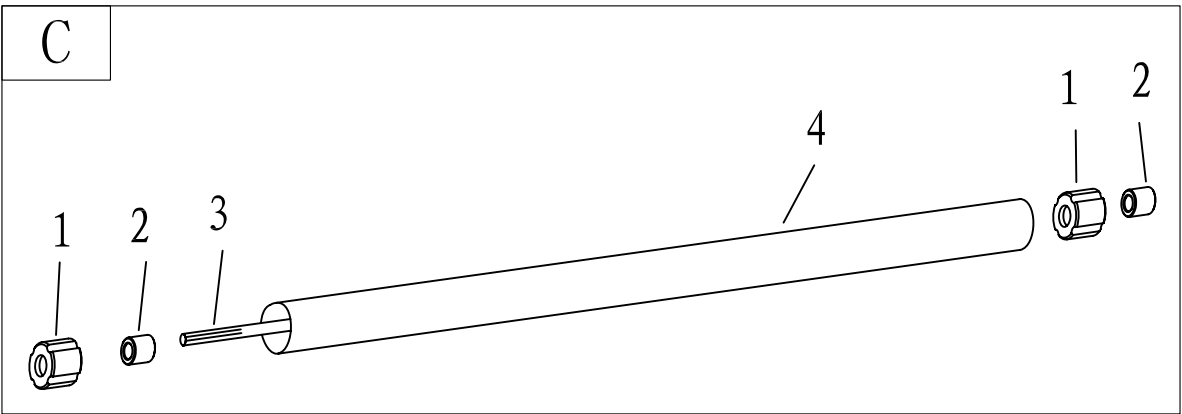

NO.	PART NO.	PART NAME	QTY.
C		Pipe Comp.	1
1	BG-328. 9. 4-5	Rubber Cover	6
2	BG-328. 9. 4-4	Oil-bearing	6
3	CG420. 2-3	Drive Shaft	1
4	CG330A-3E-2B	Pipe	1


NO.	PART NO.	PART NAME	QTY.
D	CG245Q. 11	Handle Comp.	
1	CG245Q. 11. 1	Handle Cover	1
2	BG330-CE. 1-2-2012CE	Rubber Cover	1
3	CG245Q. 11-1	Handle	1
4	BC36. 4-2+GB93+GB97	Screw M5×35	4

NO.	PART NO.	PART NAME	QTY.
E	CG260. 3	Holder Ass'y	
1	CG260. 3. 1	Harness Clamp	1
2	CG260. 3-1	Clamp	1
3	GB/T70. 1	Screw M5×20	1
4	GB/T889. 1	Nut M5	1


NO.	PART NO.	PART NAME	QTY.
F		Clamp Ass'y	2
1	CG260. 3-1	Clamp	1
2	CG260. 3-2-2012CE	Screw M5×18	1
3	GB/T889. 1	Nut M5	1

NO.	PART NO.	PART NAME	QTY.
G	BG430. 2. 6	Guard Ass'y	
1	BG430-JCB. 1	Bracket	1
2	GB70+GB93+GB97	Screw M5×30	2
3	GB70. 1	Screw M5×12	1
4	GB/T845	Screw ST4. 2×16	3
5	CG420. 7. 1-1	Safety Guard	1
6	1E40F-5A-CE-4	Screw M5×16	4
7	CG420. 7. 1. 1	Guard Ass'y	1
8	CG420. 7. 1. 1-1	Guard	1
9	CG420. 7. 1. 1-2A	Blade	1
10	CG420-5	Blade Cover	1


BRUSHCUTTER MACHINE SPARE PARTS LIST

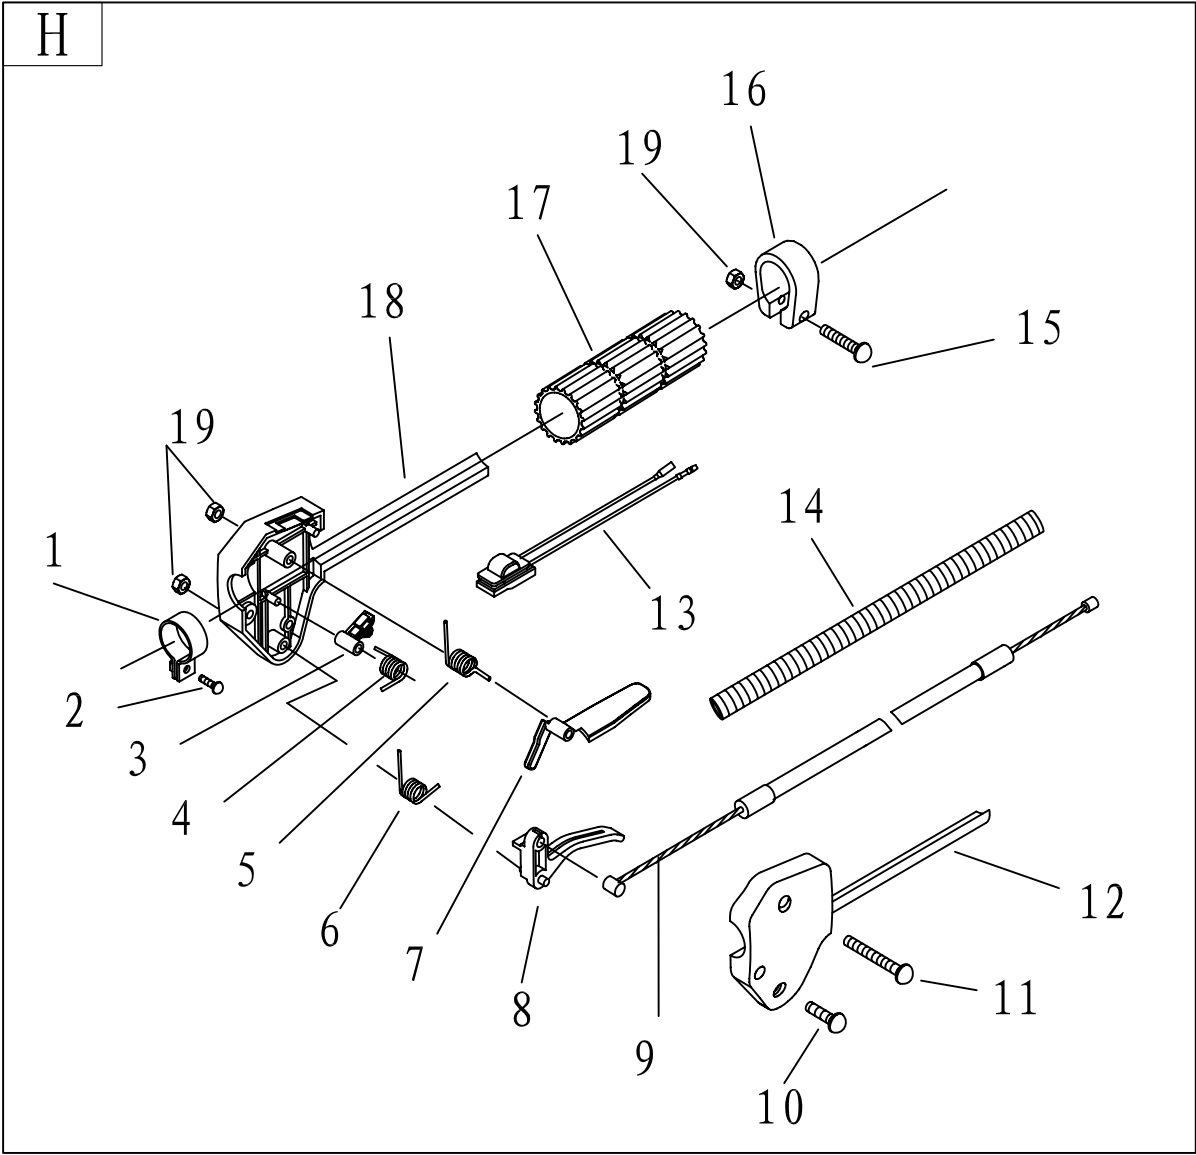

NO.	PART NO.	PART NAME	QTY.
H		Level Ass'y	1
1	CG305F. 13. 2	Clamp	1
2	GB/T9074. 4	Screw M5×16	1
3	CG305F. 13-10	Tine	1
4	CG305F. 13-11	Spring	1
5	CG305F. 13-9	Spring	1
6	CG305F. 13-1	Spring	1
7	CG305F. 13-8	Safety Lever	1
8	CG305F. 13-2	Throttle Lever	1
9	CG260. 2. 2C	Cable Comp.	1
10	GB/T9074. 4	Screw M5×25	2
11	GB/T9074. 5	Screw M5×30	1
12	CG305F. 13-3	Box, Left	1
13	CG260. 2. 1	Stop Switch	1
14	BG-328A-2	Tube	0.17m
15	GB/T9074. 4	Screw M5×25	1
16	CG305F. 13-5	Clamp	1
17	CG305F. 13-6	Rubber Cover	1
18	CG305F. 13-4	Box, Right	1
19	GB/T889. 1	Nut M5	3

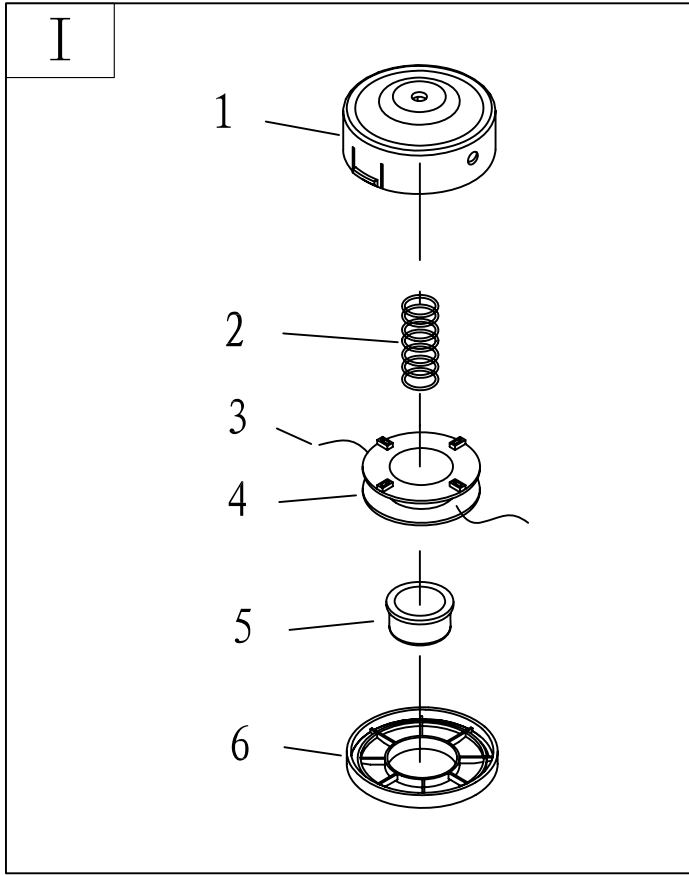

NO.	PART NO.	PART NAME	QTY.
I	CG520-HS. 1	Nylon Cutter Head	
1	CG520-HS. 1. 1	Case	1
2	CG520-HL. 17-3	Spring	1
3		Cord ϕ 2. 5×2100	2
4	CG520-HL. 17-2	Cord Holder	1
5	CG520-HL. 17-4	Cover	1
6	CG520-HL. 17-1	Cover	1

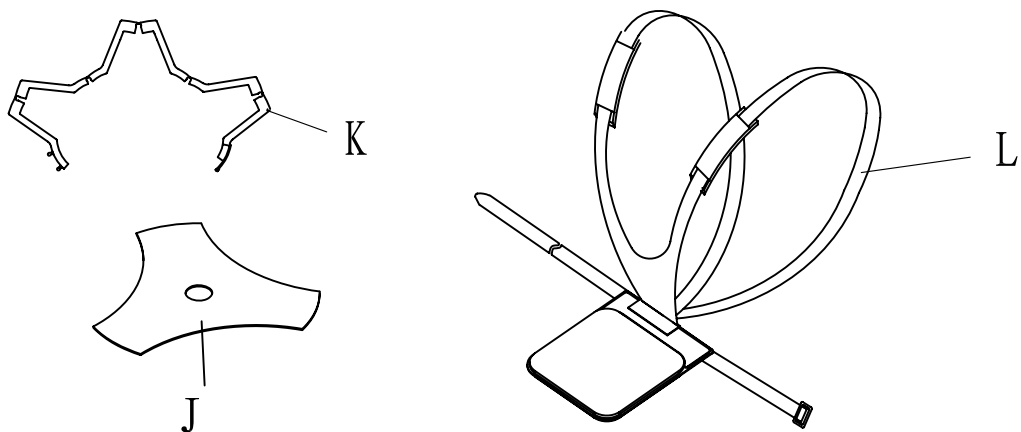

NO.	PART NO.	PART NAME	QTY.
J	CG420-2	Blade	1
K	CG420-3	Guard	1
L	BC46. 3	Harness Ass'y	1