

CERUTI

www.ceruticenter.it

ESPLOSO


Decespugliatore

ST-415




BRUSHCUTTER MACHINE SPARE PARTS LIST ST-415

1/4

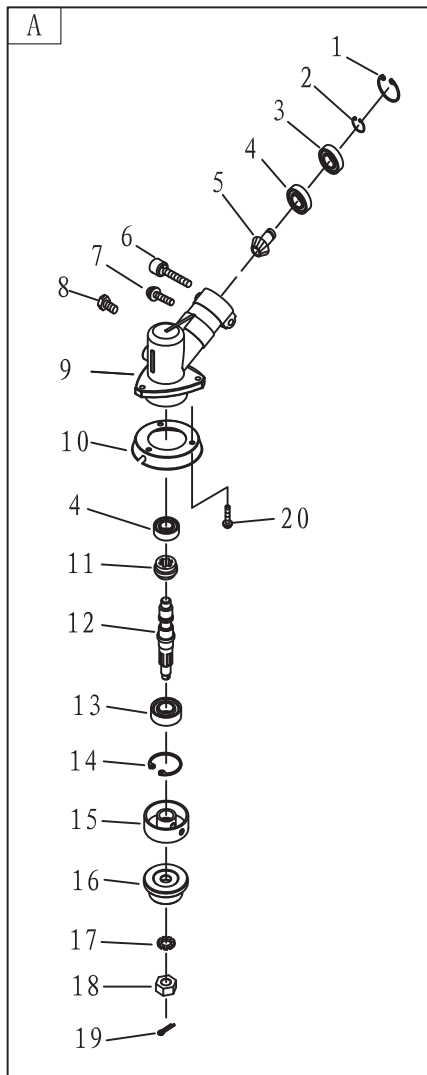


NO.	PART NO.	PART NAME	QTY.
A	CG415. 3	Gear Case Ass'y	
1	GB/T893. 2	Stop Ring 26	1
2	GB/T894. 1	Stop Ring 10	1
3	GB/T276	Bearing 6000-2RS/P6	1
4	GB/T276	Bearing 6000/P6	2
5	CG415D. 6-4	Pinion	1
6	GB/T70. 1+GB93	Screw M5×20	1
7	GB70+GB93+GB97	Screw M5×12	1
8	GB/T9074. 11	Bolt M5×12	1
9	BG305. 12. 4-4	Gear Case	1
10	BG305. 12. 4-9	Safety Guard	1
11	BG-328. 9. 5-2	Gear	1
12	CG305F. 1-1	Gear Shaft	1
13	GB/T276	Bearing 6002-2RS/P6	1
14	GB/T893. 2	Stop Ring 32	1
15	BG305. 12. 4-5	Holder A	1
16	CG305F. 1-3	Holder B	1
17	GB/T862. 1	Washer 10	1
18	CG305F. 1-4	Left Nut	1
19	GB/T91	Pin 2×16	1
20	GB/T9074. 4	Screw M5×12	3

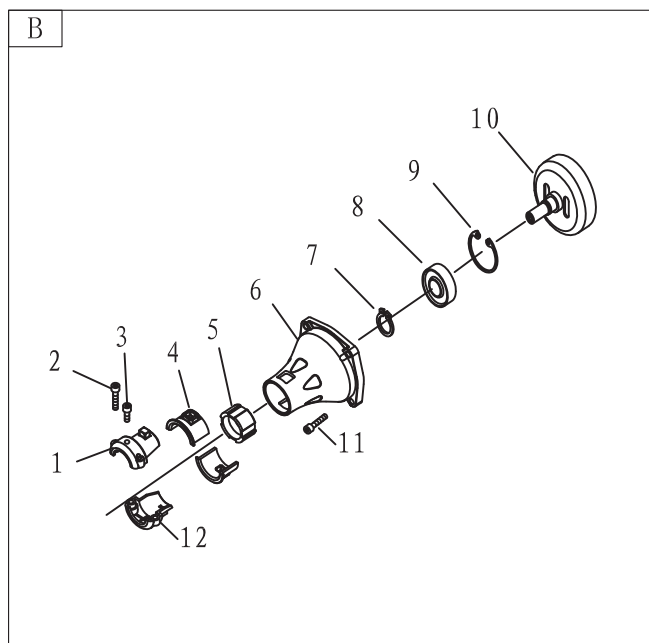


NO.	PART NO.	PART NAME	QTY.
B	CG330B-3E. 1	Clutch Comp.	1
1	CG330-E-GGP-1	Clamp A	1
2	GB/T70+GB93+GB97	Screw M5×20	2
3	GB/T70. 1	Screw M5×10	1
4	CG430H. 1-3	Rubber Cover A	2
5	CG330-E-GGP-3	Rubber Cover B	1
6	CG430H. 1-5	Linker	1
7	GB/T894. 1	Stop Ring 15	1
8	GB/T276	Bearing 6202-2RZ/P5	1
9	GB/T893. 1	Stop Ring 35	1
10	CG415D. 1. 1A	CLUTCH DRUM COMP.	1
11	GB70+GB93+GB97	Screw M6×25	4
12	CG330-E-GGP-2	Clamp B	1

BRUSHCUTTER MACHINE SPARE PARTS LIST ST-415


2/4

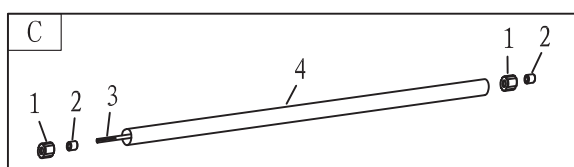

NO.	PART NO.	PART NAME	QTY.
C			
1	BG-328. 9. 4-5	Rubber Cover	3
2	BG-328. 9. 4-4	Oil-bearing	3
3	ST-415. 2-2	Drive Shaft	1
4	ST-415. 2-1	Pipe	1

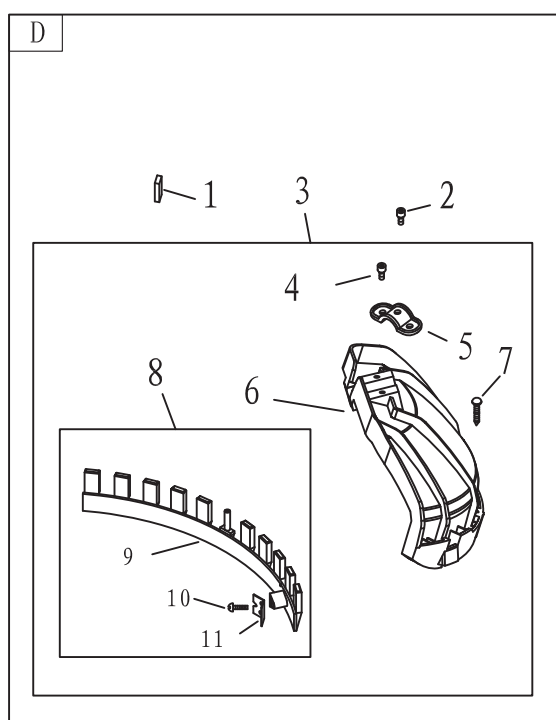


NO.	PART NO.	PART NAME	QTY.
D			
1	BC46-5	Blade Cover	1
2	GB/T70. 1	BOLT M5×10	1
3	BC36. 4	Guard Ass'y	1
4	BC36. 4-2	Screw M5×12	2
5	BC36. 4-1	Safety Guard Bracket	1
6	BC36. 4. 1	Safety Guard	1
7	GB/T845	Screw ST4. 2×16	1
8	BC46. 2. 2	Guard Ass'y	1
9	CG420. 7. 1. 1-1	Guard	1
10	GB/T845	Screw ST4. 2×16	2
11	BC46. 2. 2-1	Blade	1

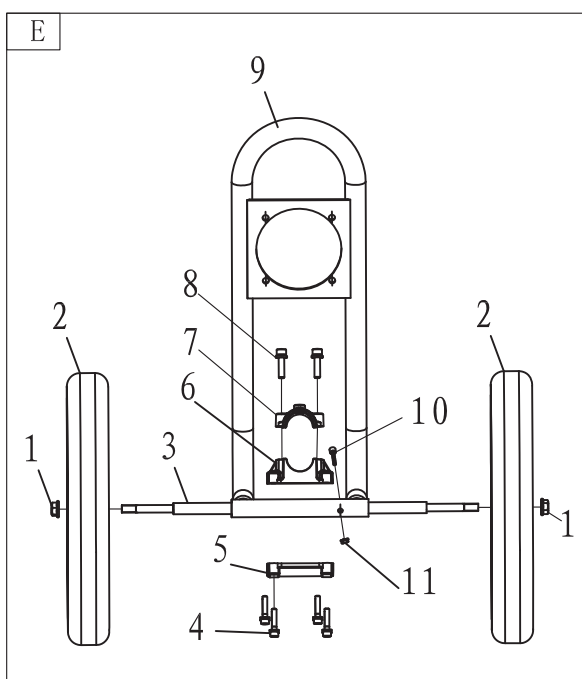


NO.	PART NO.	PART NAME	QTY.
E			
1	GB/T 6187. 1	NUT M8	2
2		WHEELS Ass'y	2
3	ST-415-2	WHEEL AXLE	1
4	BC36. 4-2+GB93+GB97	Bolt M5×25	4
5	CG415D-1	Cap, Upper	1
6	CG415-1	Bracket	1
7	CG415-2	Cap, Lower	1
8	BC36. 4-2+GB93+GB97	Screw M6×25	2
9	ST-415. 1	KICKSTAND	1
10	GB/T70. 1+GB/T93+GB/T97	Screw M5×30	1
11	GB/T 889. 1	NUT M5	1

BRUSHCUTTER MACHINE SPARE PARTS LIST ST-415


3/4

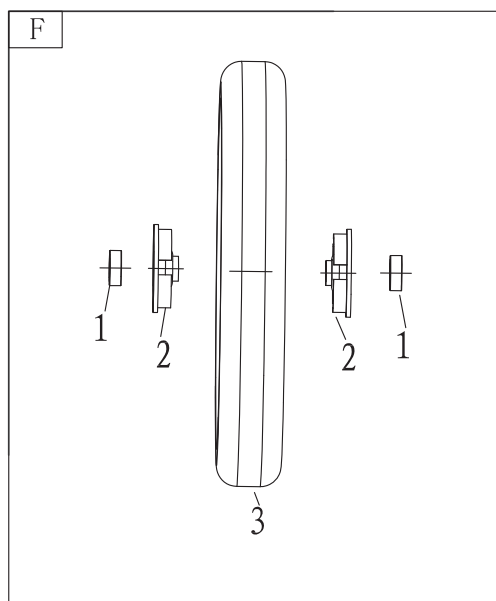


NO.	PART NO.	PART NAME	QTY.
F		WHEELS Ass'y	
1	GB/T276	Bearing 628-Z/P6	2
2	ST-415. 4-1	End Cap	2
3	ST-415. 5	WHEELS	1

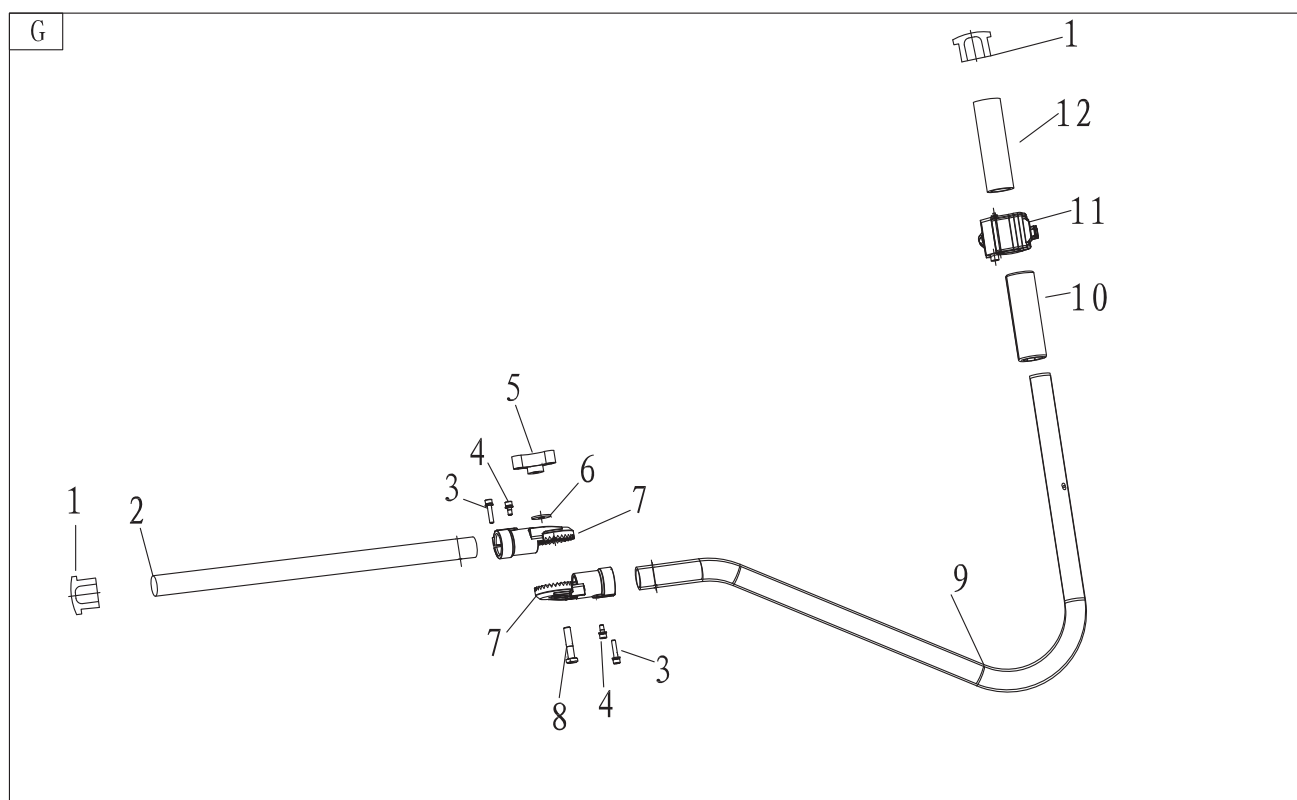


NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.
G		HANDLE ASS'Y		7	ST-415-4	Bracket	2
1	ST-415-1	Rubber Cover	2	8	GB/T 5782	Screw M8×40	1
2	ST-415-3	Pipe	2	9	ST-415-5	L-HANDLE	1
3	GB/T70.1+GB/T93+GB/T97	Screw M5×25	2	10	BG330H. 7-2	Grip	2
4	GB/T70.1+GB/T93+GB/T97	Screw M5×12	2	11	ST-415. 6	Lever ASS'Y	1
5	LOCKSCREW	XSS46B. 10	1	12	ST-415-6	Grip	1
6	WASHER	M8	1	13			

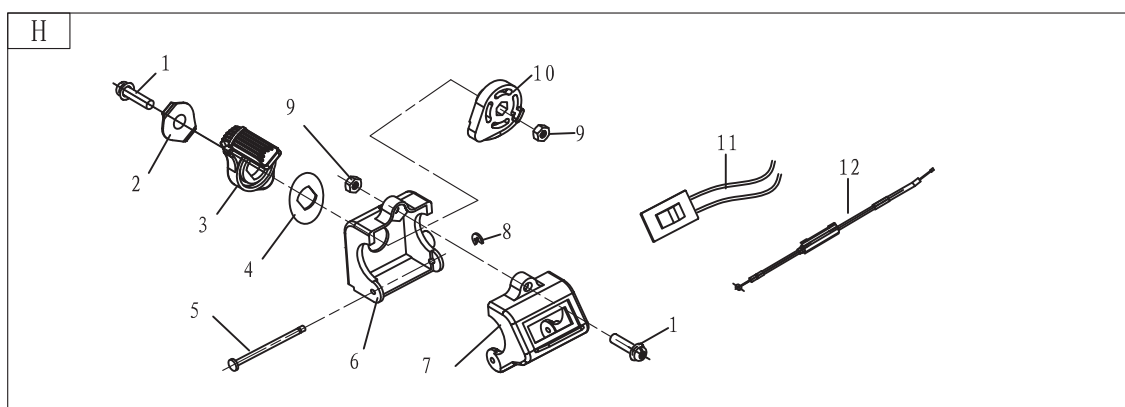

NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.
H	ST-415. 6	Lever ASS' Y					
1	GB/T9074. 4	Screw M5×20	2	7	BG330H. 7. 2-1	Box, Upper	1
2	BG330H. 7. 2-6	Washer	1	8	GB/T896	Stop Ring $\Phi 2.5$	1
3	BG330H. 7. 2-2	Throttle Lever	1	9	GB/T6170	Nut M5	2
4	BG330H. 7. 2-5	Gasket	1	10	BG330H. 7. 2-4	Throttle Lever	1
5	BG330H. 7. 2-7	Pin	1	11	ST-415. 6. 1	Stop Switch	1
6	BG330H. 7. 2-3	Box, Nether	1	12	ST-415. 6. 2	Throttle Wire	1

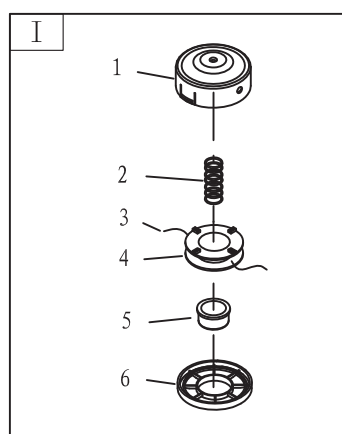

NO.	PART NO.	PART NAME	QTY.
I	CG520-HL. 1	Nylon Cutter Head	
1	CG520-HL. 1. 1	Case	1
2	CG520-HL. 17-3	Spring	1
3		Cord $\Phi 2.5 \times 2100$	2
4	CG520-HL. 17-2	Cord Holder	1
5	CG520-HL. 17-4	Cover	1
6	CG520-HL. 17-1	Cover	1

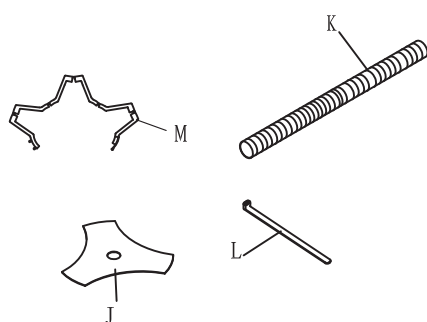

NO.	PART NO.	PART NAME	QTY.
J	CG420-2	Blade	1
K	$\Phi 12.5 \times 1280$	Tube	1
L	BG415-1B	Wire Clamp Band	2
M	CG420-3	Guard	1