


ESPLOSO
Decespugliatore Pro
3GC400


BRUSHCUTTER MACHINE SPARE PARTS LIST 3GC400

ASSEMBLY DRAMING OF ENGINE HP40A

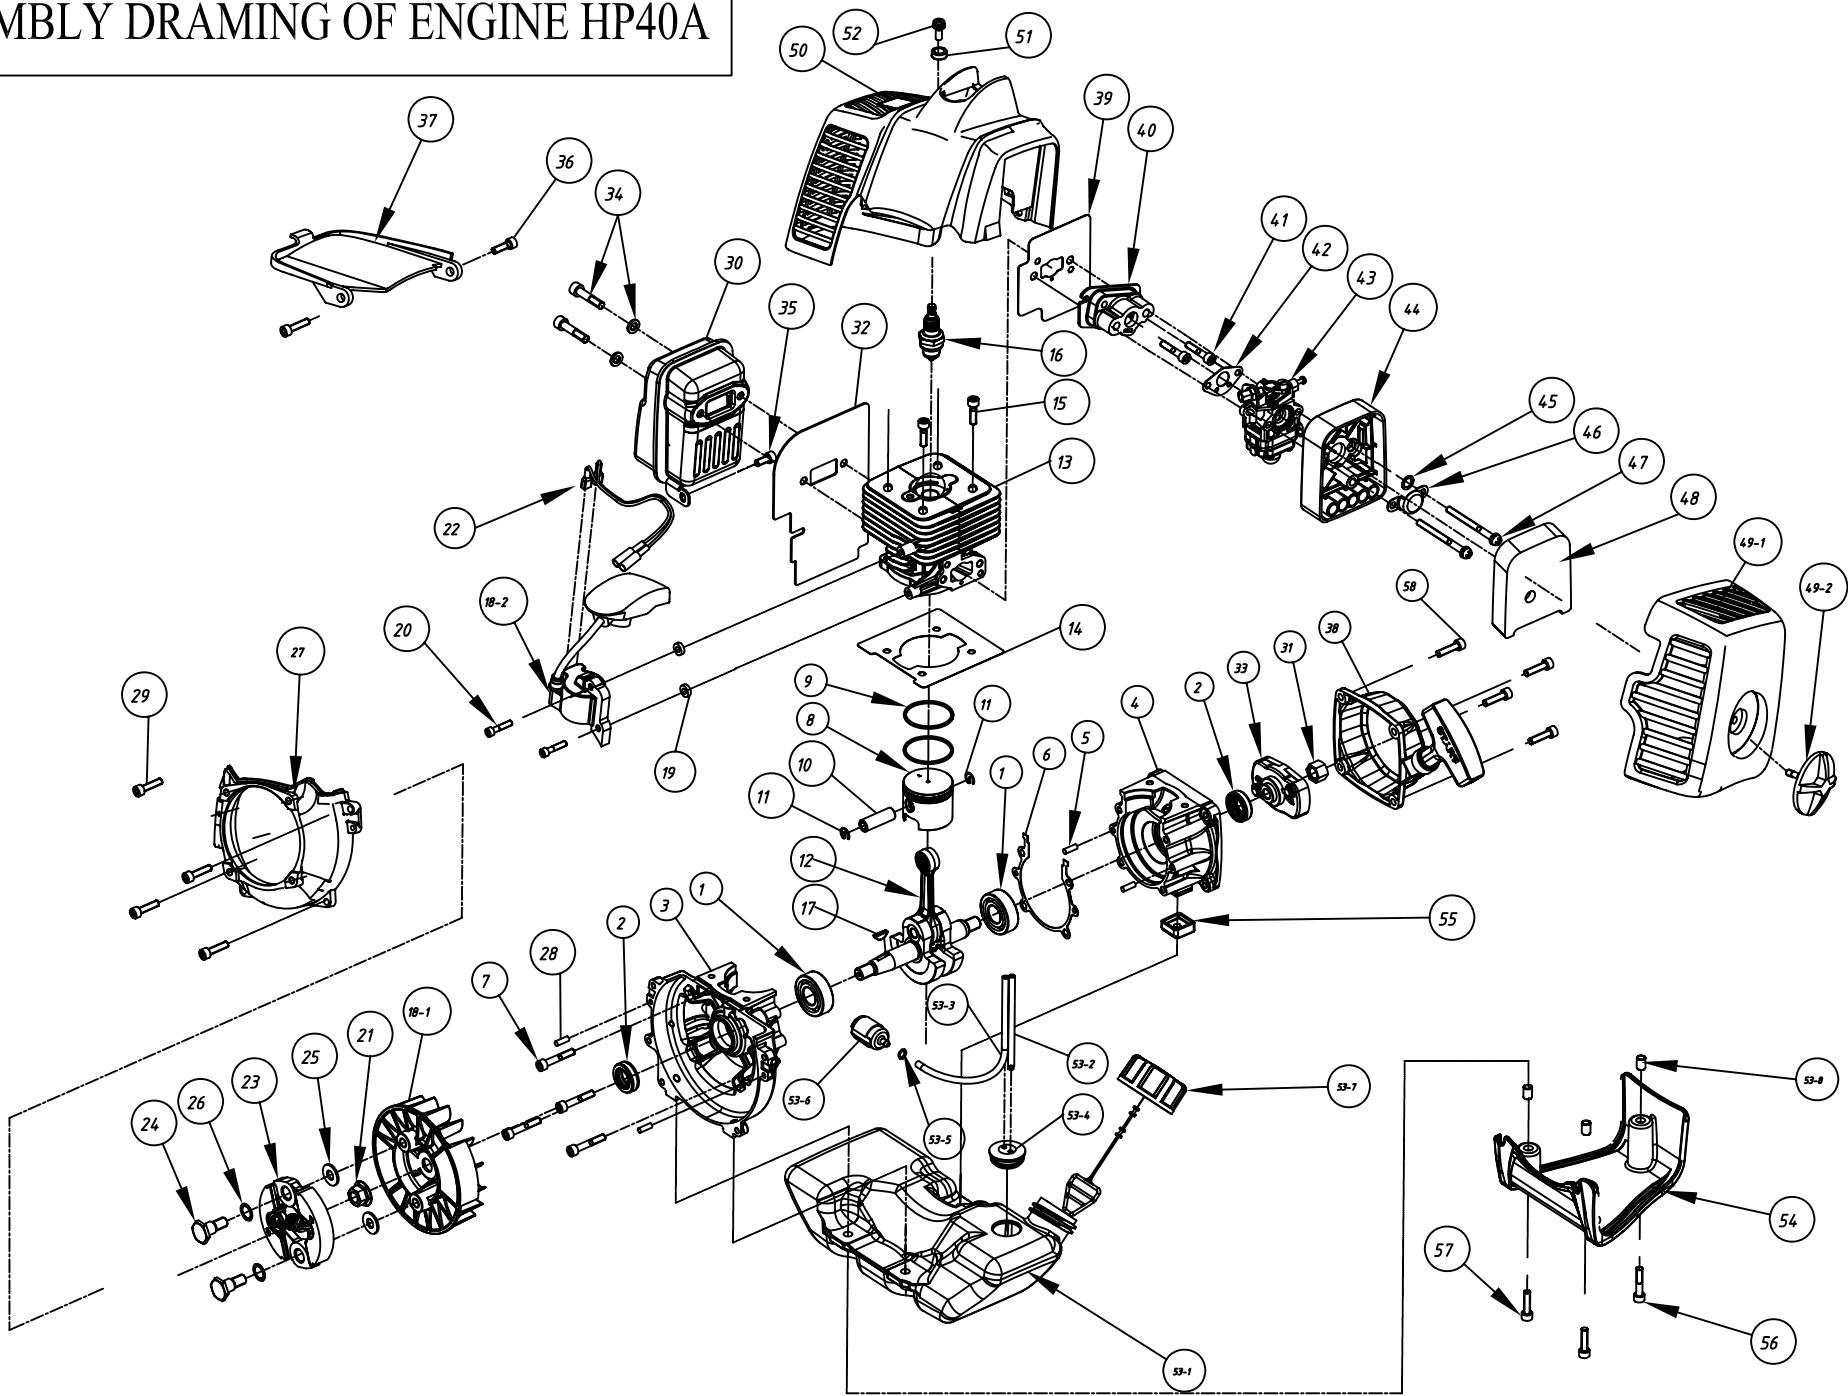


N0.	Part No.	Part Name	Qty.	N0.	Part No.	Part Name	Qty.	N0.	Part No.	Part Name	Qty.	N0.	Part No.	Part Name	Qty.
1	GB/T276	Bearing 6202/P4	2	23	1E40F-5A-YAT.2	Clutch assy	1	46	P40.1-3	Spit back shield	1				
2	1E36F.4	Oil seal	2	24	P40-1-2	Clutch bolt	2	47	GB70.1+GB97.1	Screw M5×55	2				
3	P40.11-1	Crank case F	1	25	1E36F-3	Clutch washerB	2	48	P40.1-2A	Air filter element	1				
4	P40.11-2	Crank case R	1	26	1E40F-5-11	Wave washer	2	49-1	HP40.1-1	Cover Cleaner	1				
5	GB/T119.1	Pin 4×h8×10	2	27	P40-1-1	Fan cover	1	49-2	1E48F.1.2	Knob cover	1				
6	P40.11-3	Gasket crank case	1	28	GB/T119.1	Pin 4h8×12	2	50	HP40.2	Top cover	1				
7	GB/T70.1	Screw M5×30	4	29	GB70.1+GB93+GB97	Screw M5×20	4	51	1E33F-4	Gasket	1				
8	P40.6-1	Piston	1	30	HP40A.1	Muffler ass'y	1	52	GB70.1+GB93+GB97	Screw M5×20	1				
9	P40.6-2	Ring piston	1	31	GB/T6173	Nut M10×1.25	1	53-1	P40.12-1	Fuel tank	1				
10	P40.6-3	Pin piston	1	32	P40-4	Gasket muffler	1	53-2	EB415.4.2-4	Pipe return	0.09m				
11	P40.6-4	Ring snap	2	33	P40.9	Guide Cover Ass'y	1	53-3	CG420.1.3.2-2	Pipe intake	0.23m				
12	P40.6.1	Crank shaft assy	1	34	GB70.1+GB848	Screw M6×20-12.9	2	53-4	P40.12.2-1	Grommet	1				
13	P40-3	Cylinder	1	35	GB70.1+GB93+GB97	Screw M5×12	1	53-5	P40.12.2-2	Clip pipe	1				
14	P40-6	Gasket cylinder	1	36	GB70.1+GB93+GB97	Screw M5×16	1	53-6	ET25	Filter Assy	1				
15	GB/T70.1	Screw M5×18	4	37	HP40-1	Clapboard	1	53-7	P40.12.1	Tank cap assy	1				
16	BPMR6A	Spark plug	1	38	P40.10	Starter	1	53-8	P40.12-2	Collar C	1				
17	GB/T1099	Key 3×13×5	1	39	P40-2	Gasket insulator	1	54	P40-8	Engine stand	1				
18-1	HP40A.3.1	Rotor magnet	1	40	P40.3	Insulator	1	55	P40-9	Spacer fuel tank	1				
18-2	HP40A.3.2	IG coil	1	41	GB70.1+GB93+GB97	ScrewM5×25	2	56	GB70.1+GB93+GB97	Screw M5×25	1				
19	P40-5	Spacer Ig coil	2	42	P40-11	Gasket carburetor	1	57	GB70.1+GB93+GB97	Screw M5×20	2				
20	GB70.1+GB93+GB97	Screw M4×20	2	43	1E34F-2E.1A-ALK0	Carburetor	1	58	GB70.1+GB93+GB97	Screw M5×20	4				
21	GB/T6187.2	Nut M10×1.25	1	44	P40.1.2	Cleaner body	1								
22	HP33.3.2	Wire lead assy	1	45	P40-10	Wave washer 8	2								


BRUSHCUTTER MACHINE SPARE PARTS LIST 3GC400

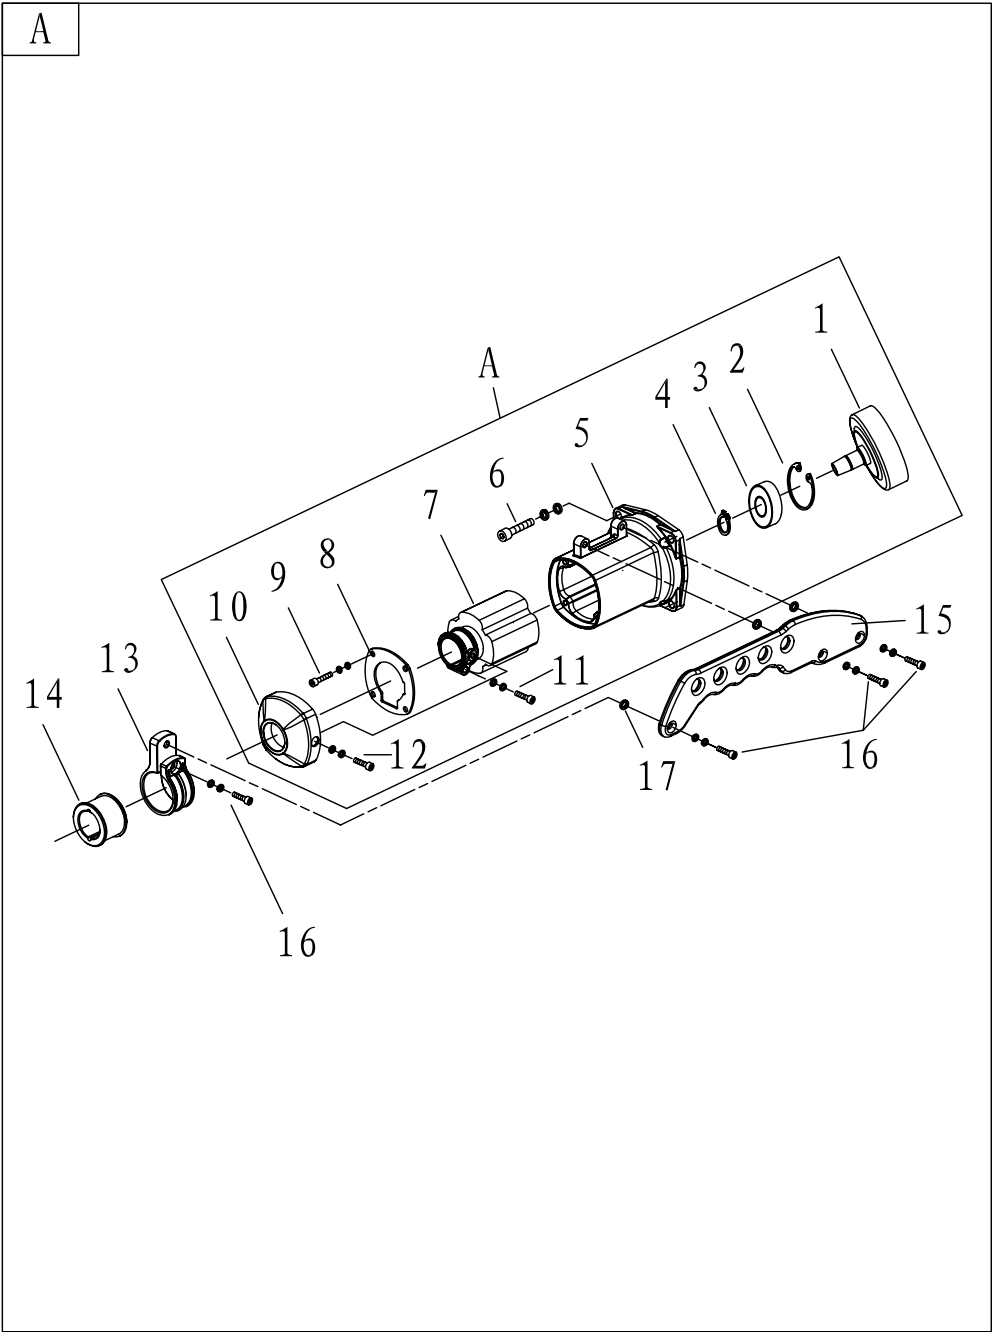

NO.	PART NO.	PART NAME	QTY.
A	3GC330B. 1	Clutch Comp.	1
1	3GC330B. 1. 1	Clutch Drum Comp.	1
2	GB/T893. 1	Stop Ring 40	1
3	GB/T276	Bearing 6203-2RS	1
4	GB/T894. 1	Stop Ring 17	1
5	3GC330B. 1-1	Clutch Case	1
6	GB70+GB93+GB97	Screw M6×20	4
7	3GC330B. 1. 2	Linker	1
8	3GC330B. 1-2	Washer	1
9	GB70+GB93+GB97	Screw M5×20	4
10	3GC330B. 1-3	Cover	1
11	GB70+GB93+GB97	Screw M5×25	1
12	GB70+GB93+GB97	Screw M5×14	1
13	3GC330B. 3-1	Hang Ring	1
14	3GC330B. 3-2	Damping Cushion	1
15	3GC330B. 6	Hang Handle	1
16	GB70. 1+GB93+GB848	Screw M6×20	4
17	CG430H-BSMU-1	Washer	3

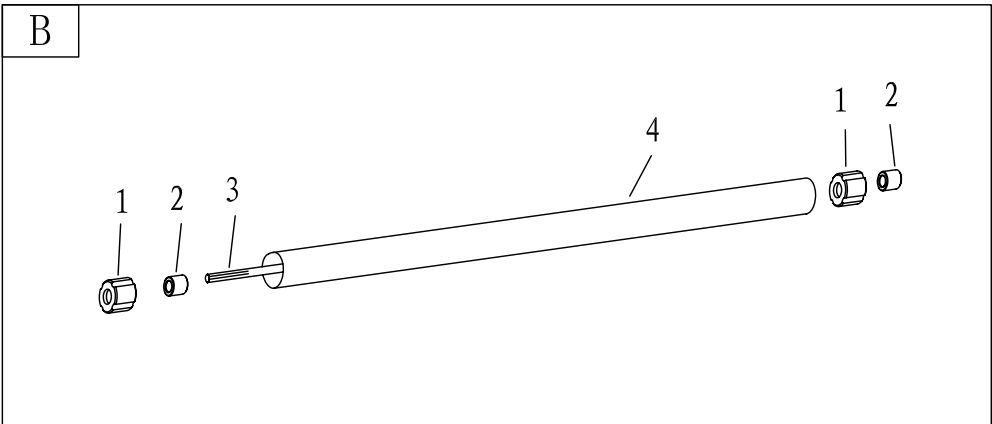


NO.	PART NO.	PART NAME	QTY.
B	3GC330B. 2	Pipe Comp.	1
1	3GC330B. 2-4	Rubber Cover	6
2	3GC330B. 2-3	Oil-bearing	6
3	3GC330B. 2-2A	Drive Shaft	1
4	3GC330B. 2-1	Pipe	1

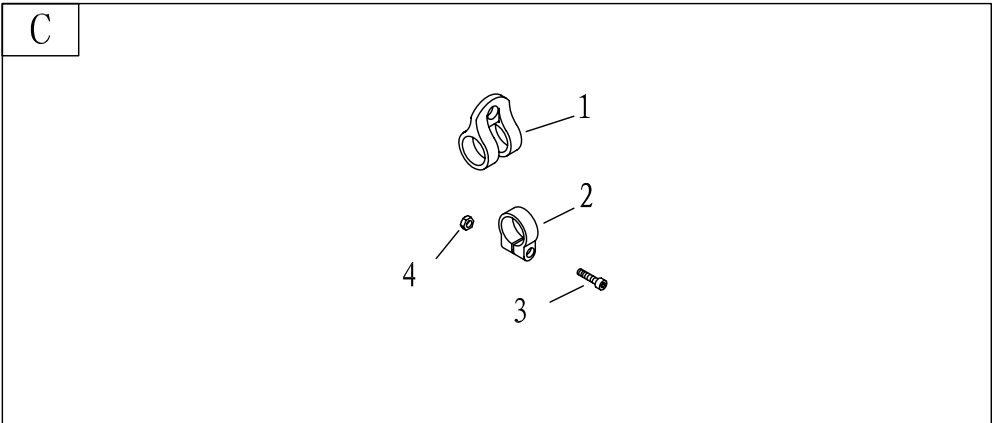


NO.	PART NO.	PART NAME	QTY.
C	CG420. 3	Holder Ass'y	1
1	CG420. 3. 1	Harness Clamp	1
2	CG420. 3-1	Clamp	1
3	GB/T70. 1	Screw M5×20	1
4	GB/T889. 1	Nut M5	1

BRUSHCUTTER MACHINE SPARE PARTS LIST 3GC400


2/3

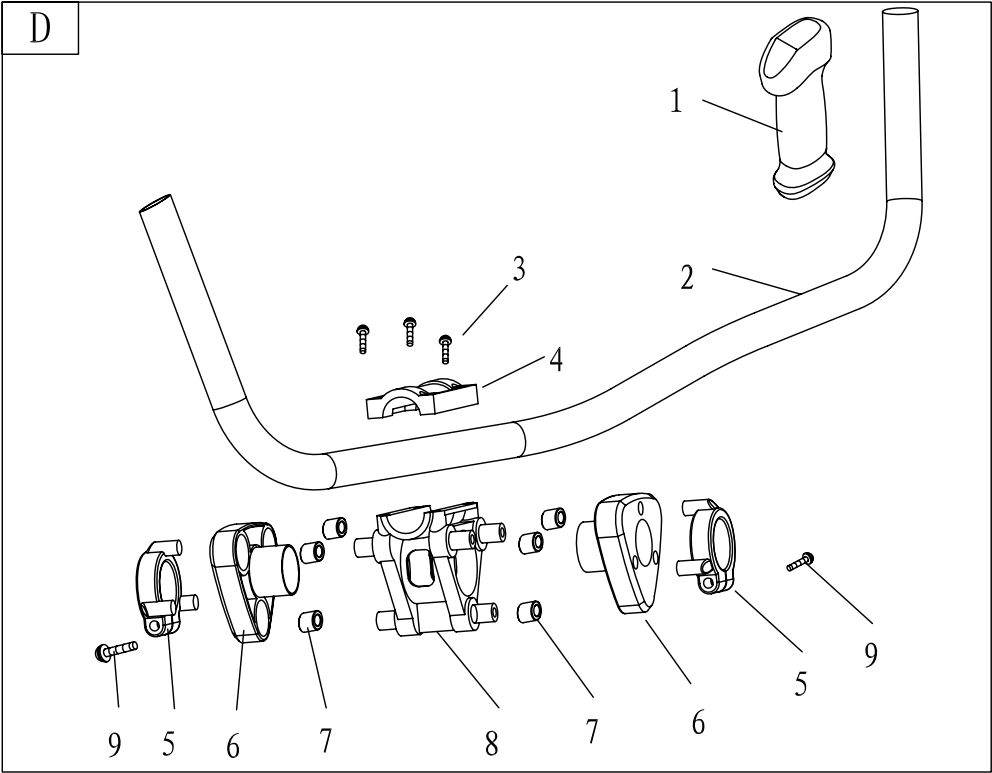

NO.	PART NO.	PART NAME	QTY.
D			
1	3GC520-9	Rubber Ringer	1
2	CG330-E-GGP-5	HANDGRIP	1
3	BC36. 4-2+GB93+GB97	Screw M5×25	4
4	CG63. 4-4	CAP, UPPER	1
5	CG63. 4-1	Clamp Ring	2
6	CG63. 4-2	Linker	2
7	CG63. 4-3	Rubber	6
8	CG63. 4-5	Cap, Lower	1
9	GB70+GB93+GB97	Screw M5×25	2

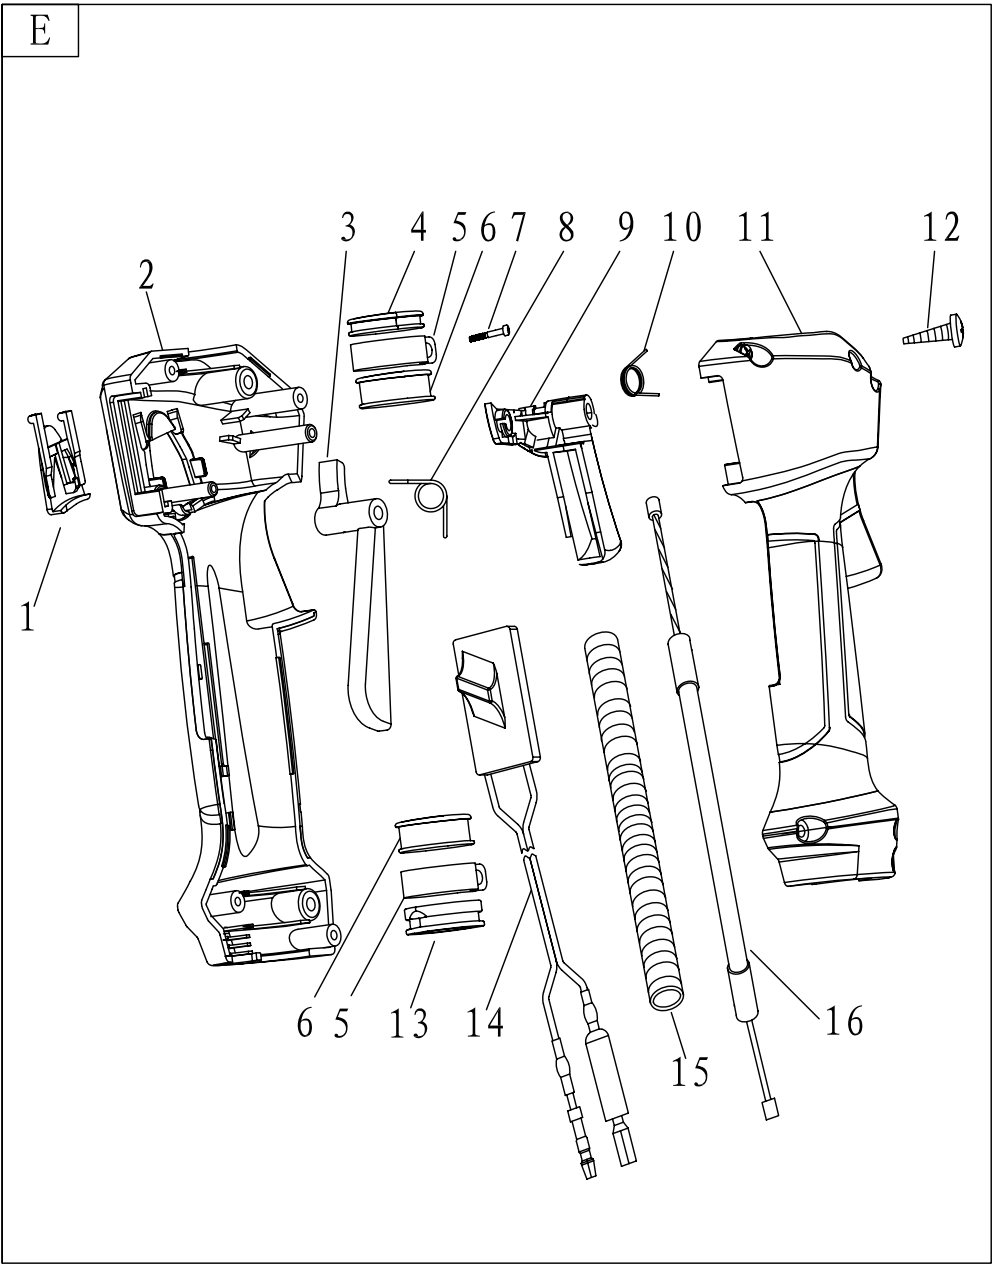


NO.	PART NO.	PART NAME	QTY.
E	3GC520. 2	Lever Ass 'y	
1	3GC520. 2-4	Button	1
2	3GC520. 2. 1	Box, Left	1
3	3GC520. 2-3	Handgrip	1
4	CG330-E-GGP. 2-1	Rubber, Seal	1
5	CG260A-E-GGP. 1-5	Clamp	2
6	CG330-E-GGP. 2-4	Rubber Ring	2
7	GB70. 1	Screw M5×12	2
8	3GC520. 2-5	Spring	1
9	3GC520. 2-2	Handgrip	1
10	3GC520. 2-6	Spring	1
11	3GC520. 2-1	Box, Right	1
12	GB845 ST3. 5×16	Screw ST3. 5×16	4
13	CG330-E-GGP. 2-2	Rubber Ring	1
14	3GC520. 2. 2	Stop Button Comp.	1
15	BG-328A-2	Tube	1
16	3GC520. 2. 3	Cable Comp.	1

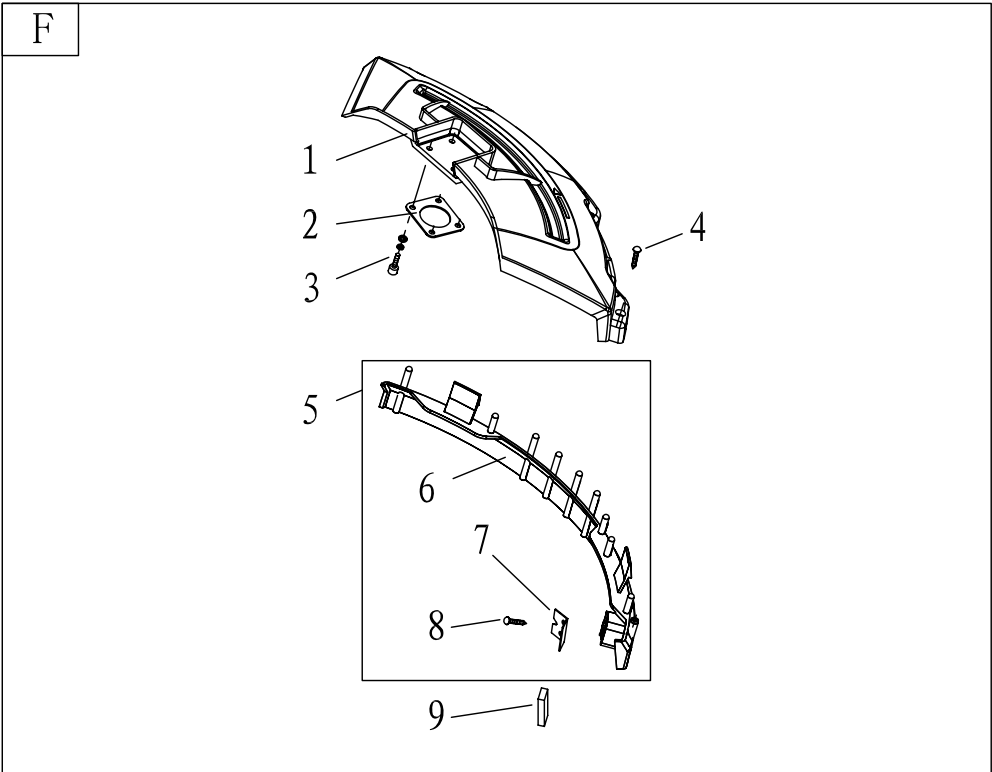


NO.	PART NO.	PART NAME	QTY.
F	3GC330B. 5	Guard Ass' y	1
1	3GC330B. 5-1	Safety Guard	1
2	3GC330B. 5-2	Washer	1
3	BC36. 4-2+GB93+GB97	Screw M5×25	4
4	GB/T845	Screw ST4. 2×16	1
5	3GC520. 3. 1	Guard Ass' y	1
6	3GC520. 3. 1-1	Guard	1
7	BC46. 2. 1-1	Blade	1
8	GB/T845	Screw ST4. 2×16	2
9	BC46-5	Blade Cover	1

BRUSHCUTTER MACHINE SPARE PARTS LIST 3GC400


3/3

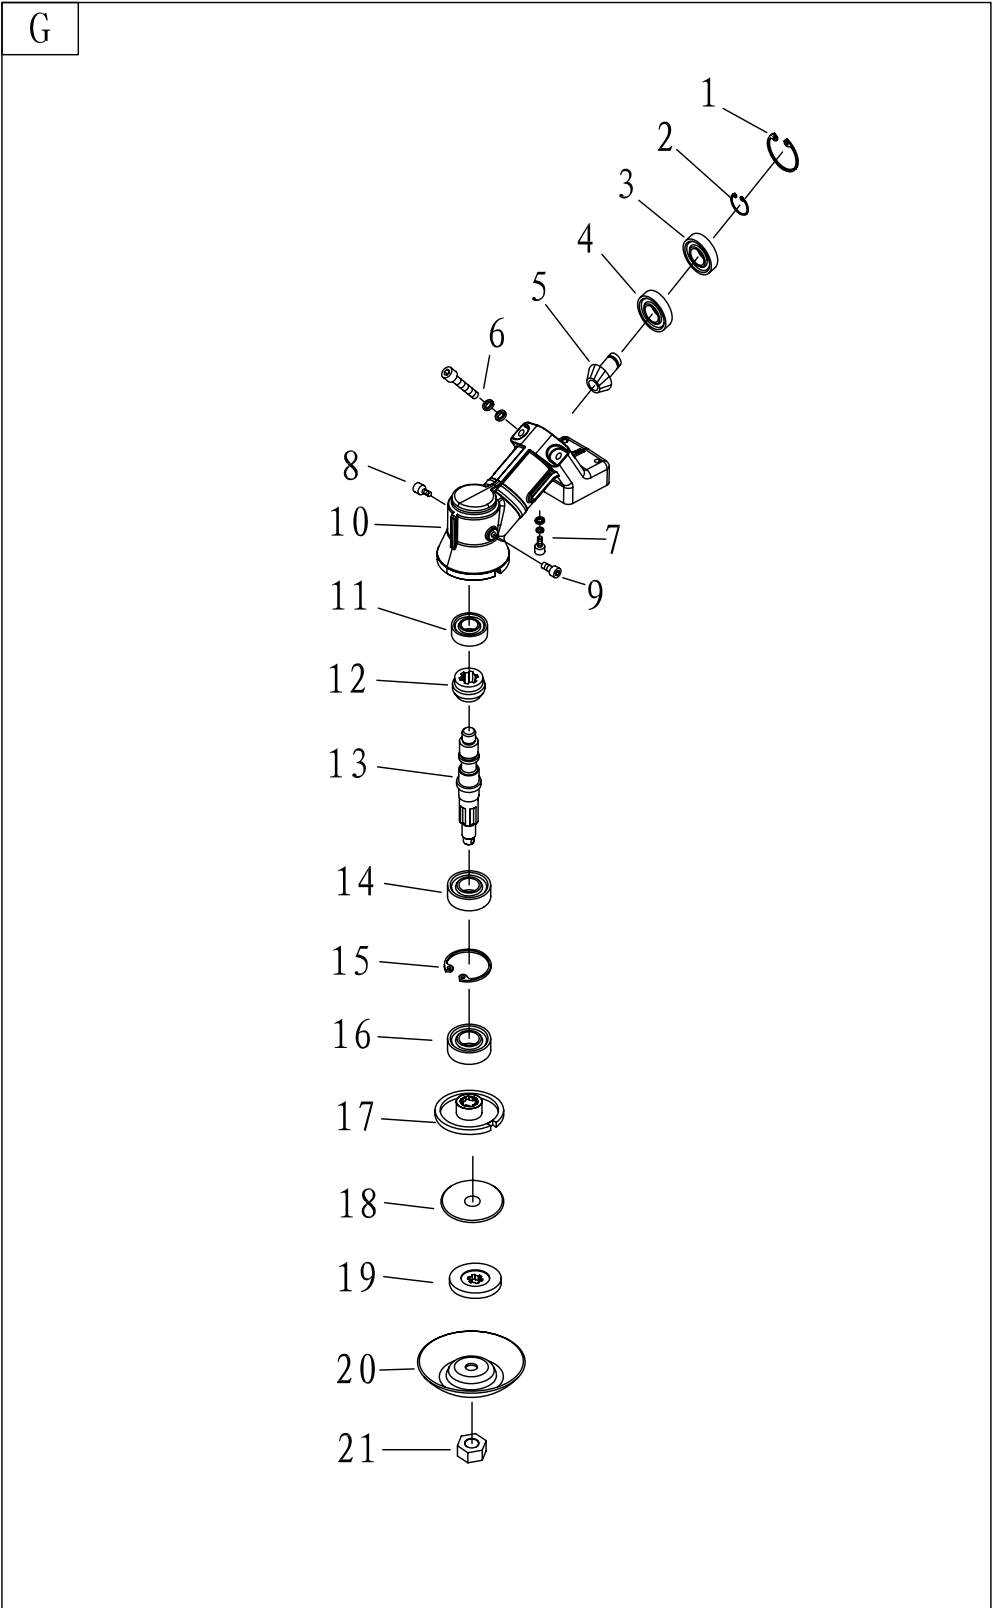

NO.	PART NO.	PART NAME	QTY.
A	3GC330B. 4	Gear Case Ass'y	
1	GB/T893. 2	Stop Ring 28	1
2	GB/T894. 1	Stop Ring 12	1
3	GB/T276	Bearing 6001-2RS	1
4	GB/T276	Bearing 6001	1
5	BG63. 5-2	Pinion	1
6	GB/T70. 1+GB/T93+GB/T97	Screw M6×25	2
7	GB/T70. 1+GB/T93+GB/T97	Screw M5×12	1
8	GB/T70. 1	Screw M5×8	1
9	GB/T70. 1	Bolt M6×8	1
10	3GC330B. 4-1	Gear Case	1
11	GB/T276	Bearing 6000/P5	1
12	BG63. 5-3	Gear	1
13	3GC330B. 4-2	Gear Shaft	1
14	GB/T276	Bearing 6202-2RS	1
15	GB/T893. 2	Stop Ring 35	1
16	BG63. 5. 1	Oil-seal	1
17	BG63. 5-8	Holder A	1
18	BG63. 5-5	Washer	1
19	BG63. 5-6	Holder B	1
20	BG63. 5-7	Cover	1
21	BG63. 5-9	Nut	1

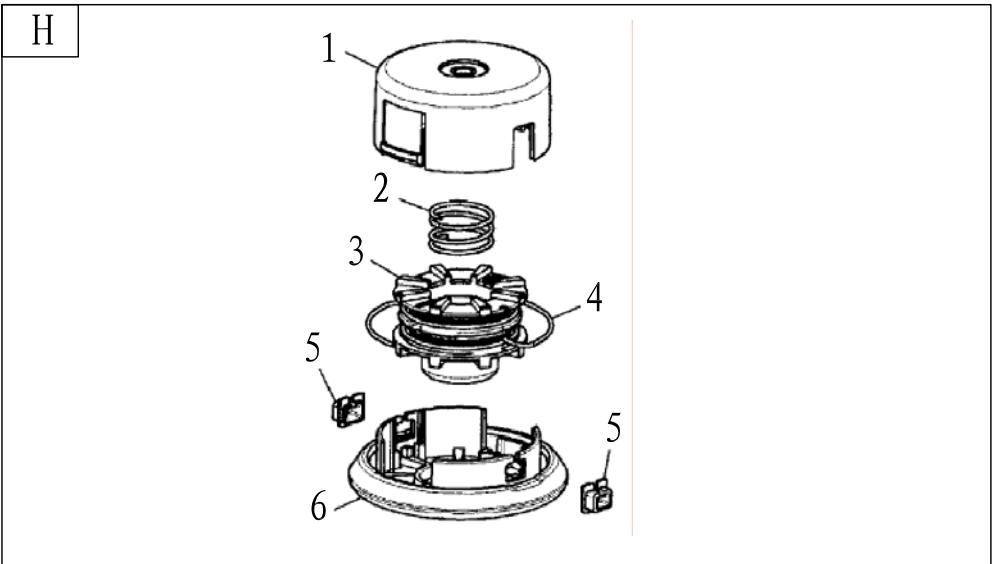

NO.	PART NO.	PART NAME	QTY.
H	BG63. 10	Nylon Cutter Head	
1	BG63. 10. 1	Case	1
2	BG63. 10-1	Spring	1
3	BG63. 10. 3	Cord Holder	1
4		Cord ϕ 2. 5×5000	1
5	BG63. 10. 2-2	Cord Cover	2
6	BG63. 10. 2-1	Cover	1

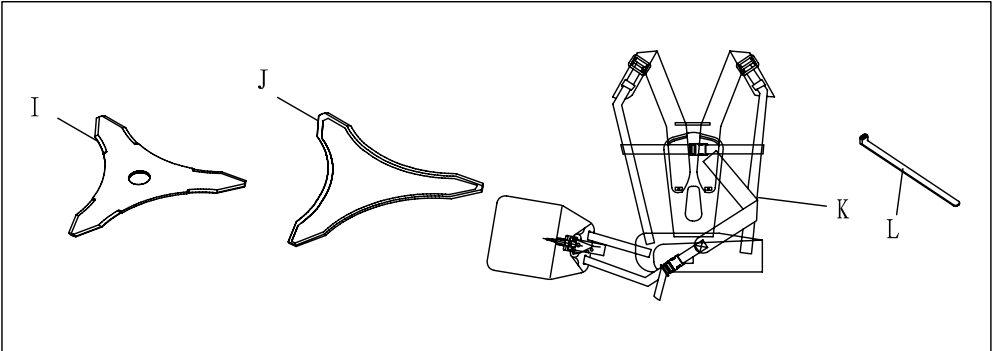

NO.	PART NO.	PART NAME	QTY.
I	CG520-HL-2	Blade	1
J	CG520-HL-3	Blade Cover	1
K	BC46. 3	Harness Ass'y	1
L	BG415-1B	Wire Clamp Band	1