



**ESPLOSO**  
**Generatore**  
**KS1000i**

| 序号<br>NO. | 品号                       | 图号<br>DRAWING NUMBER | 名称<br>DESCRIPTION                                | 数量<br>AMOUNT | HS1000i 零部件分解图 COMPONENTS DECOMPOSITION MAP |
|-----------|--------------------------|----------------------|--------------------------------------------------|--------------|---------------------------------------------|
| 1         |                          | HS1000i.5            | 空滤器维护盖组<br>AIR FILTER COVER ASSEMBLY             | 1            |                                             |
| 2         |                          | HS1000i.7            | 消音器盖组<br>SILENCER COVER ASSEMBLY                 | 1            |                                             |
| 3         | 99000028                 | HS1200i.1.F1         | 发动机组<br>ENGINE                                   | 1            |                                             |
| 4         |                          | HS1000i.2            | 油箱组件<br>FUEL TANK ASSEMBLY                       | 1            |                                             |
| 5         |                          | HS1000i.4            | 右箱盖组件<br>RIGHT BOX COVER ASSEMBLY                | 1            |                                             |
| 6         | 50006179                 | GB/T 9074.4          | 螺钉组合件M6x20<br>SCREW ASSSEMBLY M6x20              | 2            |                                             |
| 7         |                          | HS1000i.6            | 火花塞维护盖组<br>MAINTENANCE SPARK PLUG COVER ASSEMBLY | 1            |                                             |
| 8         | 50006178                 | HS1000i-6            | 动力安装螺钉M6x100<br>INSTALL SCREWS ENGINE            | 2            |                                             |
| 9         | 50006177                 | GB/T 96              | 垫圈 6<br>FLAT GASKET 6                            | 2            |                                             |
| 10        |                          | HS1000i.8            | 前面板组<br>FRONT PANEL ASSEMBLY                     | 1            |                                             |
| 11        |                          | HS1000i.9            | 控制面板组件<br>CONTROL PANEL ASSEMBLY                 | 1            |                                             |
| 12        |                          | HS1000i.10           | 逆变器组<br>INVERTER ASSEMBLY                        | 1            |                                             |
| 13        |                          | HS1000i.3.2          | 油开关组件<br>FUEL SEITCH ASSEMBLY                    | 1            |                                             |
| 14        |                          | HS1000i.3            | 左箱盖组件<br>LEFT BOX COVER ASSEMBLY                 | 1            |                                             |
| 15        | 50006174                 | GB/T 9074.4          | 螺钉组合件 M5x10<br>SCREW ASSSEMBLY M5x10             | 1            |                                             |
| 16        |                          | HS1000i.11           | 包装箱部件<br>PACKING BOX PARTS                       | 1            |                                             |
| 附         | 易损件明细 WEARING PARTS LIST |                      |                                                  |              |                                             |


|     |          |             |                                                                   |   |
|-----|----------|-------------|-------------------------------------------------------------------|---|
| 1   |          | HS1000i.5   | 空滤器维护盖组<br>AIR FILTER COVER ASSEMBLY                              |   |
| 1-1 | 60001838 | HS1000i-1   | 空滤器维护盖螺钉<br>AIR FILTER COVER SCREW                                | 1 |
| 1-2 | 60002411 | HS1000i.5-1 | 空滤器维护盖<br>AIR FILTER COVER                                        | 1 |
| 1-3 | 60001841 | HS1000i.5-3 | 空滤器维护盖海绵（下周）<br>AIR FILTER COVER SPONGE(BELOW THR<br>SURROUNDING) | 1 |
| 1-4 | 60001840 | HS1000i.5-2 | 空滤器维护盖海绵（顶部）<br>AIR FILTER COVER SPONGE(TOP)                      | 1 |
| 1-5 | 40003128 | HS1000i.5-4 | 空滤器维护盖吸声绵<br>AIR FILTER COVER SPONGE(TOP)                         | 1 |

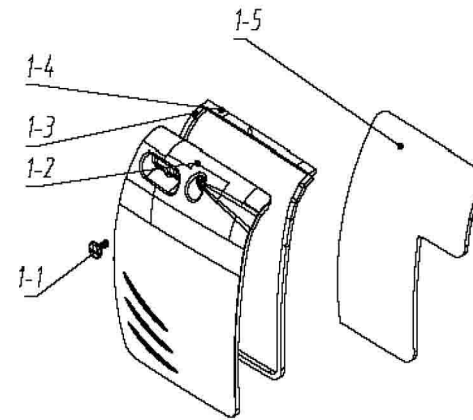


|     |          |             |                                   |   |
|-----|----------|-------------|-----------------------------------|---|
| 2   |          | HS1000i.7   | 消音器盖组<br>SILENCER COVER ASSEMBLY  |   |
| 2-1 | 50006181 | GB/T 9047.4 | 组合螺钉M5x20<br>SCREW ASSEMBLY M5x20 | 1 |
| 2-2 | 40002695 | HS1000i.7.1 | 消音器盖<br>SILENCER COVER            | 1 |
| 2-3 | 40002696 | HS1000i.7-2 | 消音器盖胶条<br>SILENCER COVER STRIP    | 2 |

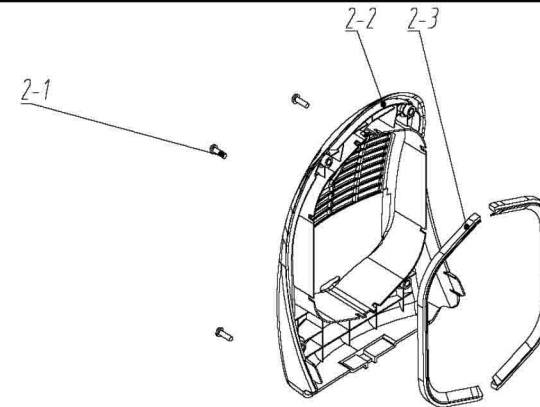


|     |          |                |                                           |   |
|-----|----------|----------------|-------------------------------------------|---|
| 4   |          | HS1000i.2      | 油箱组件<br>FUEL TANK ASSEMBLY                |   |
| 4-1 | 40002683 | HS1000i.2.1-1  | 油箱<br>FUEL TANK                           | 1 |
| 4-2 | 40002685 | HS1000i.2.1.2  | 油位过滤器<br>FUEL FILTER                      | 1 |
| 4-3 | 40003100 | HS1000i.2-1    | 油箱导油胶套<br>TANK FUEL GUIDING RUBBER SLEEVE | 1 |
| 4-4 | 40002684 | HS1000i.2.1.1  | 油箱盖组件<br>CAP COMP.,FUEL FILLER            | 1 |
| 4-5 | 50000892 | GB/T 896       | 挡圈9<br>SPLIT WASHER 9                     | 1 |
| 4-6 | 40003843 | 160FLA.5.6.1-1 | 汽油滤芯<br>FUEL FILTER                       | 1 |
| 4-7 | 60002364 | 160FLA.5.6-3   | 油管卡A<br>FUEL TUBE CLIP A                  | 1 |

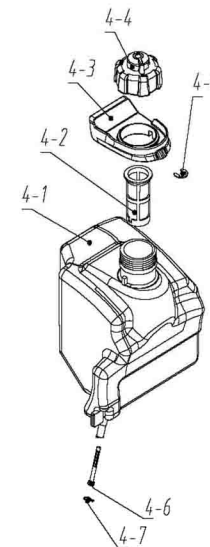


|     |          |             |                                                        |   |
|-----|----------|-------------|--------------------------------------------------------|---|
| 5   |          | HS1000i.4   | 右箱盖组件<br>RIGHT BOX COVER ASSEMBLY                      |   |
| 5-1 | 60001836 | HS1000i.4-1 | 左右合箱盖海绵 (底部)<br>THE LEFT AND RIGHT BOX SPONGE (BOTTOM) | 1 |
| 5-2 | 50005694 | HS1000i-7   | 簧片螺母<br>SPRING NUT                                     | 2 |
| 5-3 | 40003609 | HS1000i.4.1 | 右箱盖组件<br>RIGHT BOX COVER ASSEMBLY                      | 1 |
| 5-4 | 50006179 | GB/T 9074.4 | 螺钉组合件M6x20<br>SCREW ASSSEMBLY M6x20                    | 2 |
| 5-5 | 40002692 | HS1000i.3.5 | 整机脚胶<br>SUPPORT RUBBER                                 | 2 |
| 5-6 | 50006186 | QC/T 340    | 螺栓M6x16<br>BOLT M6X16                                  | 2 |
| 5-7 | 40002694 | HS1000i.4-3 | 逆变器及油箱右胶套<br>RIGHT RUBBER SLEEVE                       | 1 |

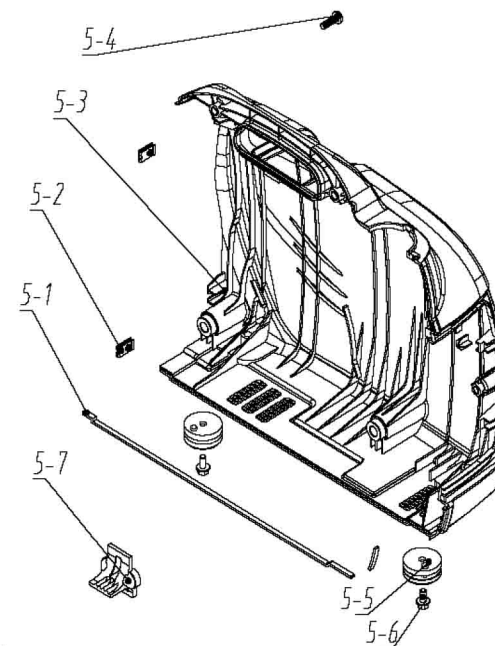


|     |          |             |                                                         |   |
|-----|----------|-------------|---------------------------------------------------------|---|
| 7   |          | HS1000i.6   | 火花塞维护盖组<br>MAINTENANCE SPARK PLUG COVER ASSEMBLY        |   |
| 7-1 | 60002412 | HS1000i.6-1 | 火花塞维护盖<br>MAINTENANCE SPARK PLUG COVER                  | 1 |
| 7-2 | 50006175 | GB/T 837    | 螺钉M5x16<br>PHILIPS SCREW M5x16                          | 1 |
| 7-3 | 60001843 | HS1000i.6-2 | 火花塞维护盖海绵<br>MAINTENANCE SPARK PLUG COVER SPONGE         | 1 |
| 7-4 | 60001844 | HS1000i.6-3 | 火花塞维护盖海绵 (顶部) MAINTENANCE SPARK PLUG COVER SPONGE (TOP) | 1 |
| 7-5 | 40003340 | HS1000i.6-4 | 火花塞维护盖吸声棉<br>MAINTENANCE SPARK PLUG COVER SPONGE        | 1 |

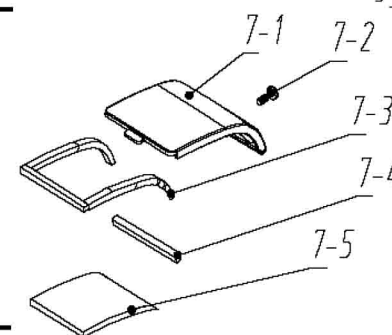



|      |          |               |                                                         |   |
|------|----------|---------------|---------------------------------------------------------|---|
| 10   |          | HS1000i.8     | 前面板组<br>FRONT PANEL ASSEMBLY                            |   |
| 10-1 | 40002881 | HS1000i.8-1   | 前面板<br>FRONT PANEL                                      | 1 |
| 10-2 | 40002698 | HS1000i.8-2   | 前面板海绵<br>FRONT PANEL SPONGE                             | 1 |
| 10-3 | 50005685 | HS1000i-2     | 十字槽圆头轴位螺钉<br>CROSS RECESSED CHEESE HEAD SHOULDER SCREWS | 4 |
| 10.4 | 50006687 | HS1000i.8-3KZ | 面板贴花 中文<br>PANEL DECALS                                 | 1 |

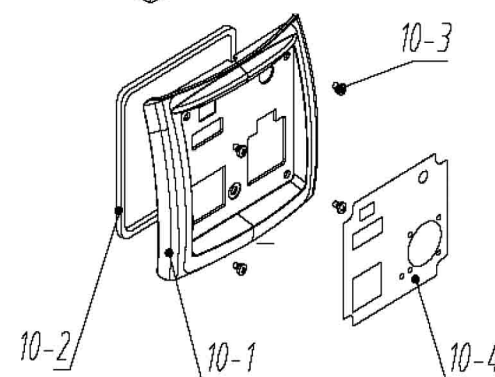


|       |          |                |                                             |   |
|-------|----------|----------------|---------------------------------------------|---|
| 11    |          | HSG1000i.1     | 控制面板组件<br>CONTROL PANEL ASSEMBLY            |   |
| 11-1  | 40002862 | HS1000i.9.2    | 交流插座<br>AC SOCKET                           | 1 |
| 11-2  | 50006180 | GB/T 819.1     | 沉头螺钉 M4x10<br>CHAMFER HEAD SCREW M4x10      | 4 |
| 11-3  | 40003032 | HS1000i.9.9.4  | 交流线束<br>AC OUTPUT WIRING HARNESS            | 1 |
| 11-4  | 60002147 | HS1000i.9.5    | 节能开关<br>ENERGY SAVING SWITCH                | 1 |
| 11-5  | 50000878 | GB/T 93        | 弹性垫圈 5<br>SPRING GASKET 5                   | 1 |
| 11-6  | 50005692 | GB/T 95        | 垫圈 5<br>FLAT GASKET 5                       | 1 |
| 11-7  | 50005691 | GB/T 862.1     | 齿形垫圈 5<br>TOOTH GASKET 5                    | 1 |
| 11-8  | 50003806 | GB/T 6170      | 螺母 M5<br>NUT M5                             | 1 |
| 11-9  | 50005679 | GB/T 96        | 垫圈 5<br>FLAT GASKET 5                       | 1 |
| 11-10 | 40003096 | HS1000i.9.3    | T型直流插座 (不带灯)<br>T TYPE DC SOCKET            | 1 |
| 11-11 | 40003775 | HS1000i.9.1    | 电器安装板焊合 白锌<br>ELECTRICAL INSTALLATION PLATE | 1 |
| 11-12 | 40003031 | HS1000i.9.9.3  | 保护地线束<br>PROTECTIVE GROUND WIRE HARNESS     | 1 |
| 11-13 | 40003033 | HS1000i.9.9.5  | 交流插座地线束<br>AC SOCKET EARTHING WIRE HARNESS  | 1 |
| 11-14 | 40003098 | HS1000i.9.9.2A | 主线束<br>PRINCIPAL WIRE BUNDLE                | 1 |
| 11-15 | 50006176 | GB/T 9074.4    | 螺钉组合件 M4x10<br>SCREW ASSSEMBLY M4x10        | 4 |
| 11-16 | 50005689 | GB/T 862.1     | 齿形垫圈 4<br>TOOTH GASKET 4                    | 4 |
| 11-17 | 50006172 | GB/T 9074.4    | 螺钉组合件M5x16<br>SCREW ASSSEMBLY M5x16         | 1 |
| 11-18 | 60002311 | HS1000i.9.7    | 点火控制器<br>IGNITION CONTROLLER                | 4 |
| 11-19 | 50006181 | GB/T 9074.4    | 螺钉组合件M5x20<br>SCREW ASSSEMBLY M5x20         | 1 |
| 11-20 | 40003097 | HS1000i.9.4    | 保护切除开关<br>PROTECTION SWITCH REMOVAL         | 1 |

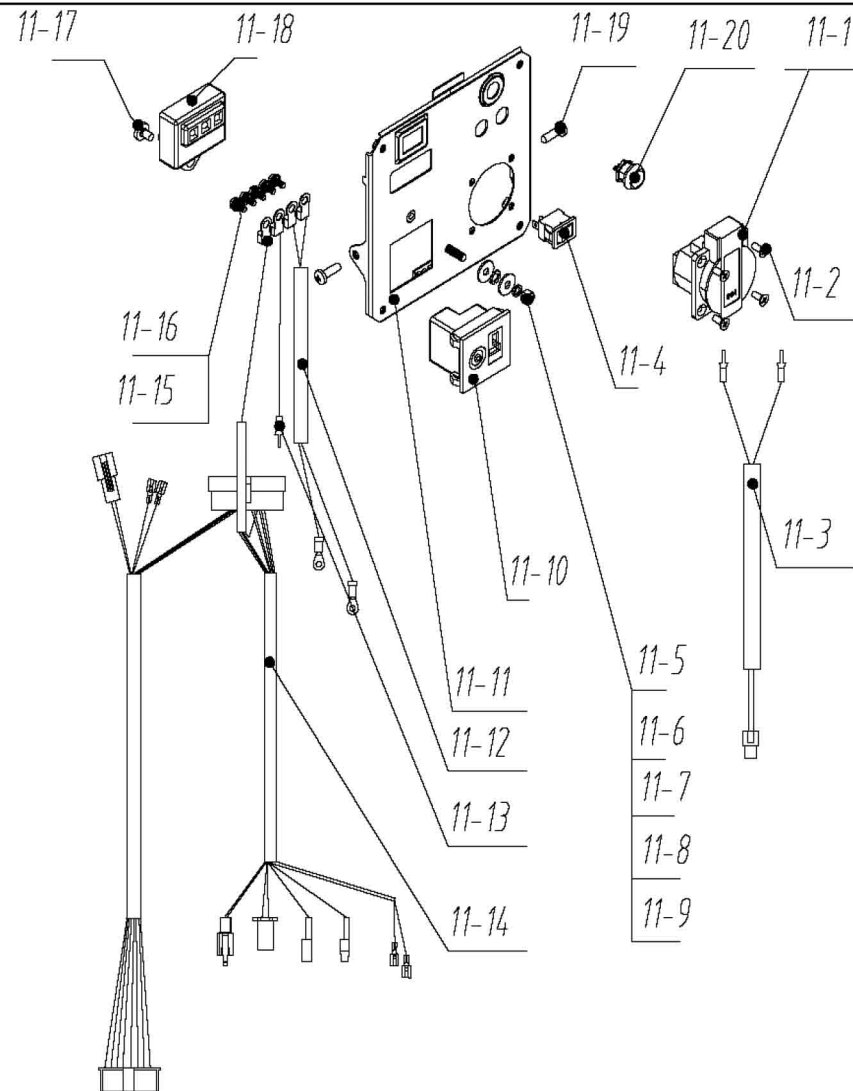


|      |          |               |                                       |   |
|------|----------|---------------|---------------------------------------|---|
| 12   |          | HS1000i.10    | 逆变器组<br>INVERTER ASSEMBLY             |   |
| 12-1 | 50005689 | GB/T 862.1    | 齿形垫圈 4<br>TOOTH GASKET 4              | 1 |
| 12-2 | 50006176 | GB/T 9074.4   | 螺钉组合件 M4x10<br>SCREW ASSEMBLY M4x10   | 1 |
| 12-3 | 40003050 | HS1000i.10.2  | 整流桥<br>RECTIFIER BRIDGE               | 1 |
| 12-4 | 50006172 | GB/T 9074.4   | 螺钉组合件M5x16<br>SCREW ASSEMBLY M5x16    | 1 |
| 12-5 | 40002704 | HS1000i.10.1  | 逆变器总成 230V 50Hz<br>INVERTER           | 1 |
| 12-6 | 60001849 | HS1000i-4     | 逆变器左胶套<br>INVERTER LEFT RUBBER SLEEVE | 1 |
| 12-7 | 60001848 | HS1000i-3     | 逆变器脚胶套<br>INVERTER FEET RUBBER SLEEVE | 2 |
| 13   |          | HS1000i.3.2   | 油开关组件<br>FUEL SEITCH ASSEMBLY         |   |
| 13-1 | 60001834 | HS1000i.3.2-5 | 油管2 (油开关到油泵)<br>FUEL TUBE 2           | 1 |
| 13-2 | 60000887 | 160FLA.5.6-4  | 油管卡B<br>FUEL TUBE CLIP B              | 2 |
| 13-3 | 40003756 | HS1000i.3.2.1 | 油开关<br>FUEL SWITCH                    | 1 |
| 13-4 | 60001833 | HS1000i.3.2-4 | 油管1 (油箱到油开关)<br>FUEL TUBE 1           | 1 |
|      |          |               |                                       |   |

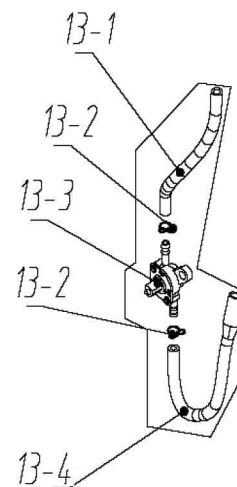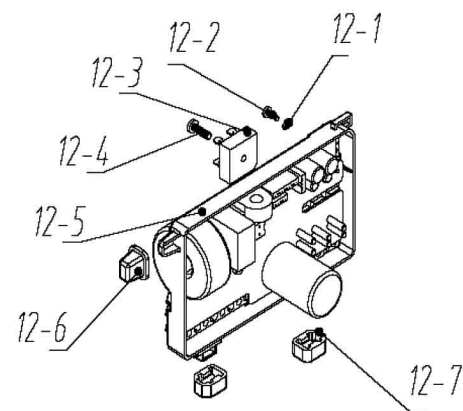

|       |          |               |                                                                               |   |
|-------|----------|---------------|-------------------------------------------------------------------------------|---|
| 14    |          | HS1000i.3     | 左箱盖组件<br>LEFT BOX COVER ASSEMBLY                                              |   |
| 14-1  | 50007154 | GB/T 845      | 十字槽盘头自攻螺钉 ST4.8X16<br>CROSS RECESSED COUNTERSUNK HEAD TAPPING SCREWS ST4.8X16 | 2 |
| 14-2  | 50006864 | HS1000i.3.4   | 负压油泵<br>FUEL PUMP                                                             | 1 |
| 14-3  | 60002160 | C178F.10-2    | 回油管夹<br>FUEL RETURN PIPE CLAMP                                                | 3 |
| 14-4  | 50006184 | GB/T 91       | 开口销 1.6x20<br>COTTER 1.6x20                                                   | 1 |
| 14-5  | 50005678 | GB/T 845      | 十字槽盘头自攻螺钉 ST4.8X16<br>CROSS RECESSED COUNTERSUNK HEAD TAPPING SCREWS ST4.8X16 | 1 |
| 13    |          | HS1000i.3.2   | 油开关组件<br>FUEL SEITCH ASSEMBLY                                                 | 1 |
| 14-6  | 50007155 | GB/T 845      | 十字槽盘头自攻螺钉<br>ST4.2X19 CROSS RECESSED COUNTERSUNK HEAD TAPPING SCREWS ST4.2X19 | 1 |
| 14-7  | 50005678 | GB/T 845      | 十字槽盘头自攻螺钉<br>ST4.8X16 CROSS RECESSED COUNTERSUNK HEAD TAPPING SCREWS ST4.8X16 | 2 |
| 14-8  | 50005679 | GB/T 96       | 垫圈5<br>FLAT GASKET 5                                                          | 2 |
| 14-9  | 40002690 | HS1000i.3.2-2 | 油开关凸轮<br>FUEL SWITCH CAM                                                      | 1 |
| 14-10 | 60001832 | HS1000i.3.2-3 | 油开关推杆<br>FUEL SWITCH PUSH ROB                                                 | 1 |
| 14-11 | 60001835 | HS1000i.3.3   | 微动开关<br>INCHES SWITCH                                                         | 1 |
| 14-12 | 40003608 | HS1000i.3.1   | 左箱盖组<br>LEFT BOX COVER                                                        | 1 |
| 14-13 | 50006182 | GB/T9074.4    | 螺钉组合件M4x16<br>SCREW ASSEMBLY M4x16                                            | 1 |
| 14-14 | 40002689 | HS1000i.3.2-1 | 油开关旋钮<br>FUEL SWITCH KNOB                                                     | 1 |
| 14-15 | 50005952 | GB/T 3452.1   | O型圈28x2.65<br>O SHAPED SEALING RING                                           | 1 |
| 14-16 | 50006186 | QC/T 340      | 螺栓M6x16<br>BOLT M6x16                                                         | 2 |
| 14-17 | 40002692 | HS1000i.3.5   | 整机脚胶<br>SUPPORT RUBBER                                                        | 2 |
| 14-18 | 50005694 | HS1000i-7     | 簧片螺母<br>SPRING NUT                                                            | 2 |
| 14-19 | 40002688 | HS1000i.3-2   | 油箱左固定胶套<br>LEFT TANK FIXED RUBBER SLEEVE                                      | 1 |

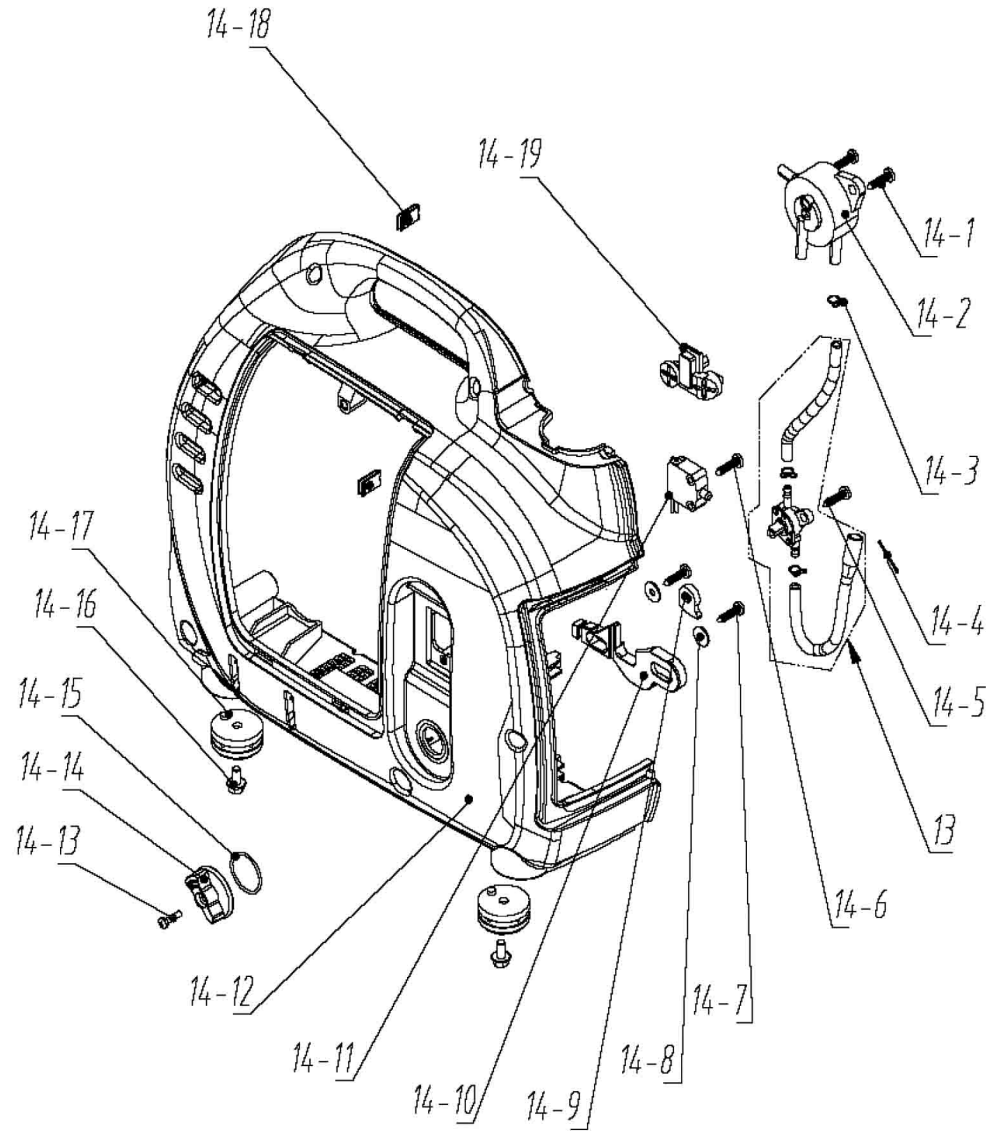

|       |          |                             |                                            |   |
|-------|----------|-----------------------------|--------------------------------------------|---|
| 16    |          | HSG1000i. 4                 | 包装箱部件<br>PACKING BOX PARTS                 |   |
| 16-1  | 50002564 | 168F. 15-3                  | 资料袋<br>FILE POCKET                         | 1 |
| 16-2  | 50006689 | HS1000i. 11. 2. 1KZ         | 说明书中文<br>USER MANUAL                       | 1 |
| 16-3  | 50006995 | HS1000i. 11. 1KS            | 包装箱中文<br>PACKING BOX                       | 1 |
| 16-4  | 50006492 | HS1000i. 11-5               | 罩衣<br>COVERALL                             | 1 |
| 16-5  | 40002879 | HS1000i. 11. 4              | 机油壶<br>OIL POT                             | 1 |
| 16-6  |          |                             | 工具袋<br>WORKBASKET                          | 1 |
| 16-7  | 40002681 | HS1000i. 11. 3. 2           | T型直流插头 (带线)<br>MODEL T DC PLUG (BELT LINE) | 1 |
| 16-8  |          | 142F. 16-6A                 | 套筒<br>SPARK PLUG SOCKET                    | 1 |
| 16-9  | 50004800 | φ6×230                      | 双头螺钉旋具<br>THE DOUBLE HEADED SCREW OUT      | 1 |
| 16-10 | 50006522 | HS1000i. 11. 3. 1           | 交流插头<br>AC PLUG                            | 1 |
| 16-11 | 50006780 | HS1000i. 11.<br>61027001200 | 泡沫上盖<br>TOP FOAM                           | 1 |
| 16-12 | 50006781 | HS1000i. 11.<br>61027001300 | 泡沫下盖<br>BOTTOM FOAM                        | 1 |

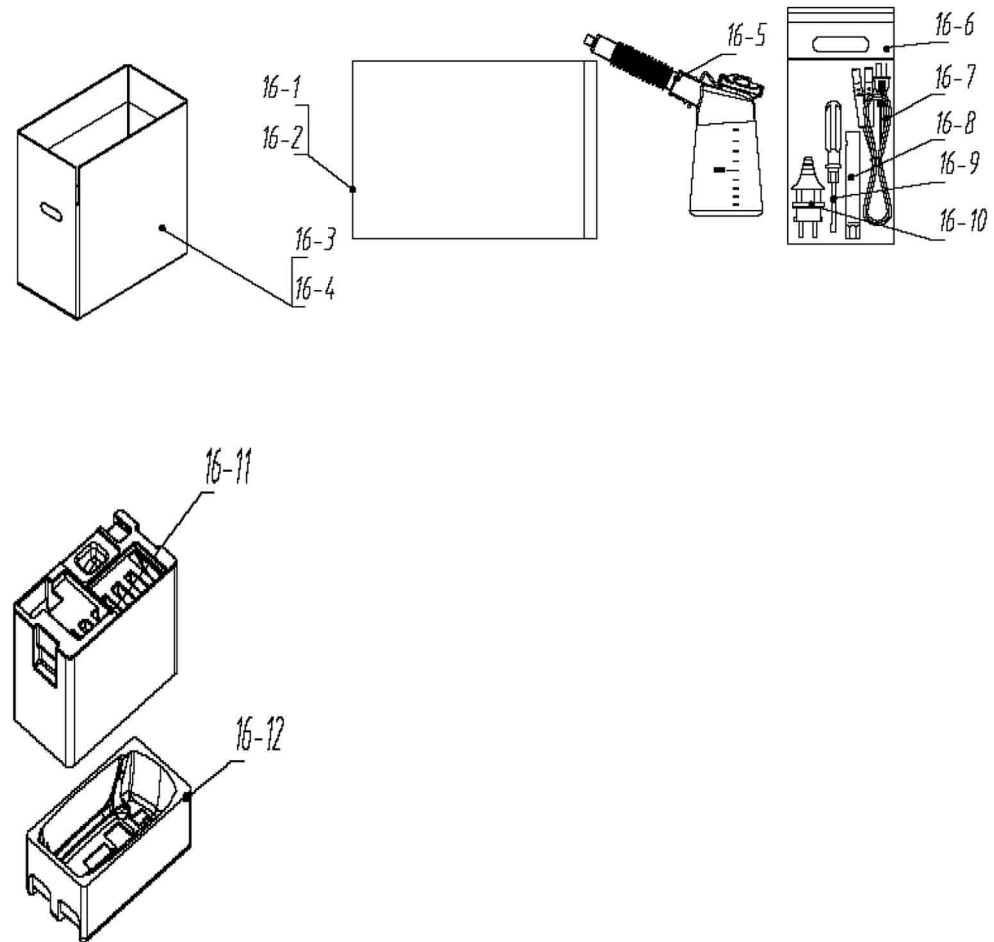

| 附 | 易损件明细<br>WEARING PARTS LIST |               |                                       |   |
|---|-----------------------------|---------------|---------------------------------------|---|
| 1 |                             | HS1200i. 1-10 | 空滤器垫<br>AIR FLITER GASKET             | 1 |
| 2 |                             | 142F-4        | 化油器垫<br>CARBURETOR GASKET             | 1 |
| 3 |                             | 142F-6        | 进气管垫<br>INTAKE MANIFOLD GASKET        | 1 |
| 4 |                             | 142F-20       | 缸盖护罩密封垫<br>CYLINDER HEAD COVER GASKET | 1 |
| 5 |                             | HS900i. 1-2A  | 排气口垫<br>EXHAUST GASKET                | 1 |
| 6 |                             | HS900i. 1-9   | 消音器垫<br>MUFFLER GASKET                | 1 |