


CERUTI

www.ceruticenter.it

ESPLOSO Generatore KS2000I



HS2000i 零部件分解图 COMPONENTS DECOMPOSITION MAP

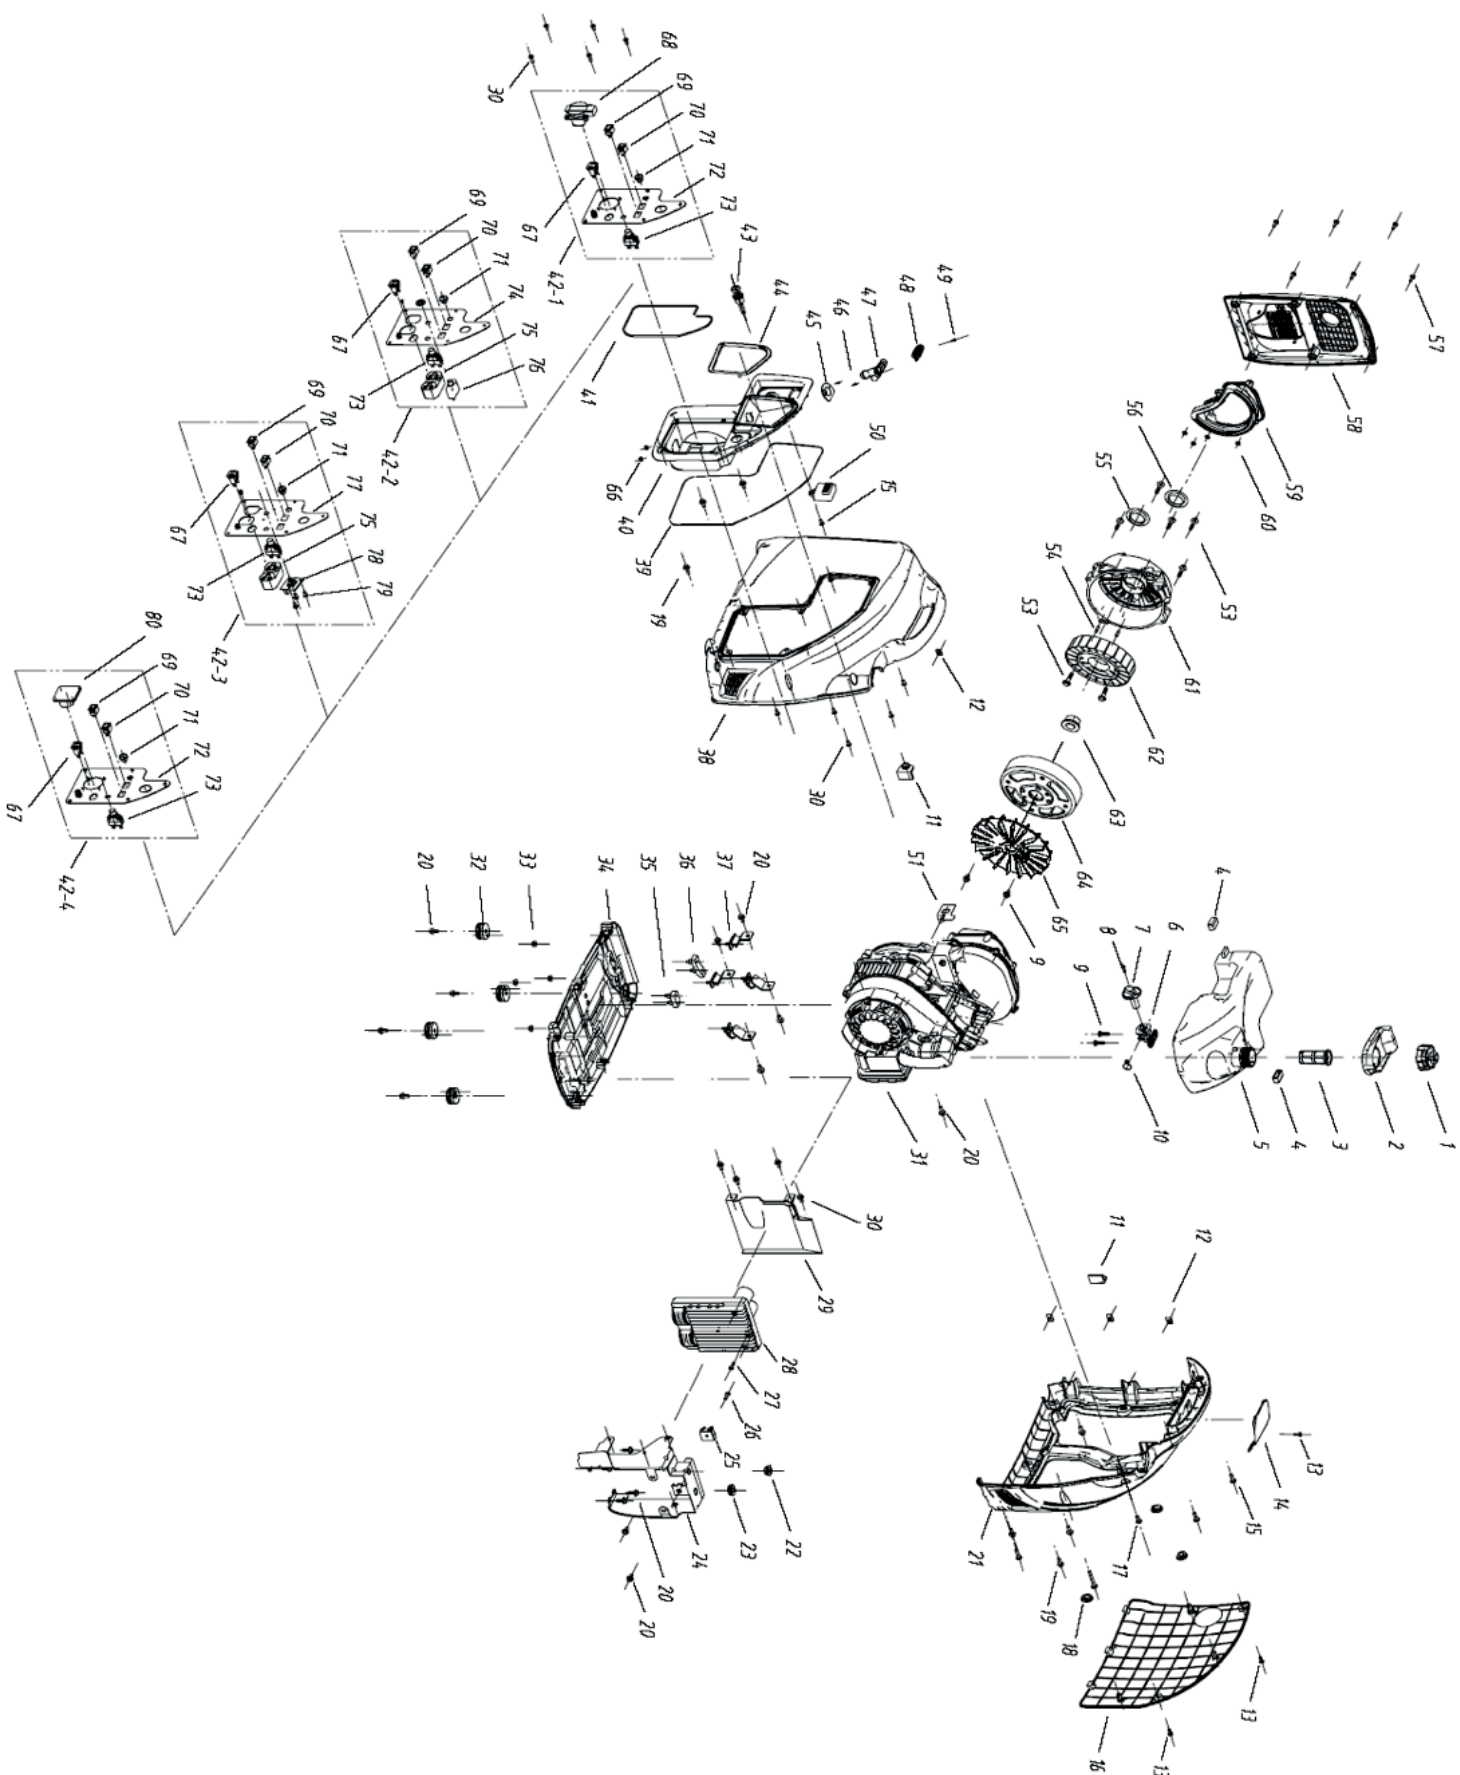

序号 NO.	品号	图号 DRAWING NUMBER	名称 DESCRIPTION	数量 AMOUN T	序号 NO.	品号	图号 DRAWING NUMBER	名称 DESCRIPTION	数量 AMOUN T
1	40002684	HS1000i.2.1.1	油箱盖组件 CAP COMP.,FUEL FILLER	1	41	50006595	HS2000i.4-1	电气安装盒O型胶圈 ELECTRICAL INSTALLATION BOX OF O TYPE RUBBER RING	1
2	40003149	HS2000i.5-2	油箱号油胶套 TANK FUEL GUIDING RUBBER SLEEVE	1	42-1		HS2000i.10	控制面板板组件 CONTROL PANEL ASSEMBLY	1
3	40002685	HS1000i.2.1.2	油位过滤器 FUEL FILTER	1	42-2		HS2000i.10A	控制面板板组件 CONTROL PANEL ASSEMBLY	1
4	50006613	HS2000i.5-4	油箱固定胶套 TANK FIXED RUBBER SLEEVE	2	42-3		HSG2000i.10	控制面板板组件 CONTROL PANEL ASSEMBLY	1
5	40003659	HS2000i.5-1	油箱 FUEL TANK	1	42-4		HS2000i.10AU	控制面板板组件 CONTROL PANEL ASSEMBLY	1
6	40003150	HS2000i.5.1	油开关 FUEL SWITCH	1	43	60002183	HS2000i.4.3	阻风门拉索总成 CHOKE CABLE ASSEMBLY	1
7	40003151	HS2000i.5-3	油开关旋钮 FUEL SWITCH KNOB	1	44		HS2000i.4-2	拉手装饰框 HANDLE DECORATIVE FRAME	1
8	50006182	GB/T9074.4	螺钉组合件 M4x16 SCREW ASSSEMBLY M4x16	1	45		HS2000i.4-4	拉手定位板 HANDLE POSITIONING PLATE	1
9	50006591	GB/T9074.4	螺钉组合件 M6x16 SCREW ASSSEMBLY M6x16	4	46		GB/T12615	抽芯铆钉3X6 SELF-PLUGGING RIVET	2
10	60002609	149F.10-3A	油管卡 FUEL TUBE CLIP	1	47		HS2000i.4.5-1	启动拉手 STARTING HANDLE	1
11	50006594	HS2000i.4-3	发动机缓冲胶 ENGINE BUFFER FEET	2	48	40003170	HS2000i.4.5-2	拉手盖板 HANDLE COVER	1
12	50005694	HS1000i-7	簧片螺母 SPRING NUT	6	49	50006592	GB/T845	十字槽套头自攻螺钉 ST2.9x9.5 CROSS RECESSED COUNTERSUNK HEAD TAPPING SCREWS ST2.9x9.5	1
13	50006175	GB/T837	螺钉M5x16 PHILIPS SCREW M5X16	3	50	40003147	HS2000i.4.4	指示灯组件 INDICATING LAMP ASSEMBLY	1
14	按颜色	HS2000i.8-1	火花塞维护盖 MAINTENANCE SPARK PLUG COVER	1	51	50006617	HS2000i.2-2	护线板 GUARD BOARD	1
15	50006172	GB/T9074.4	螺钉组合件 M5x16 SCREW ASSSEMBLY M5x16	6					
16	按颜色	HS2000i.7-1	空滤器维护盖 AIR FILTER COVER	1	53	50001616	GB/T5789	螺栓M6X30 BOLT M6X30	7
17	50005886	GB/T9074.4	螺钉组合件 M5x12 SCREW ASSSEMBLY M5x12	1	54	50005835	149F.1-3	定位销 DOWEL	2
18	50006609	HS2000i.6-1	空滤器维护盖安装胶套 AIR FILTER MAINTENANCE COVER MOUNTING RUBBER SLEEVE	3	55	50007098	HS2000i.2-5	出线孔橡胶塞 THE OUTLET HOLE RUBBER STOPPER	1
19	50001598	GB/T5789	螺栓M6x12 BOLT M6x12	6	56	50006589	HS2000i.2-3	橡胶塞 RUBBER STOPPER	1
20	50001739	GB/T5789	螺栓M6x12 BOLT M6x12	15	57	50006794	GB/T9074.4	螺钉组合件 M5x25 SCREW ASSSEMBLY M5x25	6
21	按颜色	HS2000i.6.1	右箱盖组件 RIGHT BOX COVER ASSEMBLY	1	58	40003155	HS2000i.9.1	消音器盖 SILENCER COVER	1
22	40003164	HS2000i.3.2-1	油箱支撑工字胶 FUEL TANK SUPPORTING H-SHAPED RUBBER	1	59	50006610	HS2000i.9-1	电机导风胶套 MOTOR WIND GUIDING RUBBER SLEEVE	1
23	40003165	HS2000i.3.2-2	油箱支撑椭圆胶 FUEL TANK SUPPORTING ELLIPSE GLUB	1	60	50005691	GB/T862	齿形垫圈 5 TOOTH GASKET 5	4
24	40003146	HS2000i.3.2.1	逆变器支架 INVERTER BRACKET	1	61	70000313	149F.7-4	高盖 ECONOMY COVER	1
25	40003050	HS1000i.10.2	整流桥 RECTIFIER BRIDGE	1	62-1		HS2000i.2.1.1	发电机定子 (高电压) STATOR ASSEMBLY(HIGHT VOLTAGE)	1
26	50003941	GB/T9074.4	螺钉组合件 M5x20 SCREW ASSSEMBLY M5x20	1	62-2		HS2000i.2.1A.1	发电机定子 (低电压) STATOR ASSEMBLY(LOW VOLTAGE)	1
27	50005887	GB/T9074.4	螺钉组合件 M4x12 SCREW ASSSEMBLY M4x12	1	63	50001513	GB/T6177.2	螺母M12X1.25 NUT M12X1.25	1
28-1	40003282	HS2000i.3.1	逆变器总成(230V50Hz) INVERTER(230V50Hz)	1	64		HS2000i.2.1.2	发电机转子 ROTOR ASSEMBLY	1
28-2	40003295	HS2000i.3.1A	逆变器总成(120V60Hz) INVERTER(120V60Hz)	1	65	40003163	HS2000i.2-4	发电机叶轮 MOTOR FAN	1
28-3	40003561	HS2000i.3.1B	逆变器总成(220V50Hz) INVERTER(220V50Hz)	1	66		GB/T95	平垫圈3 FLAT GASKET 3	2
28-4	40003660	HS2000i.3.1AU	逆变器总成(240V50Hz) INVERTER(240V50Hz)	1	67	40003159	HS2000i.10.3	直流插座 V TYPE DC SOCKET	1
28-5	40003145	HSG2000i.3.1	逆变器总成(100V 50Hz/60Hz) INVERTER(100V 50Hz/60Hz)	1	68	40002862	HS1000i.9.2	交流插座 AC SOCKET	1
29	40003166	HS2000i.3-1	逆变器罩 INVERTER COVER	1	69	40003286	HS2000i.10.2	熄火开关 FLAMEOUT SWITCH	1
30	50001487	GB/T818	螺钉M5X12 SCREW M5X12	13	70	60002147	HS1000i.9.5	节能开关 ENERGY SAVING SWITCH	1
31		149F	发动机组 ENGINE	1	71	40003097	HS1000i.9.4	保护切除开关 PROTECTION SWITCH REMOVAL	1
32	40002692	HS1000i.3.5	整机脚胶 SUPPORT RUBBER	4	72	40003283	HS2000i.10.1	电器安装板组件 CONTROL PANEL ASSEMBLY	1
33	50006586	GB/T6183.1	螺母M6 NUT M6	4	73	40003160	HS2000i.10.4	直流过载保护器 DIRECT CURRENT OVERLOAD PROTECTOR	1
34	40003162	HS2000i.1.1	底板 BASEPLATE	1	74	按颜色	HS2000i.10.1A	电器安装板组件 CONTROL PANEL ASSEMBLY	1
35	50006587	HS2000i.1-1	动力支撑胶垫 ENGINE SUPPORTING PAD	1	75	40003113	HSG1000i.1.2	交流插座 AC SOCKET	1
36	50006588	HS2000i.1-2	电机支撑胶垫 GENERATOR SUPPORTING PAD	1	76	40003302	HS2000i.10.6	断路器 BREAKER	1
37	40003143	HS2000i.1.2	减震座 SHOCK-ABSORBING SEAT	4	77	按颜色	HSG2000i.10.1	电器安装板组件 CONTROL PANEL ASSEMBLY	1
38	按颜色	HS2000i.4.1	左箱盖组件 LEFT BOX COVER ASSEMBLY	1	78	60002069	HSG1000i.1.3	频率转换开关 FREQUENCY-CHANGEOVER SWITCH	1
39	50006984	HS2000i.4-13	左箱盖O型胶圈 THE LEFT BOX COVER APRONS O	1	79	50005887	GB/T9074.4	螺钉组合件 M4x12 SCREW ASSSEMBLY M4x12	3
40	按颜色	HS2000i.4.2	电气安装盒 ELECTRICAL INSTALLATION BOX	1	80	40003655	HS1000i.9.2AUS	交流插座 AC SOCKET	1