


ESPLOSO
Irroratrice
WS-15DA

Electric sprayer machine diagram (3)

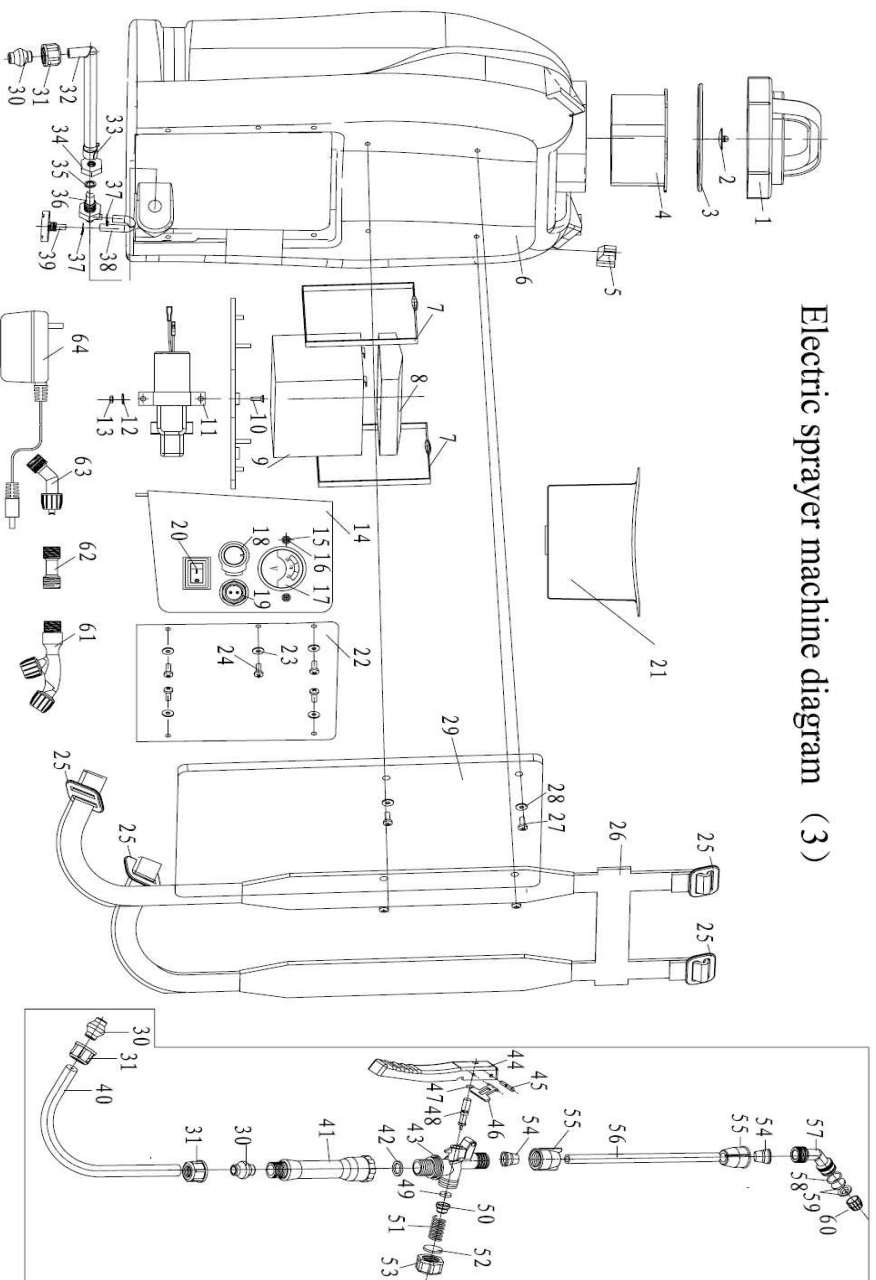

Detailed Table

NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.
1	WS-18D.9-1	Container Cap	1	25	WS20-12-05	Fastening buckle	4	49	WS-18D.5-3	Switch Felt Washer	1
2	WSJB-6.2-2	Air Intake Plug	1	26	WS-18D.7	Belt	1	50	WS-18D.5-4	Washer seat	1
3	WS-18D.9-2	Felt Washer	1	27	GB/T818	Screw M5×10	4	51	WS-18D.5-5	Spring	1
4	WS-18D.8	Large filter	1	28	GB/T96.1	Washer φ6	4	52	WS-18D.5-6	Switch Nut Washer	1
5	WS-18D-1	Round rod clamp	1	29	WS-18D.6	Belt pad	1	53	WS-18D.5-7	Switch Nut	1
6	WS-15DA/80A.1	Water tank	1	30	WS16-13-08-02	Scarf joint	3	54	WS16-13-05-02B	Split Sleeve	2
7	WS-18D.4.2	The belt for battery	2	31	WS16-13-08-01B	Case nut M18	2	55	WS16-13-05-01	Case nut	2
8	WS-18D.4-2	Lag	1	32	WS-18D-2A	Absorb pipe	1	56	WS16-13-05-03B	Round bar	1
9	WS-JN1270	Battery	1	33		Pipe buckle φ6~φ12	1	57	WS16-13-04B	Nozzle body	1
10	GB/T819.1	Screw M4×18	2	34	WS-18DZ-1	Case nut	1	58	WS-18D.11-2	Felt Washer	1
11	HELI-GMB-06	Pump	1	35	WS-18DZ.1-4	Rubber Washe	1	59	WS16P-13-01-01	Conical Spray Plate	1
12	GB/T97.1	Washer φ4	2	36	WS-18DZ.1-3	Water pipe	1	60	WS16-13-01-03	Spray Head Nut	1
13	GB/T6170	Nut M4	2	37	WS-18DZ.1-2	Snap link	2	61	WS-18D.11	F Style Spray Head	1
14	WS-15DA.2-1	Bead plate	1	38	WS-18DZ.1-1	Water pipe	1	62	WS16-13-01C-03	Join	1
15	GB/T845	Screw ST2.9X8	2	39	WS-18DZ.1.1	Little filter	1	63	WS16P-13-01B	Fan Style Spray Head	1
16	GB/T95	Washer φ3	2	40	WS-18D.3-2	Hose	1	64	WS1212Z	Charger	1
17	WS-20D.2	Voltmeter	1	41	WS-18D.5-13	Switch Handle	1				
18	WS-15DA.2.1	Voltage regulator	1	42	WS-18D.5-12	Felt Washer	1				
19	WS-15DA.2.2	The line for changing	1	43	WS-18D.5-1	Switch Body	1				
20	KCD3-1111N	Power switch	1	44	WS-18D.5-8	Press Plate	1				
21	WS-15DA-1	Pump board	1	45	WS-18D.5-10	Switch Pin	1				
22	WS-15DA-2	Cover plate	1	46	WS-18D.5-9	Lock catch	1				
23	GB/T818	Screw M5×10	5	47	GB/T3452.1	O-Ring 4.4×1.8	1				
24	GB/T97.1	Washer φ5	5	48	WS-18D.5-2	Pressure shaft	1				