



ESPLOSO
Irroratrice
3WZ-7F

The Parts List of Model 3WZ-7E Knapsack Power Sprayer

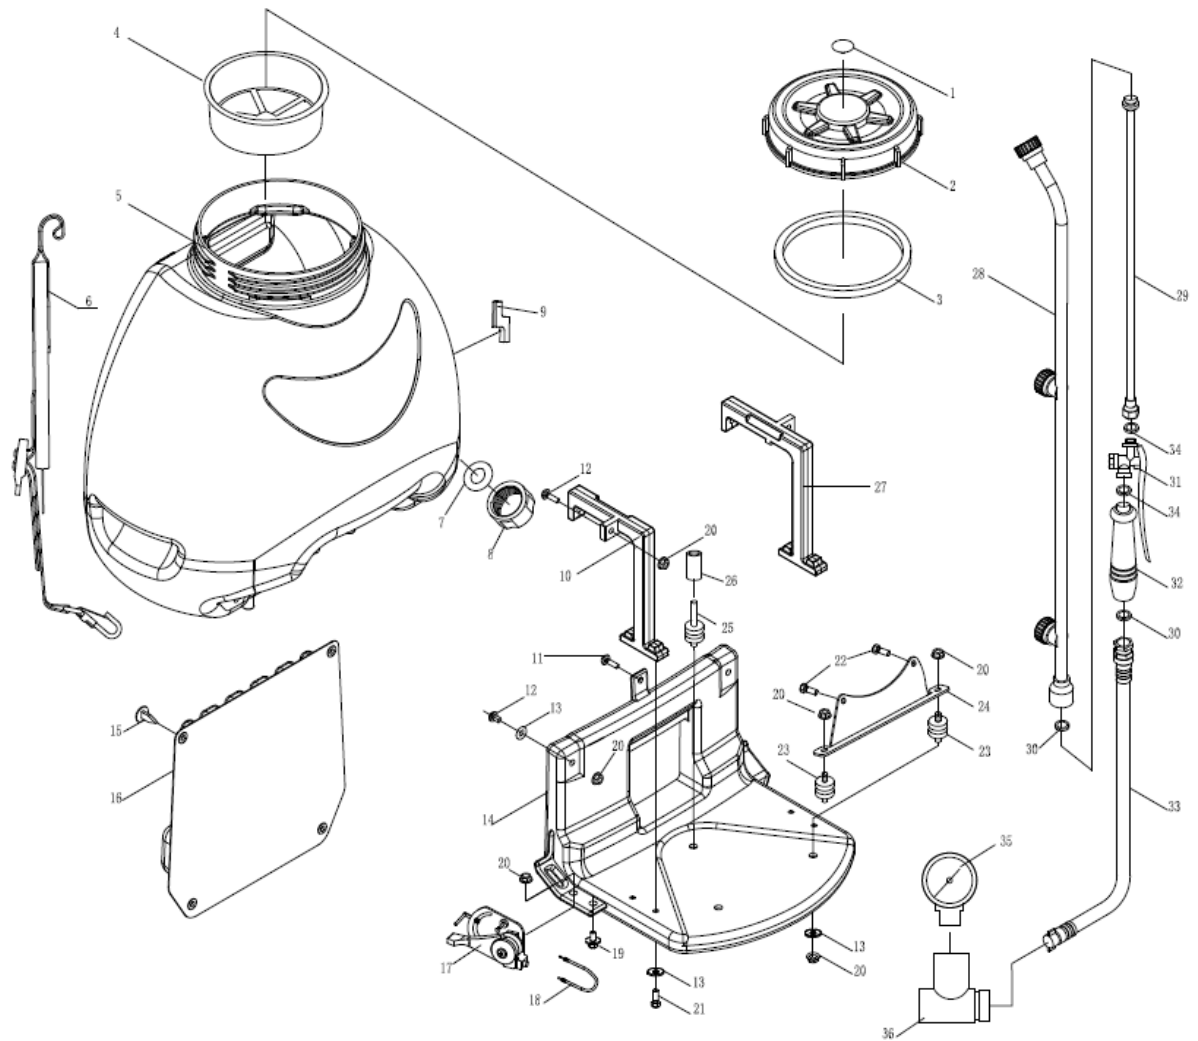


NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.
1	3WZ-6D.1-5	LID	1	16	3WZ-7-5A	PLASTIC CLICK	1	31	3WZ-7E.1.1	VALVE	1
2	3WZ-6D.1-1	LID	1	17	1E34F-XSHJ.1	SWITH	1	32	3WZ-4.11	HANDLE	1
3	3WZ-6D.1-4	SEALING WASHER	1	18	3WZ-4C.3	FREL THROTTLE	1	33	3WZ-6.6.1	RUBBER TUBE ASSY	1
4	3WZ-6D.1.2	FILTER ASSM	1	19	GB29.2+GB96	BOLT M6X20	2	34	3WZ-6BSMU-8	SEAL RING	2
5	3WZ-7B.1.1	CHEMICAL TANK	1	20	GB/T6177.1	NUT M6	11	35		PRESSURE GAUGE	1
6	3WZ-7E.3	BANDS ASSM	2	21	3WF-20.9-3	BOLT M6X20	4	36	3WZ-7E.3-1	PIPE	1
7	3WF-3A.1-2	SEALING WASHER	1	22	GB70+GB93+GB97	SCREW M5×20	2				
8	3WZ-6.5-1	LID	1	23	3WZ-6.1	RUBBER MOUNT	2				
9	3WZ-6G-3	PYLONS	2	24	3WZ-7E-1	CONNECT PLATE	1				
10	3WZ-7-3	LEFT SUPPORT	1	25	3WZ-7B.2	RUBBER MOUNT	1				
11	GB823+GB96	SCREW M6×12	1	26	3WZ-6-11	SUPPORT SLEEVE	1				
12	GB9074.13	SCREW M6×30	4	27	3WZ-7-4	RIGHT SUPPORT	1				
13	GB96 6	WASHER 6	7	28	3WZ-7E.1.2	LONG NOZZLE	1				
14	3WZ-7-2	FRAME	1	29	3WZ-4.13	STAIHT SPRAYING TUBE	1				
15	3WF-2.6B-2	PLASTIC CLIP	4	30	3WZ-4-10	SEAL RING	2				

The Parts List of Model 3WZ-7B.5A Ram Pump

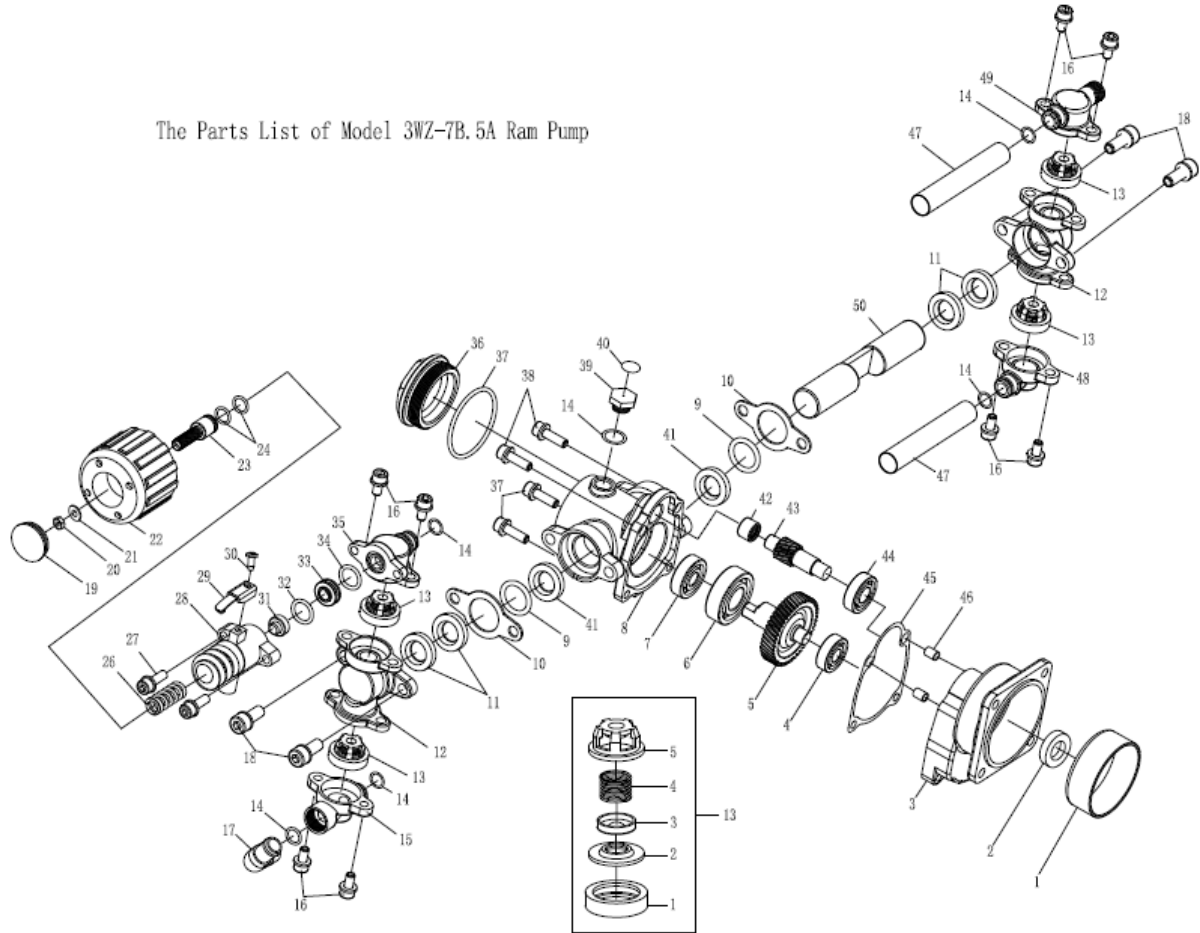

NO.	PART NO.	PART NAME	QTY	NO.	PART NO.	PART NAME	QTY	NO.	PART NO.	PART NAME	QTY
1	3WZ-7B.5-1	CLUTCH DRUM COVER	1	23	3WZ-7B.5.5-3A	REGULATING SCREW	1	45	3WZ-10.1.1-5A	SEALING WASHER	1
2	1E36F.2	SEAL	1	24	GB/T6659	O-RING 10X1.8	2	46	6MF-30.1-14	PIN	2
3	3WZ-7B.5.1-1B	CONNECTING BASE	1	25				47	3WZ-10.1-2	TUBE	2
4	GB/T276	BEARING 6000/P6	1	26	3WZ-7B.5.5-5	SPRING	1	48	3WZ-7B.5.3-1	WATER CHAMBER A	1
5	3WZ-10.1.1-3	WHEEL	1	27	GB70.1	SCREW ASSM M6X16	2	49	3WZ-7B.5.4-2	DISCHARGE METAL B	1
6	GB/T276	BEARING 6204 P6	1	28	3WZ-7B.5.5-2	VALVE	1	50	3WZ-10.1.1-4	PLUNGER	1
7	GB/T276	BEARING 6301 P5	1	29	3WZ-7B.5.5.1A	BATTER BOARD	1	13-1	3WZ-7B.5.2-1	BALL SEAT	1
8	3WZ-10.1.1-2A	NOUMENON	1	30	GB845ST4.2X10	SCREW ASSEM	1	13-2	3WZ-7B.5.2-2	VALVE DISK	1
9	GB/T3452.1	O-RING 21.2X1.8	2	31	3WZ-7B.5.5-4	SPRING SEAT 1	1	13-3	3WZ-7.5.2-3	VALVE BLOCK	1
10	3WZ-7B.5-6	BAFFLE	2	32	GB3452.1	O-RING 12.5X2.65	1	13-4	3WZ-7B.5.2-4A	VALVE SPRING	1
11	3WZ-7B.5.3-4	WATER SEAL	4	33	3WZ-7B.5.5-7	VALVE SEAT	1	13-5	3WZ-7B.5.2-5	VALVE BONNET	1
12	3WZ-7B.5.3-3	CYLINDER STATOT	2	34	GB3452.1	O-RING 11.8X1.8	1				
13	3WZ-7B.5.2A	CHECK VALVE	4	35	3WZ-7B.5.3-2	DISCHARGE METAL A	1				
14	GB/T6659	O-RING 10X2	6	36	3WZ-10.1-1	BOX BACK COVER	1				
15	3WZ-7B.5.4-1	WATER CHAMBER B	1	37	GB/T3452.1	O-RING 4.6.2X2.65	1				
16	GB70.1-GB93	SCREW ASSM M6X12	8	38	GB70.1-GB93	SCREW ASSM M6X20	4				
17	3WZ-7B.5-5A	WATER INLET	1	39	3WZ-7B.5-2A	BOLT	1				
18	GB70.1-GB93	SCREW ASSM M8X20	4	40	3WZ-7B.5-7	PASTER	1				
19	3WZ-7B.5.5-8	HANDLE CAP	1	41	3WZ-7B.5.1-7	OIL SEAL	2				
20	GB6172	NUT M8	1	42	GB/T290 HK1010	BEARING	1				
21	GB97.1	WASHER 8	1	43	3WZ-7B.5.1-3	GEAR SHAFT	1				
22	3WZ-7B.5.5-1	HANDLE	1	44	GB/T276	BEARING 6001 P5	1				

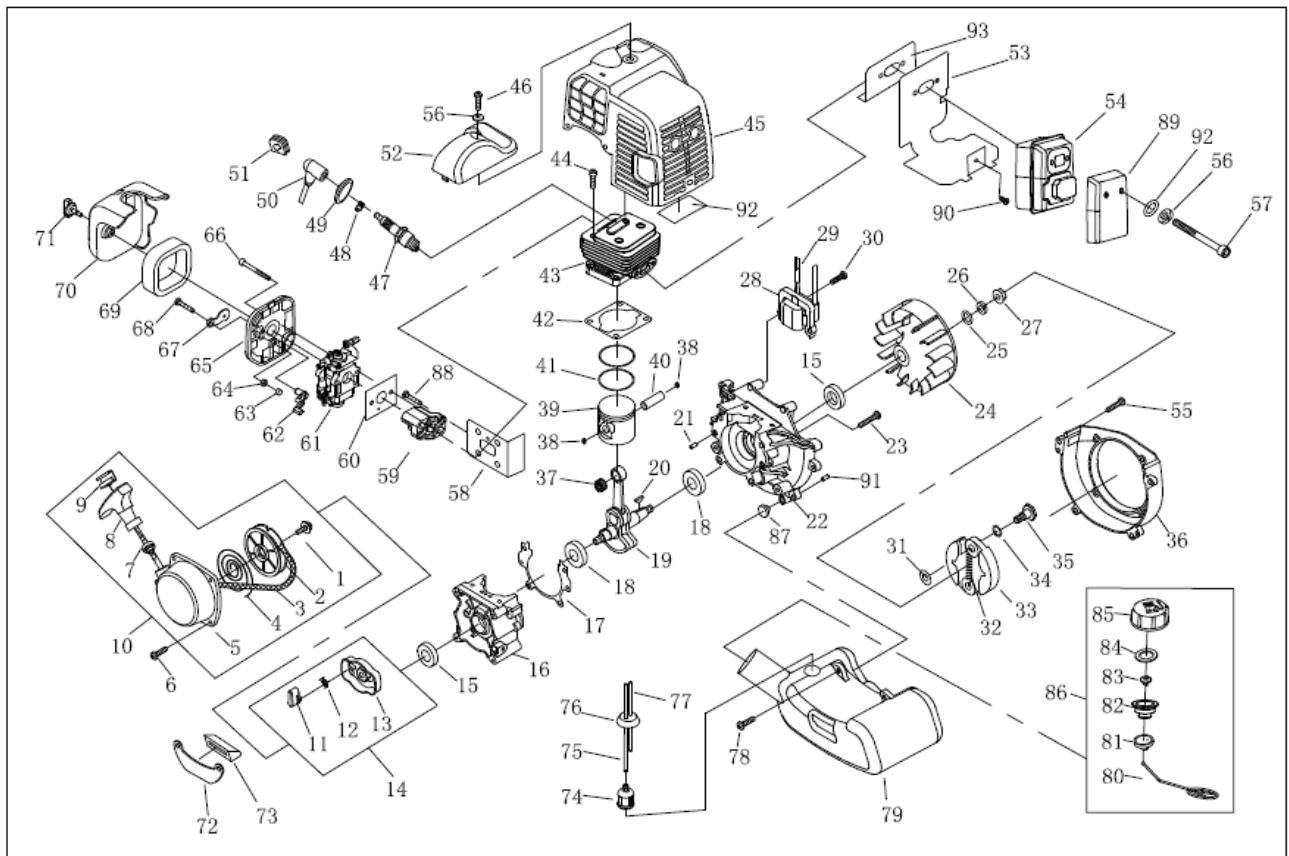

NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.
1	GB/T9074.6	Screw M5×10	1	25	GB/T859	Washer 8	1	49	1E34F.5-3	Plug Cap	1	73	1E31F-4	Rubber Cover	1
2	1E34F.11-2	Start Rope Reel	1	26	GB/T97.1	Washer 8	1	50	1E34F-E.3-1	Cap	1	74	1E34F.9.2-3A	Cleaner Cover	1
3	1E34F.11-3	Rope	1	27	GB/T6171	Nut M8×1	1	51	1E40F-5.3-1	Plug	1	75	CG420.1.3.2-2	Fuel Pipe 3×1×140	1
4	1E34F.11-1	Recoil Spring	1	28	1E34F-2E-EMC.1.1	IGNITION COIL COMP.	1	52	1E34F-E-4	Cover	1	76	EB-415.4.2-2	Plug	1
5	1E34F.11.1	Start Cover Ass'y	1	29	1E36F-2.3.1	Cord Comp.	1	53	1E34F-E-2	Gasket	1	77	EB-415.4.2-4	Fuel Pipe 2.5×1.25×85	1
6	GB70.1+GB93+GB97	Screw M4×16	4	30	GB70.1+GB93+GB97	Screw M5×20	2	54	1E34F-2E.2	Muffler	1	78	GB70.1+GB93+GB97	Screw M5×16	2
7	1E34F.11.1-1	Guide Bushing	1	31	1E34F-11	Washer	2	55	GB70.1+GB93+GB97	Screw M5×16	4	79	1E31FE.8-1	Fuel Tank	1
8	1E36F.1-1	Start Handle	1	32	1E34F.10C-1	Spring	1	56	1E36F-2C-1	Gasket	1	80	1E32FL.6.2-4	Chain	1
9	1E36F.1-5	Resist Gasket	1	33	1E34F.10.1	Expander	2	57	GB70.1+GB97	Screw M5×55-12.9	2	81	1E32FL.6.2-3	End Cover	1
10	1E34F.11G	Starter	1	34	1E34F-13	Spring	2	58	1E34F-E-8	Gasket	1	82	1E32FL.6.2-2	Inside Cover	1
11	1E34F.8-1	Start pole	1	35	1E34F-12	Screw Pin	2	59	1E34F-E.8	Admitting Pipe	1	83	EB-415.4.1.1-1	Inlet	1
12	1E34F.8-2	Spring	1	36	1E31FE-HS-3	Fan Cover	1	60	1E34F-1	Gasket	1	84	CG420.1.3.1-2	Gasket	1
13	1E34F.8.1	Start Reel	1	37	1E31F.4.1	Bearing	1	61	1E34F-2E.1A	Carburetor	1	85	1E32FL.6.2-1	Fuel Tank Lid	1
14	1E34F.8	Start Reel Ass'y	1	38	1E34F.6-2	Ring	2	62	1E34F.1-2	Choker Handle	1	86	1E32FL.6.2	Lid Ass'y	1
15	1E36F.2	Oil-seal	2	39	1E34F-E.4-1	Piston	1	63	1E34F.1-7	Stop ring	1	87	1E40F-5A-3	Rubber washer	2
16	1E34F-E.6-1	Crank Case	1	40	1E34F.6-3	Piston Pin	1	64	GB/T6170	Nut M4	1	88	GB70.1+GB93+GB97	Screw M5×25	2
17	1E34F-E.6-2	Gasket	1	41	1E34F.6-5	Piston Ring	2	65	1E34F.1.1	Cleaner inside cover	1	89	1E34F-E-7	Cover	1
18	GB/T276	Bearing 6001/P6	2	42	1E34F-E-3	Gasket	1	66	GB70.1+GB97	Screw M5×55	2	90	GB70.1+GB93+GB97	Screw M4×12	1
19	1E34F-E.4.1	Crank Shaft	1	43	1E34F-2E-1	Cylinder	1	67	1E34F.1-3	CHOKER	1	91	GB/T119.1	Pin 4h8×10	2
20	1E40FF-3Z.3-1	Key 3×5×13	1	44	GB/T70.1	Screw M5×18	4	68	GB/T845	Screw ST4.2×12-F4	1	92	1E36F-E-9	Gasket	0.045
21	GB/T119.1	Pin 4h8×10	2	45	1E34F-E.5	Guide Cover Ass'y	1	69	1E34F.1-1	Filter Net	1	93	HA28-6	Gasket	1
22	1E34F-E.6-3	Crank Case	1	46	GB70.1+GB93+GB97	Screw M5×20	1	70	1E34F.1-4	Cleaner Outside Cover	1				
23	GB70.1	Screw M5×25	4	47	L8RTC	Spark Plug	1	71	1E34F.1.2	Screw	1				
24	1E34F-2E-EMC.1.2	MAGNETO ROTOR COMP	1	48	1E40F-3A.8-2	Spring	1	72	1E34F-E-6	Stand	1				