

CERUTI

www.ceruticenter.it

ESPLOSO

Motore


33 CC EURO 2





1E36F-E

ASSEMBLY DRAWING OF ENGINE

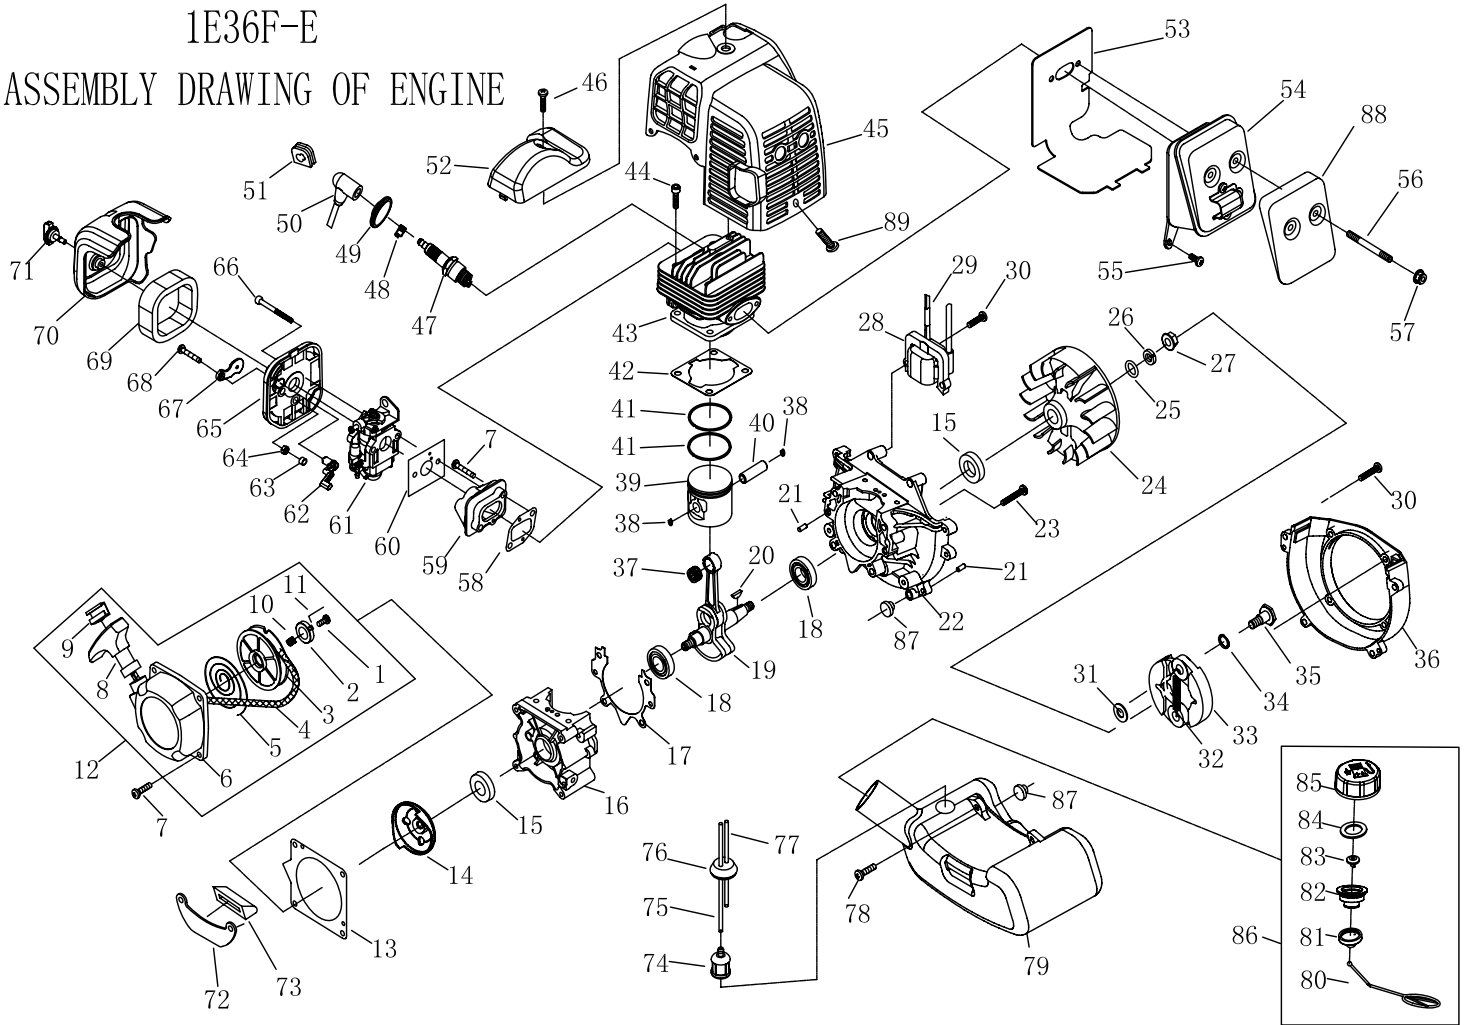

NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.
1	1E36FE. 9-3	Screw	1	23	GB70. 1	Screw M5 × 30	4	45	1E36F-E. 5	Guide Cover Ass'y	1	67	1E34F. 1-3	CHOKER	1
2	1E36FE. 9-4	Ratchet	1	24	1E36F-E. 3. 1	MAGNETO ROTOR COMP.	1	46	GB9074. 4	Screw M5 × 16	1	68	GB/T845	Screw ST4. 2 × 12	1
3	1E36FE. 9-1	Start Rope Reel	1	25	GB/T859	Washer8	1	47	L8RTC	Spark Plug	1	69	1E34F. 1-1	Filter Net	1
4	1E36FE. 9-5	Rope	1	26	GB/T97. 1	Washer8	1	48	1E40F-3A. 8-2	Spring	1	70	1E36F-E. 7-1	Cleaner Outside Cover	1
5	1E36FE. 9-7	Recoil Spring	1	27	GB6170	Nut M8	1	49	1E34F. 5-3	Plug Cap	1	71	1E34F. 1. 2	Screw	1
6	1E36FE. 9-8	Start Cover Ass'y	1	28	1E36F-E. 3. 2	IGNITION COIL COMP.	1	50	1E34F. 5-2	Cap	1	72	1E36F-E-5	Stand	1
7	GB9074. 4	Screw M5 × 25	6	29	1E36F-2. 3. 1	Cord Comp.	1	51	1E40F-5. 3-1	Plug	1	73	1E40F-5A-2	Rubber Cover	1
8	1E40FP-3Z. 4-2	Start Handle	1	30	GB9074. 13	Bolt M5 × 20	6	52	1E36F-E-4	Cover	1	74	1E34F. 9. 2-3	Cleaner Cover	1
9	1E40FP-3Z. 4-10	Ring	1	31	1E36F-3	WasherB	2	53	1E36F-E-2	Gasket	1	75	1E36F-2A. 3. 1-2	Fuel Pipe	1
10	1E36FE. 9-6	Spring	1	32	1E36F-E. 6-1	Spring	1	54	1E36F-E. 2A	Muffler	1	76	1E36FF. 8. 1-1	Plug	1
11	1E36FE. 9-2	Start pole	2	33	1E40F-5. 6A-1	Expander	2	55	GB9074. 4	Screw M5 × 12	1	77	1E36F-2A. 3. 1-1	Fuel Pipe	1
12	1E36FE. 9	Starter	1	34	1E40F-5-11	Washer	2	56	1E36F-2-9	Bolt	2	78	GB/T9074. 4	Screw M5 × 16	2
13	1E40F-5-10	Gasket	1	35	1E40F-5-12	Screw Pin	2	57	GB6177. 1	Nut M5	2	79	1E36FE. 10-1	Fuel Tank	1
14	1E36FE. 7	Start Reel	1	36	1E36FE-5	Fan Cover	1	58	1E36F-E-8	Gasket	1	80	1E32FL. 6. 2-4	Chain	1
15	1E36F. 2	Oil-seal	2	37	1E36F-2. 4. 1	Bearing	1	59	1E36F-2A-2	Admitting Pipe	1	81	1E32FL. 6. 2-3	End Cover	1
16	1E36F-E. 8-2	Crank Case	1	38	1E36F. 10-2	Ring	2	60	1E36F-2A-1	Gasket	1	82	1E32FL. 6. 2-2	Inside Cover	1
17	1E36F-2. 6-3	Gasket	1	39	1E36FE. 12. 1	Piston	1	61	1E36F-E. 1A	Carburetor	1	83	EB-415. 4. 1. 1-1	Inlet	1
18	GB/T276	Bearing 6201/P5	2	40	1E36F. 10-1	Piston Pin	1	62	1E34F. 1-2	Choker Handle	1	84	CG420. 1. 3. 1-2	Gasket	1
19	1E36F-E. 4. 1	Crank Shaft	1	41	1E36F. 10-3	Piston Ring	2	63	1E34F. 1-7	Stop ring	1	85	1E32FL. 6. 2-1	Fuel Tank Lid	1
20	GB1099	Key 3x5x13	1	42	1E36F-E-3	Gasket	1	64	GB/T6170	Nut M4	1	86	1E32FL. 6. 2	Lid Ass'y	1
21	GB119	Pin B4 × 10	4	43	1E36F-E-1	Cylinder	1	65	1E34F. 1. 1	Cleaner inside cover	1	87	1E40F-5A-3	Rubber washer	2
22	1E36F-E. 8-1	Crank Case	1	44	GB/T70. 1	Screw M5 × 18	4	66	GB/T9074. 4	Screw M5 × 55	2	88	1E36F-E-7	Cover	1
												89	GB/T9074. 4	Screw M4 × 10	1