

CERUTI

www.ceruticenter.it


ESPLOSO

Motore

26 CC EURO 1



1E33F-C
ASSEMBLY DRAWING OF ENGINE

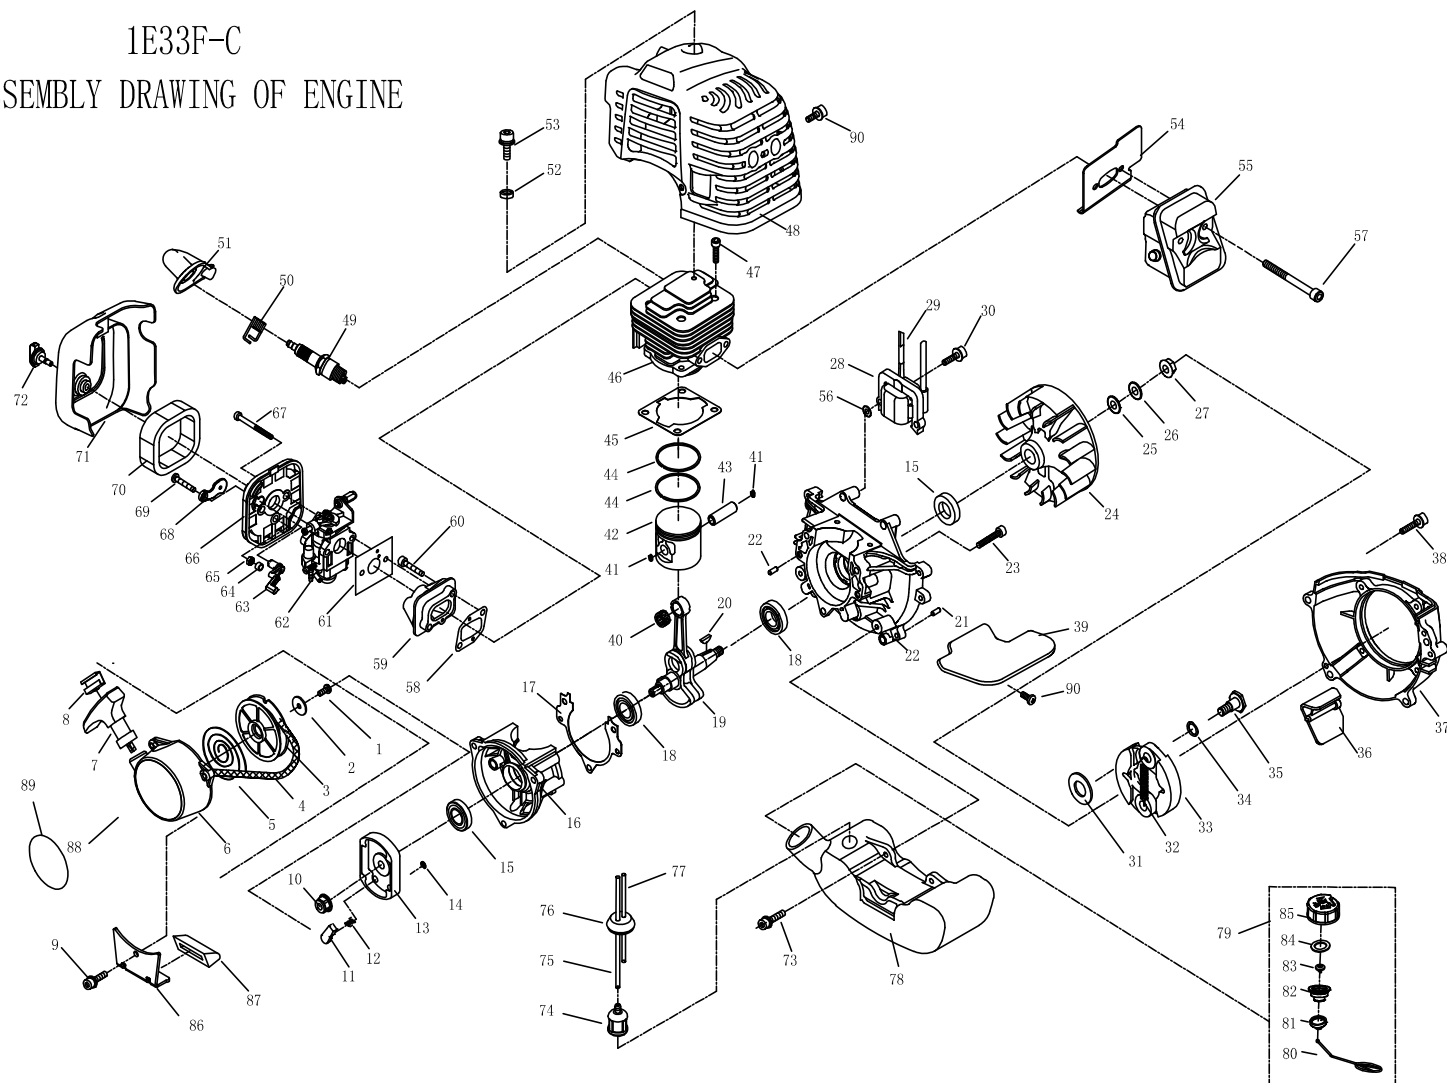

1E33F-C GASOLINE ENGINE (1) 1E33F-C GASOLINE ENGINE (2)

NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.
1	GB/T67	Screw M5×12	1	24	1E31F. 3. 2-2	MAGNETO ROTOR COMP	1	47	GB/T70. 1	Screw M5×16	4	70	1E34F. 1-1	Filter	1
2	1E36F. 1-4	Start Washer	1	25	GB/T859	Washer8	1	48	1E33F-C. 3	Guide Cover ASS'Y	1	71	1E33F-C. 1-1	Cleaner Outside Cover	1
3	1E36F. 1-3	Start Rope Reel	1	26	GB/T97. 1	Washer8	1	49	L6(LD)	Spark Plug	1	72	1E34F. 1. 2	Screw	1
4		Rope (φ3.5×860)	1	27	GB/T6170	Nut M8	1	50	1E36F-2C. 6-2	Spring	1	73	GB70+GB93+GB96	Screw M5×16	2
5	1E36F. 1-2	Recoil Spring	1	28	1E31F. 3. 2-1	IGNITION COIL COMP.	1	51	1E34F-EXL. 1-1	CAP	1	74	P40. 12. 2-3A	Cleaner Cover	1
6	1E36F. 1. 1. 1	Start Cover Ass'y	1	29	1E40F-5C. 1. 2A	Cord COMP.	1	52	1E36F-2C-1	Gasket	1	75	CG420. 1. 3. 2-2	Fuel Pipe 3×1×135	1
7	1E36F. 1-1	Starter Handle	1	30	GB70+GB93+GB97	Screw M5×20	2	53	GB70+GB93+GB97	Screw M5×18	1	76	EB-415. 4. 2-2	Plug	1
8	1E36F. 1-5	Ring	1	31	1E34F-11	Washer B	2	54	1E31F-5	Gasket	2	77	EB-415. 4. 2-4	Fuel Pipe 2.5×1.25×70	1
9	GB70+GB93+GB97	Screw M4×20	3	32	1E34F. 10C-1	Spring	1	55	1E31F. 2	Muffler	1	78	1E31F-HS. 4-1	Fuel Tank	1
10	GB/T6170	Nut M8	1	33	1E34F. 10. 1	Expander	2	56	1E33F-4	Washer	2	79	1E32FL. 6. 2	Lid Ass'y	1
11	1E46FP. 4-2	Start Claw	1	34	1E34F-13	Washer	2	57		Screw M5×50-10.9	2	80	1E32FL. 6. 2-4	Chain	1
12	1E36F. 1. 2-2	Start Spring	1	35	1E34F-12	Screw Pin	2	58	1E36F-2-2	Gasket	1	81	1E32FL. 6. 2-3	Casing	1
13	1E36F. 1. 2-1	Start Reel	1	36	1E33F-C-3	Flash Pan	1	59	1E36F-2A-2	Admitting Pipe	1	82	1E32FL. 6. 2-2	Inside Cover	1
14	GB/T896	Stop Ring 4	1	37	1E33F-C-1	Magneto Cover	1	60	GB70+GB93+GB97	Screw M5×18	2	83	EB-415. 4. 1. 1-1	Airscoop	1
15	1E36F. 2	Oil-Seal	2	38	GB70+GB93+GB97	Bolt M5×16	4	61	1E36F-2A-1	Gasket	1	84	CG420. 1. 3. 1-2	Gasket	1
16	1E31F. 8-2	Crank Case	1	39	1E33F-C-2	Adiabatic Pan	1	62	1E34F. 13A	Carburetor	1	85	1E32FL. 6. 2-1	Fuel Tank Lid	1
17	1E31F. 8-3	Gasket	1	40	1E31F. 4. 1	Bearing	1	63	1E34F. 1-2	Choker Handler	1	86	1E31F-6	Stand	1
18	GB/T276	Bearing 6201/P6	2	41	1E31F. 4-3	Ring	2	64	1E34F. 1. 1-1	Pipe	1	87	1E31F-4	Rubber Cover	1
19	1E31F. 4. 3	Crank Shaft	1	42	1E33F. 1. 2	Piston	1	65	1E34F. 1-7	Stop Ring	1	88	1E36F. 1	Starter	1
20	GB/T1099	Key 3×5×13	1	43	1E31F. 4-2	Piston Pin	1	66	1E34F. 1. 1	Cleaner Inside Cover	1	89	1E36F-19	Label	1
21	GB/T119	Pin B4×10	4	44	1E33F. 1-1	Piston Ring	2	67	GB/T9074. 4	Screw M5×50	2	90	GB70+GB93+GB97	Screw M5×12	2
22	1E31F. 8-1	Crank Case	2	45	1E31F-2	Gasket	1	68	1E34F. 1-3	Choker	1				
23	GB/T 70. 1	Screw M5×25	3	46	1E33F-1	Cylinder	1	69	GB/T845	Screw ST4.2×12-F-H	1				