


ESPLOSO

Potatore asta telescop.

QJB270

The Parts List Model 1E34F-E Engine

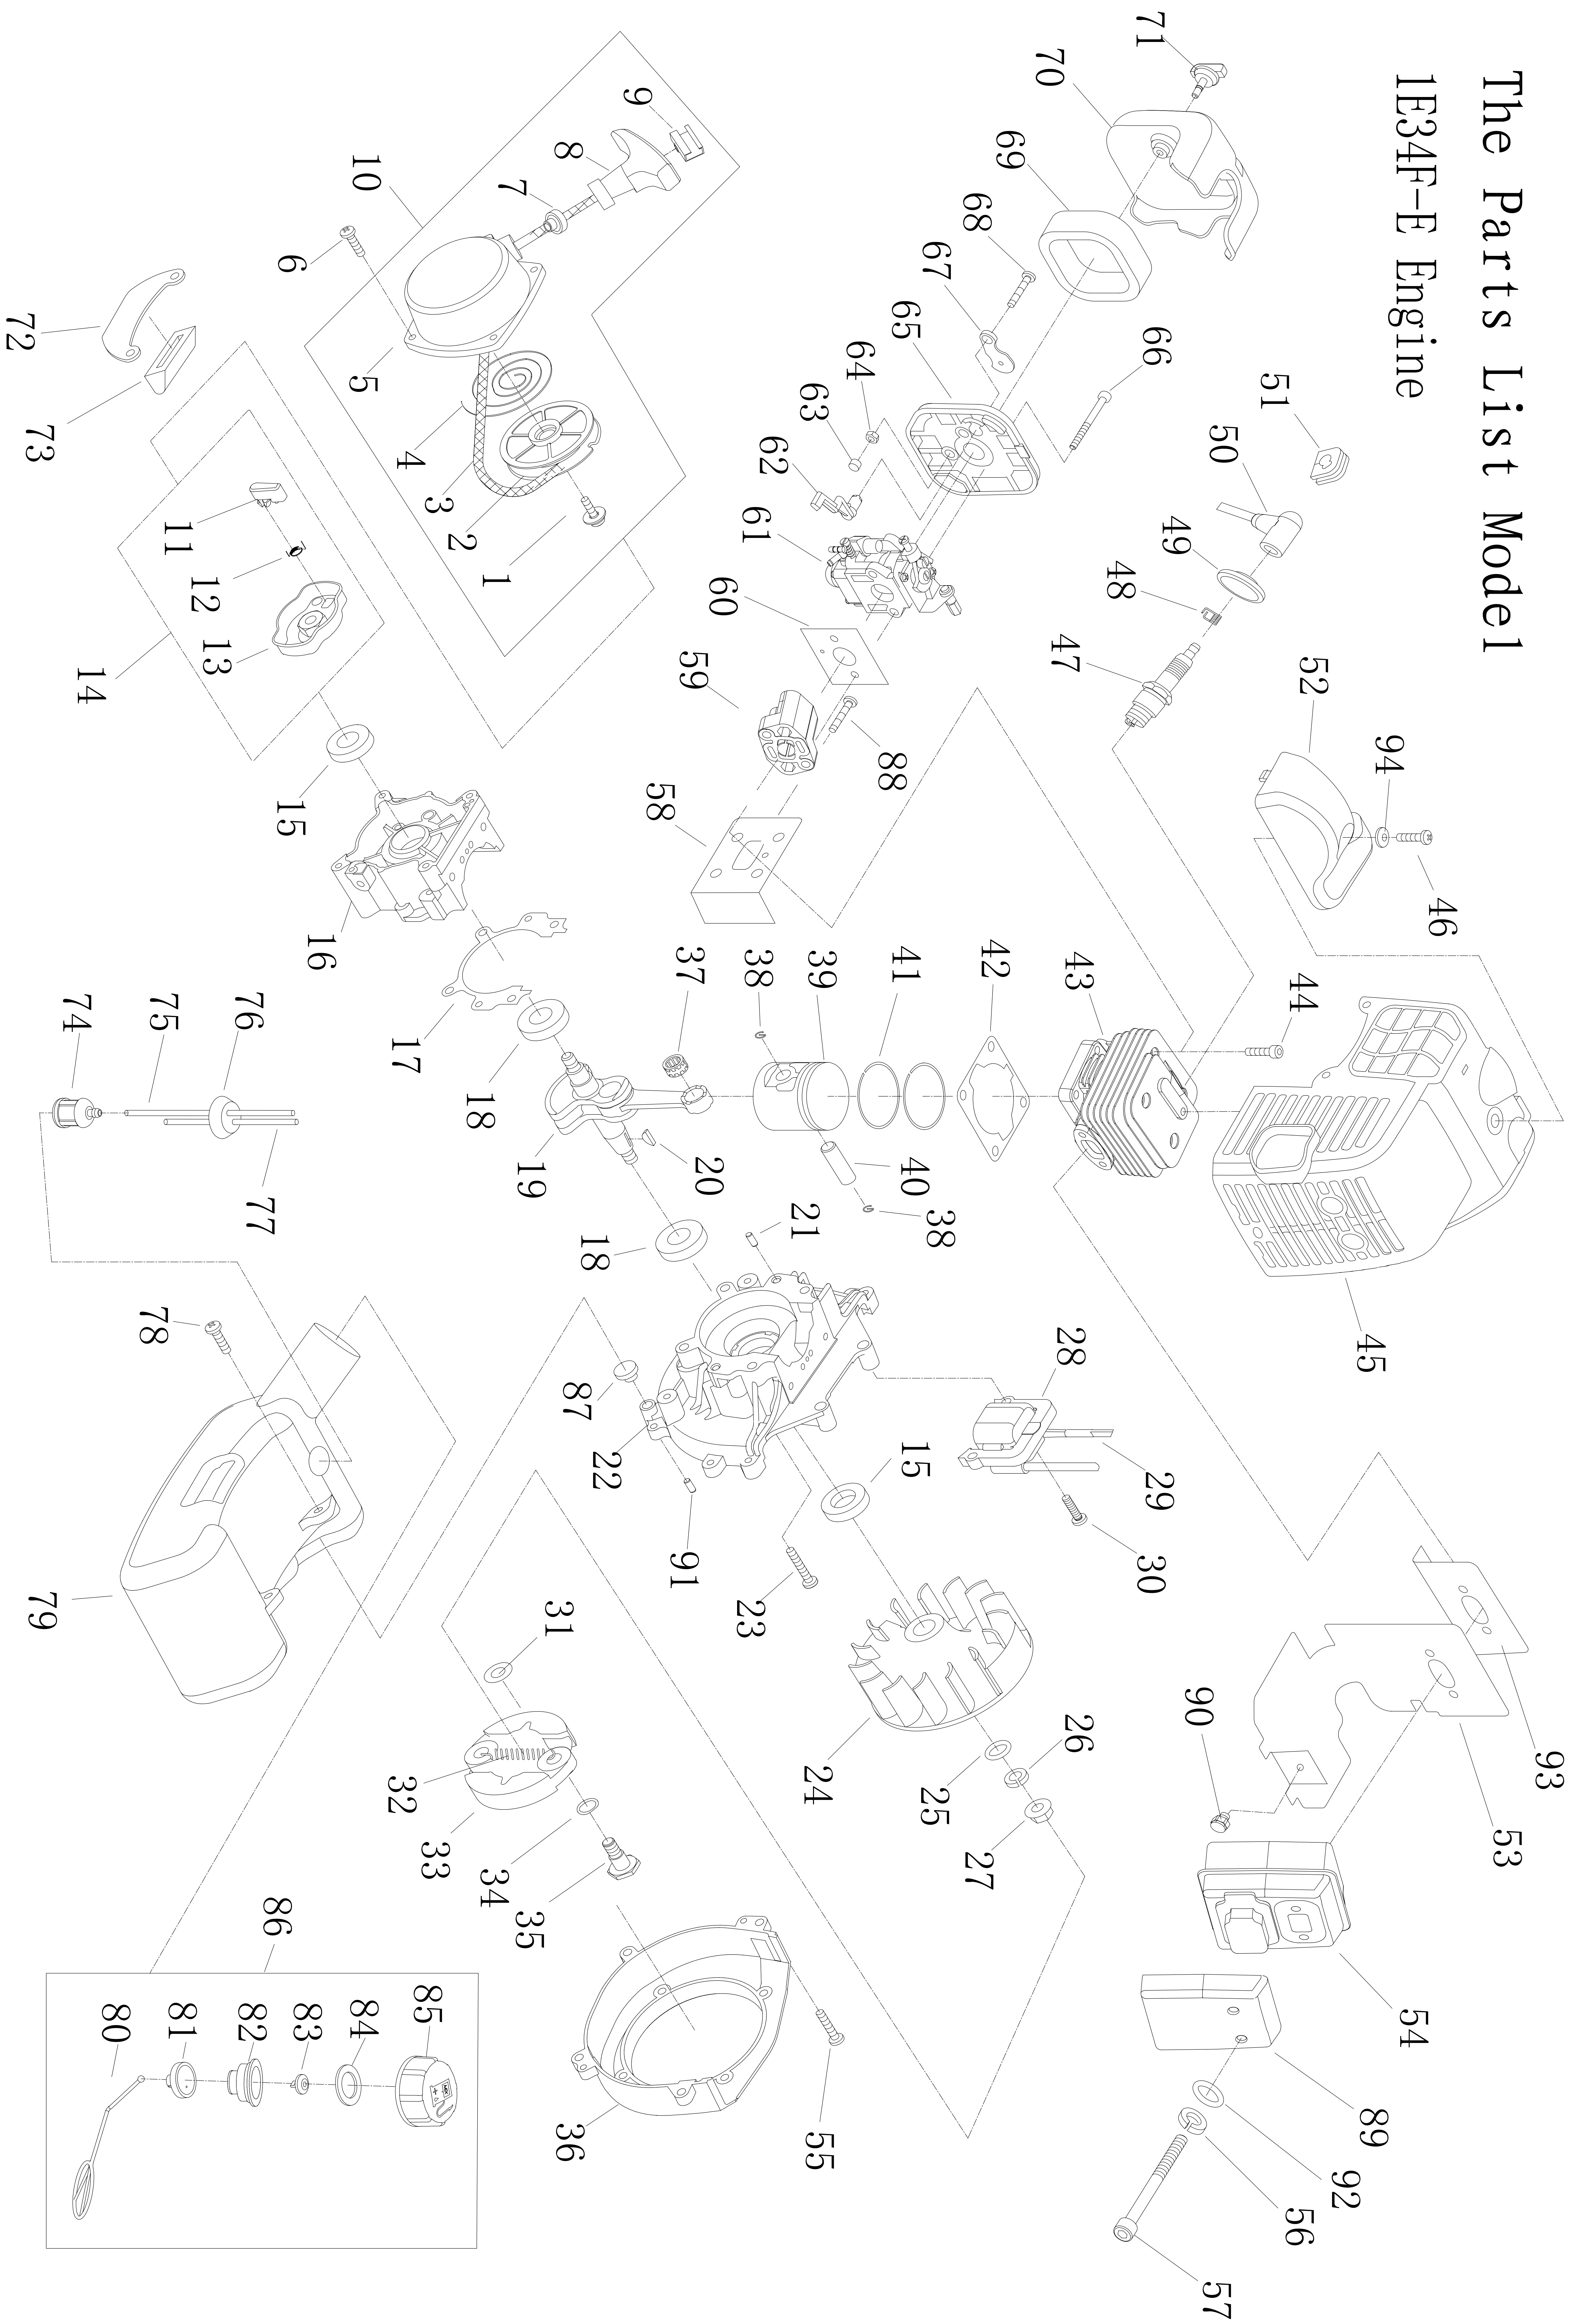

1E34F-E GASOLINE ENGINE (1)


NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.
1	GB/T9074.6	Screw M5×10	1	25	GB/T859	Washer 8	1
2	1E34F.11-2	Start Rope Reel	1	26	GB/T97.1	Washer 8	1
3	1E34F.11-3	Rope	1	27	GB/T6171	Nut M8×1	1
4	1E34F.11-1	Recoil Spring	1	28	1E34F-2E.3.2	IGNITION COIL COMP.	1
5	1E34F.11.1	Start Cover Ass'y	1	29	1E36F-2.3.1	Cord Comp.	1
6	GB/T9074.4	Screw M4×16	4	30	GB9074.13	Screw M5×20	2
7	1E34F.11.1-1	Guide Bushing	1	31	1E34F-11	Washer	2
8	1E36F.1-1	Start Handle	1	32	1E34F.10-1	Spring	1
9	1E36F.1-5	Resist Gasket	1	33	1E34F.10.1	Expander	2
10	1E34F.11G	Starter	1	34	1E34F-13	Spring	2
11	1E34F.8-1	Start pole	1	35	1E34F-12	Screw Pin	2
12	1E34F.8-2	Spring	1	36	1E31FE-HS-3	Fan Cover	1
13	1E34F.8.1	Start Reel	1	37	1E31F.4.1	Bearing	1
14	1E34F.8	Start Reel Ass'y	1	38	1E34F.6-2	Ring	2
15	1E36F.2	Oil-seal	2	39	1E34F-E.4-1	Piston	1
16	1E34F-E.6-1	Crank Case	1	40	1E34F.6-3	Piston Pin	1
17	1E34F-E.6-2	Gasket	1	41	1E34F.6-5	Piston Ring	2
18	GB/T276	Bearing 6001/P5	2	42	1E34F-E-3	Gasket	1
19	1E34F-E.4.1	Crank Shaft	1	43	1E34F-2E-1	Cylinder	1
20	1E40FP-3Z.3-1	Key 3x5x13	1	44	GB/T70.1	Screw M5×20	4
21	GB/T119.2	Pin B3×10	2	45	1E34F-E.5	Guide Cover Ass'y	1
22	1E34F-E.6-3	Crank Case	1	46	GB/T9074.4	Screw M5×20	1
23	GB/T70.1	Screw M5×30	4	47	L8RTC	Spark Plug	1
24	1E34F-2E.3.1	MAGNETO ROTOR COMP.	1	48	1E40F-3A.8-2	Spring	1

1E34F-E GASOLINE ENGINE (2)

N0.	Part No.	Part Name	Qty.	N0.	Part No.	Part Name	Qty.
49	1E34F. 5-3	Plug Cap	1	73	1E31F-4	Rubber Cover	1
50	1E34F-E. 3-1	Cap	1	74	1E34F. 9. 2-3A	Cleaner Cover	1
51	1E40F-5. 3-1	Plug	1	75	1E34F. 9. 2-2	Fuel Pipe	1
52	1E34F-E-4	Cover	1	76	1E36FF. 8. 1-1	Plug	1
53	1E34F-E-2	Gasket	1	77	GB/T13527. 1	Fuel Pipe LS-3×1×85	1
54	1E34F-2E. 2	Muffler	1	78	GB/T9074. 4	Screw M5×16	2
55	GB/T9074. 13	Screw M5×16	4	79	1E31FE. 8-1	Fuel Tank	1
56	GB/T93	Washer 5	2	80	1E32FL. 6. 2-4	Chain	1
57	GB/T70. 1	Screw M5×55-12.9	2	81	1E32FL. 6. 2-3	End Cover	1
58	1E34F-E-8	Gasket	1	82	1E32FL. 6. 2-2	Inside Cover	1
59	1E34F-E. 8	Admitting Pipe	1	83	EB-415. 4. 1. 1-1	Inlet	1
60	1E36F-E-11	Gasket	1	84	CG420. 1. 3. 1-2	Gasket	1
61	1E34F-2E. 1A	Carburetor	1	85	1E32FL. 6. 2-1	Fuel Tank Lid	1
62	1E34F. 1-2	Choker Handle	1	86	1E32FL. 6. 2	Lid Ass'y	1
63	1E34F. 1-7	Stop ring	1	87	1E40F-5A-3	Rubber washer	2
64	GB/T6170	Nut M4	1	88	GB/T9074. 4	Screw M5×25	2
65	1E34F. 1. 1	Cleaner inside cover	1	89	1E34F-E-7	Cover	1
66	GB/T9074. 4	Screw M5×55	2	90	GB/T9074. 4	Screw M4×8	1
67	1E34F. 1-3	CHOKER	1	91	GB/T119. 2	Pin B4×10	2
68	GB/T845	Screw ST4. 2×12-F-H	1	92	GB/T97. 1	Washer 5	2
69	1E34F. 1-1	Filter Net	1	93	HA28-6	Gasket	1
70	1E34F. 1-4	Cleaner Outside Cover	1	94	1E36F-2C-1	Gasket	1
71	1E34F. 1. 2	Screw	1				
72	1E34F-E-6	Stand	1				


POLE SAW MACHINE SPARE PARTS LIST QJB270

1/5

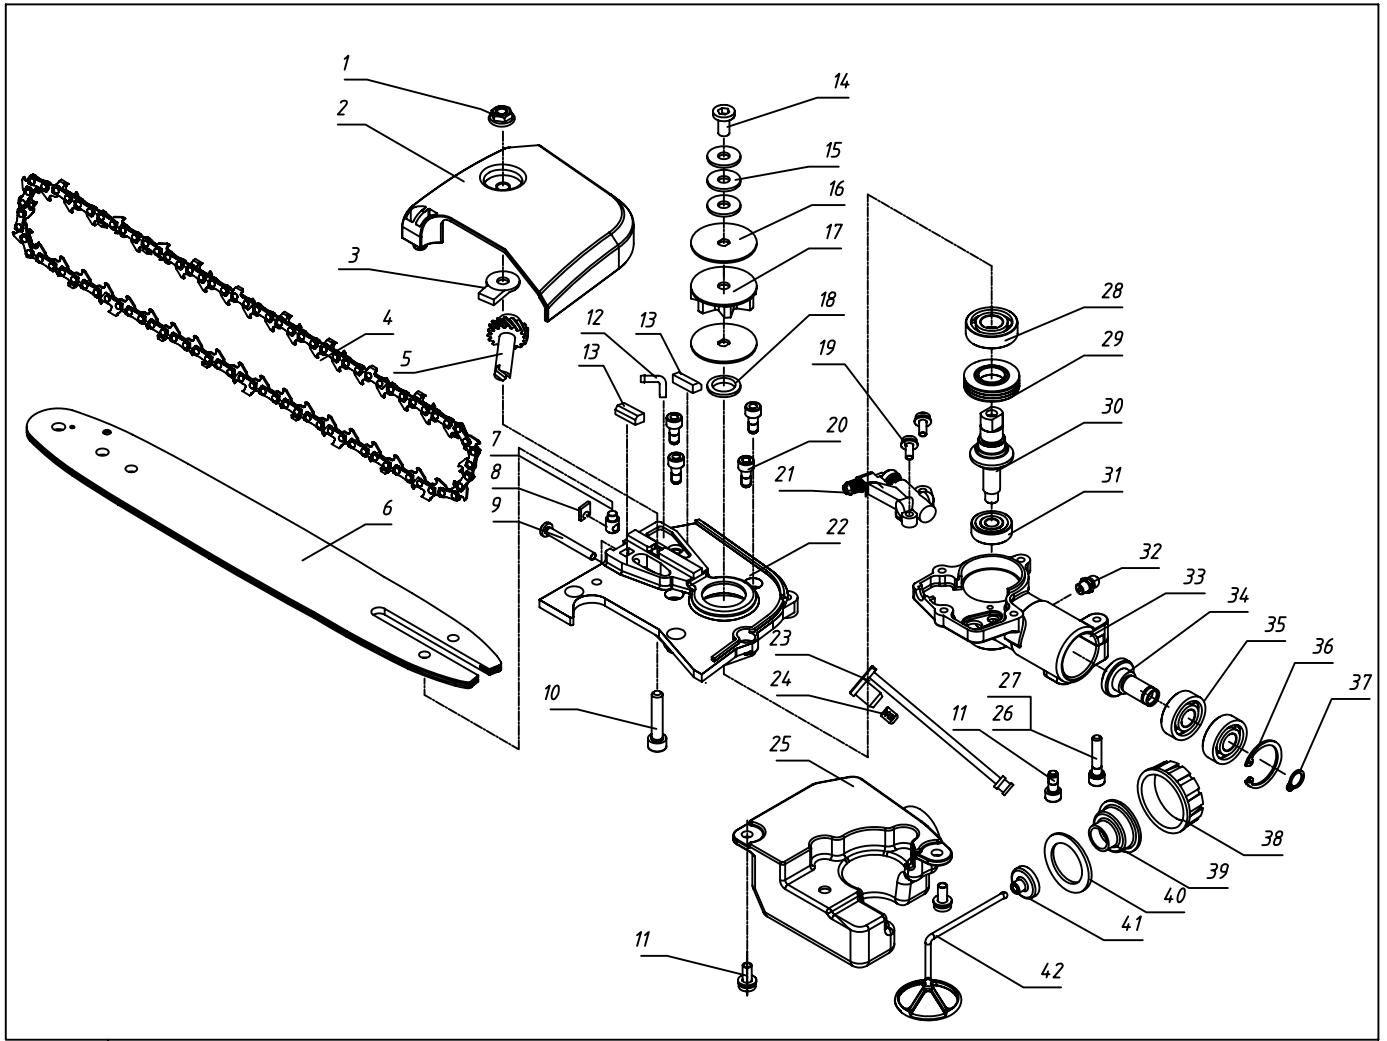


A

NO.	PART NO.	DESCRIPTION	QTY.	NO.	PART NO.	DESCRIPTION	QTY.	NO.	PART NO.	DESCRIPTION	QTY.
A	QJB270. 2	Cutter Head		15	QJB270. 2-3	Washer	3	30	QJB270. 2. 1. 1	Right pinion	1
1	GB/T6177	Nut M6	1	16	QJB270. 2-5	Baffle	2	31	GB/T276	Bearing 627-Z	1
2	QJB270. 2. 3	Cover Borad Comp	1	17	QJB270. 2-2	Chain wheel	1	32	GB/T1152	Oil cup M6	1
3	QJB270. 2. 2-4	Chain wheel Cover	1	18	QJB270. 2-1	Washer	1	33	GJ330. 1. 1-1	Gear case assy	1
4	LY/T1187	ChainJL9-3	1	19	GB/T70. 1	Screw M4×12	2	34	GJ330. 1. 1-4	Left pinion	1
5	QJB270. 2. 2-6	Gear	1	20	GB/T70. 1	Screw M5×12	4	35	GB/T276	Bearing 6000-2RS/P5	2
6	GJ330. 1. 4	"10" Guide board	1	21	GJ330. 1. 1. 1	Worm wheel ass'y	1	36	GB/T893. 2	Stop ring 26	1
7	QJB270. 2. 2-3	Adjust pin	1	22	QJB270. 2. 2-5	Box cover	1	37	GB/T894. 1	Stop ring 10	1
8	QJB270. 2. 2-1	Fixed Block	1	23	GJ330. 1. 1. 2-1	grease-vitta	1	38	GJ330-YXG	Fuel Tank Lid	1
9	QJB270. 2. 2-2	Gear	1	24	GJ330. 1. 1. 2. 1	Filter	1	39	1E32FL. 6. 2-2	Inside Cover	1
10	GB/T70. 1	Screw M6×30	1	25	GJ330. 1. 2. 1	Oil box	1	40	CG420. 1. 3. 1-2	Gasket	1
11	GB/T9074. 4	BOLT M5×16	2	26	GB/T70. 1	Screw M5×25	1	41	1E32FL. 6. 2-3	Lid	1
12	QJB270. 2. 2-7	Connecting pipe	1	27	GB/T93	Washer 5	1	42	1E32FL. 6. 2-4	Chain	1
13	YD-40-13	Protection Block	2	28	GB/T276	Bearing 6001-2RS/P5	1				
14	QJB270. 2-4	Screw	1	29	GJ330. 1. 1-3A	Worm	1				

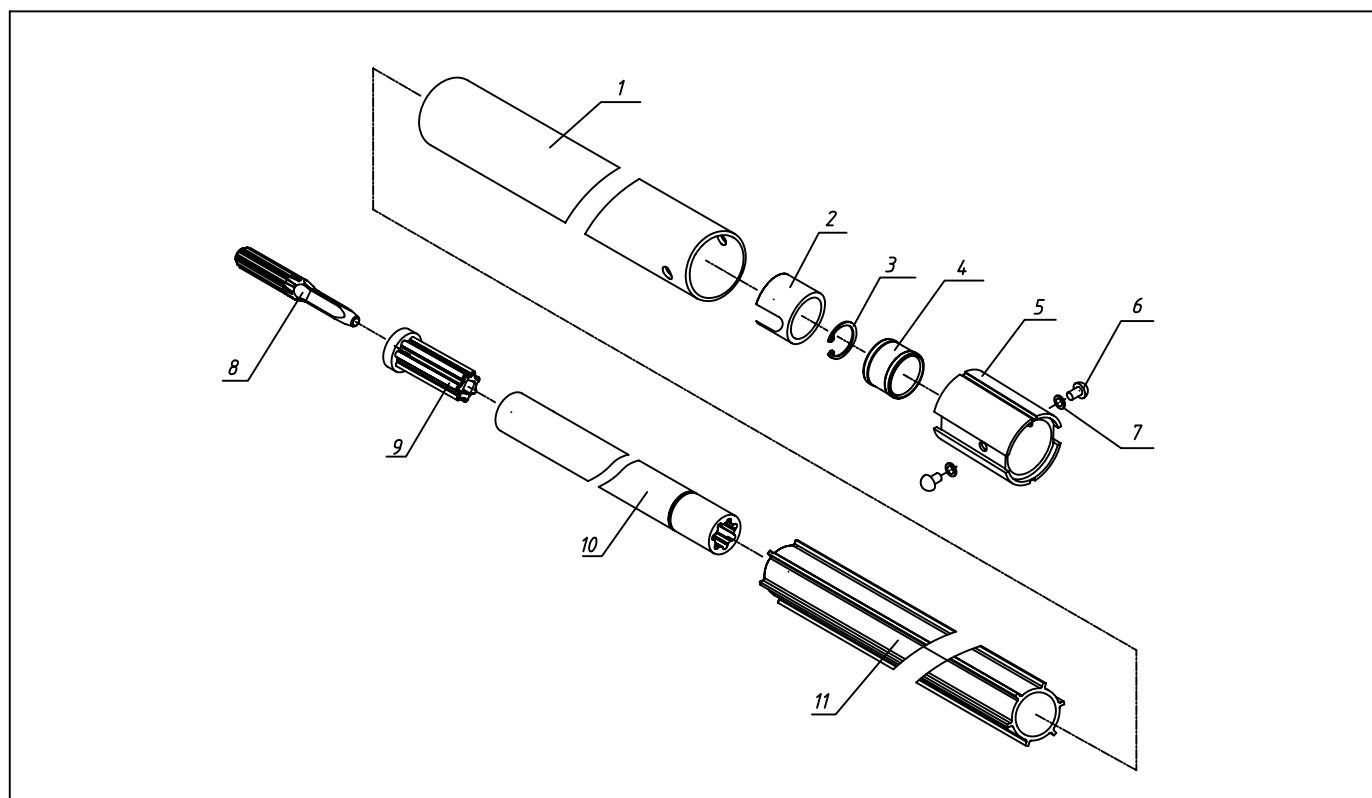


B

NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.
B	QJB270. 1. 1	Front Shaft Ass'y		6	GB12618	Rivet 4×8	2
1	QJB270. 1. 1-1A	Front Pipe	1	7	GB/T97. 1	Washer 4	2
2	QJB270. 1. 1-3A	Lip Block	1	8	QJB270. 1. 1. 1-1	Joint	1
3	GB894. 1	Stop ring 15	1	9	QJB270. 1. 1. 1-2	Rubber Plug	1
4	QJB270. 1. 1-4	Shaft Sleeve I	1	10	QJB270. 1. 1. 1-3	Front Shaft	1
5	QJB270. 1. 1. 2	Bearing Ass'y	1	11	QJB270. 1. 1-2A	Front Shaft Bracing	1

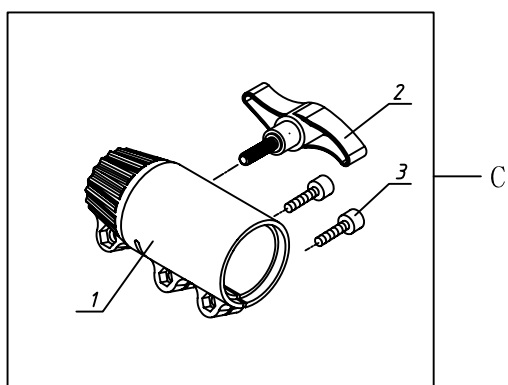

C

NO.	PART NO.	PART NAME	QTY.
C	QJB270. 1. 2	Connecting Sleeve Ass'y	
1	QJB270. 1. 2. 2	Connecting Sleeve	1
2	QJB270. 1. 2. 1	Handle	1
3	GB/70. 1	Screw M5×20	2

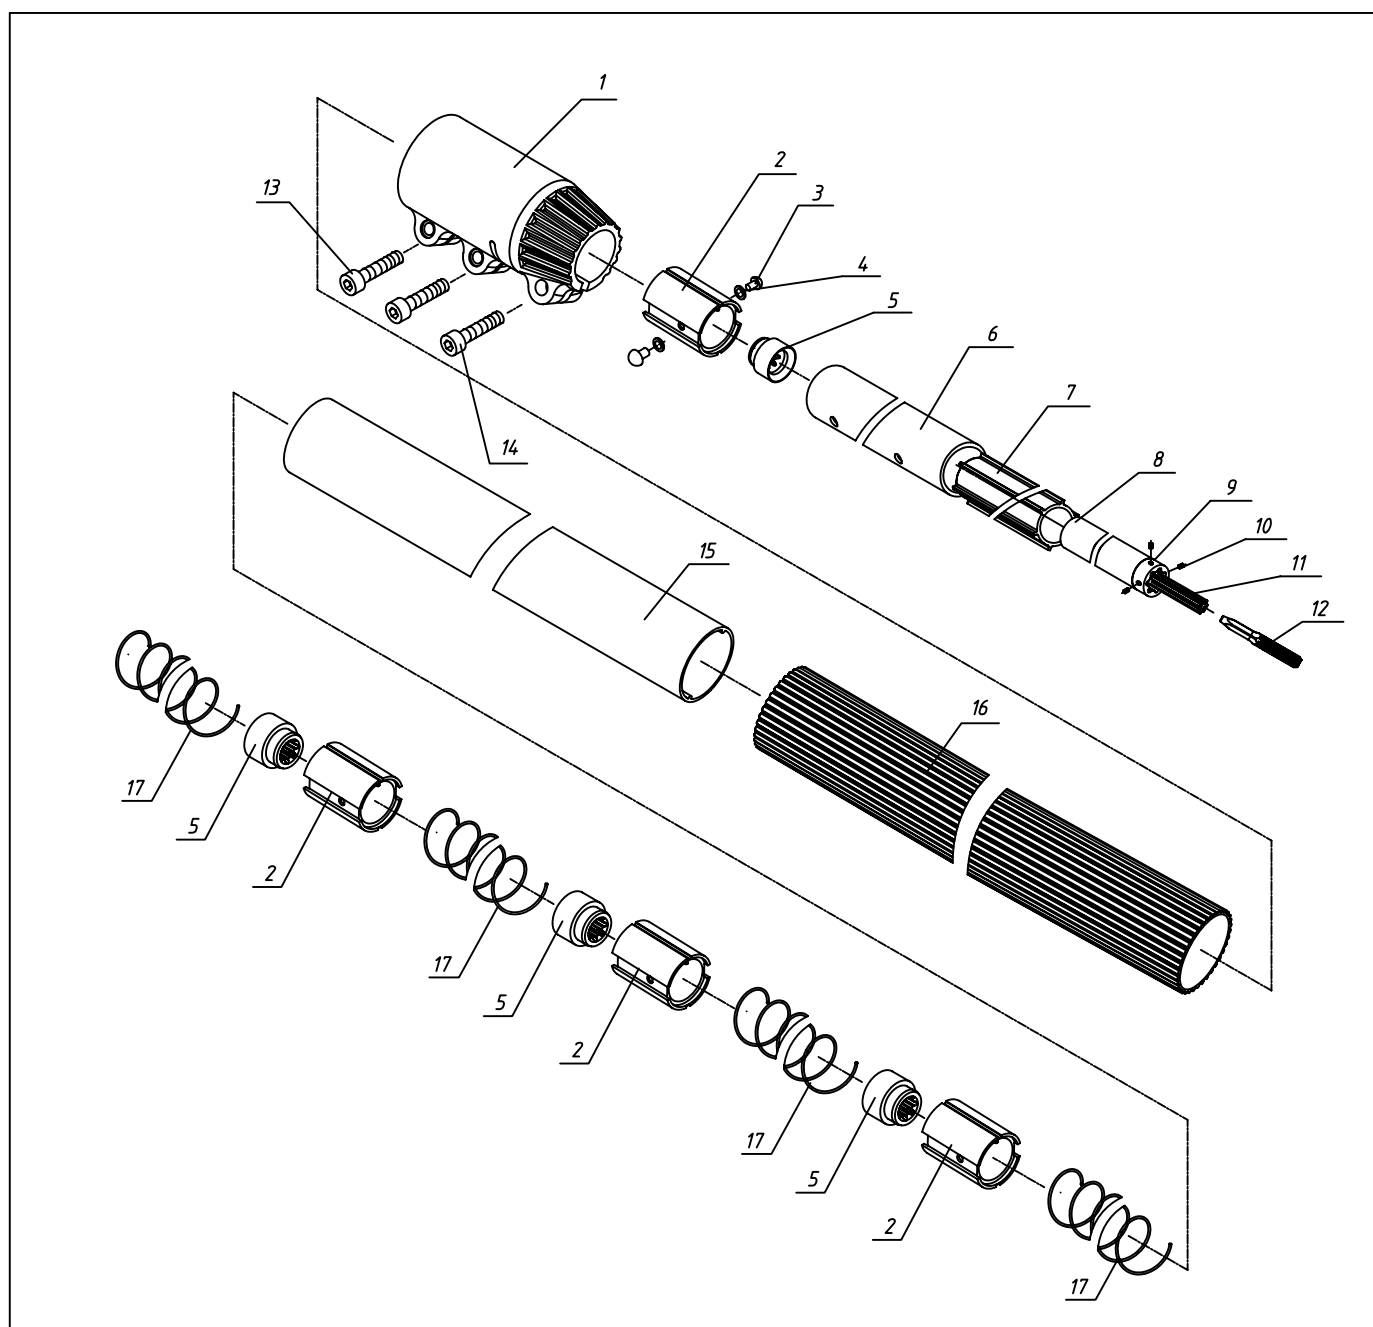


D

NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.
D	QJB270. 1. 3	Back Shaft Ass'y		9	QJB270. 1. 3-6	Lock Ring with Screw	1
1	QJB270. 1. 2. 2	Connecting Sleeve	1	10	GB/T77	Set Screws M4×5	3
2	QJB270. 1. 1. 2	Bearing Ass'y	4	11	QJB270. 1. 3. 1-1	Back Shaft	1
3	GB12618	Rivet 4×8	2	12	QJB270. 1. 1. 1-1	Joint	1
4	GB/T97. 1	Washer 4	2	13	GB/70. 1	Screw M5×20	2
5	QJB270. 1. 3-4	Shaft Sleeve II	4	14	GB/70. 1	Screw M6×20	1
6	QJB270. 1. 3. 2-1	Thin Pipe	1	15	QJB270. 1. 3-2	Thick Pipe	1
7	QJB270. 1. 3. 2-2	Back Shaft Bracing	1	16	QJB270. 1. 3-1	Rubber Cover	1
8	QJB270. 1. 3-5	Damping Shaft	1	17	QJB270. 1. 3-3	Spring	4


POLE SAW MACHINE SPARE PARTS LIST QJB270

4/5

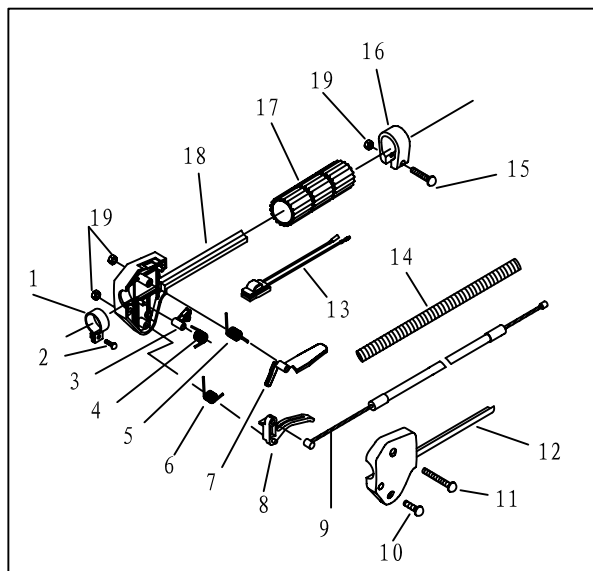


E

NO.	PART NO.	PART NAME	QTY.
E	CG260. 2	Level Ass'y	
1	CG305F. 13. 2	Clamp	1
2	GB/T9074. 4	Screw M5×16	1
3	CG305F. 13-10	Tine	1
4	CG305F. 13-11	Spring	1
5	CG305F. 13-9	Spring	1
6	CG305F. 13-1	Spring	1
7	CG305F. 13-8	Safety Lever	1
8	CG305F. 13-2	Throttle Lever	1
9	CG330A-3E. 2. 1	Cable Comp.	1
10	GB/T9074. 4	Screw M5×25	2
11	GB/T818	Screw M5×30	1
12	CG305F. 13-3	Box, Left	1
13	CG260. 2. 1	Stop Switch	1
14	BG-328A-2	Tube	1
15	GB/T9074. 4	Screw M5×25	1
16	CG305F. 13-5	Clamp	1
17	CG305F. 13-6	Rubber Cover	1
18	CG305F. 13-4	Box, Right	1
19	GB/T889. 1	Nut M5	3

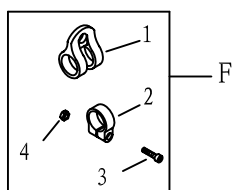


F

NO.	PART NO.	PART NAME	QTY.
F	CG260. 3	Holder Ass'y	
1	CG260. 3. 1	Harness Clamp	1
2	CG260. 3-1	Clamp	1
3	GB/T70. 1	Screw M5×20	1
4	GB/T889. 1	Nut M5	1

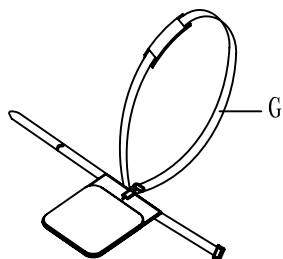

G

NO.	PART NO.	PART NAME	QTY.
G	CG260. 4	Harness Ass'y	1

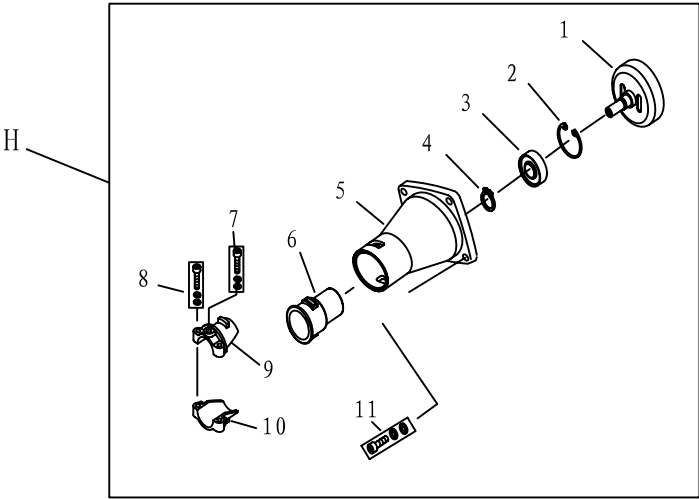

NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.
H	CG260A. 1A	Clutch Comp.		7	GB/70+GB93+GB97	Screw M5×12	1
1	CG260A. 1A. 1	Clutch Drum Comp.	1	8	GB/70+GB93+GB97	Screw M5×25	2
2	GB/T893. 1	Stop Ring 35	1	9	CG305F. 14-4	Clamp A	1
3	GB/T276	Bearing 6202-2RZ/P6	1	10	CG305F. 14-3	Clamp B	1
4	GB/T894. 1	Stop Ring 15	1	11	GB/70+GB93+GB97	Screw M6×20	4
5	CG261. 1-1	Linker	1				
6	CG305F. 14-2	Rubber Cover	1				