



ESPLOSO
Scuotitore olive
201108

MACHINE SPARE PARTS LIST 4GS-50

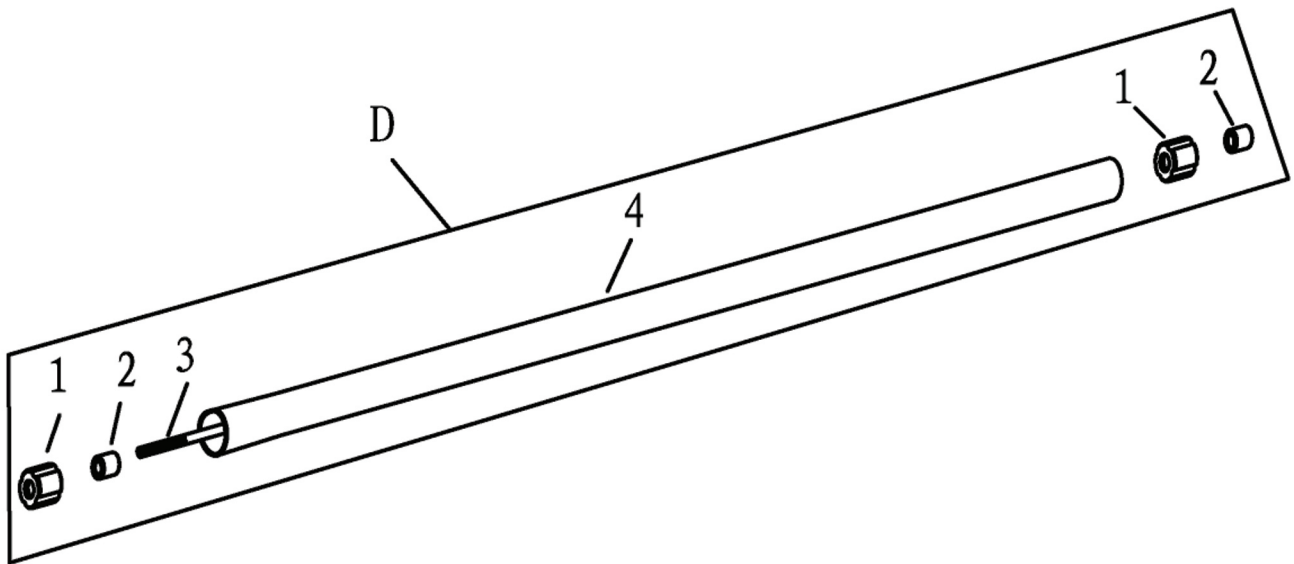

NO.	PART NO.	PART NAME	QTY.
D	4GS-50. 3	Pipe Comp.	
1	BG-328. 9. 4-5	Rubber Cover	6
2	BG-328. 9. 4-4	Oil-bearing	6
3	4GS-50. 3-1	Drive Shaft	1
4	4GS-50. 3-2	Pipe	1

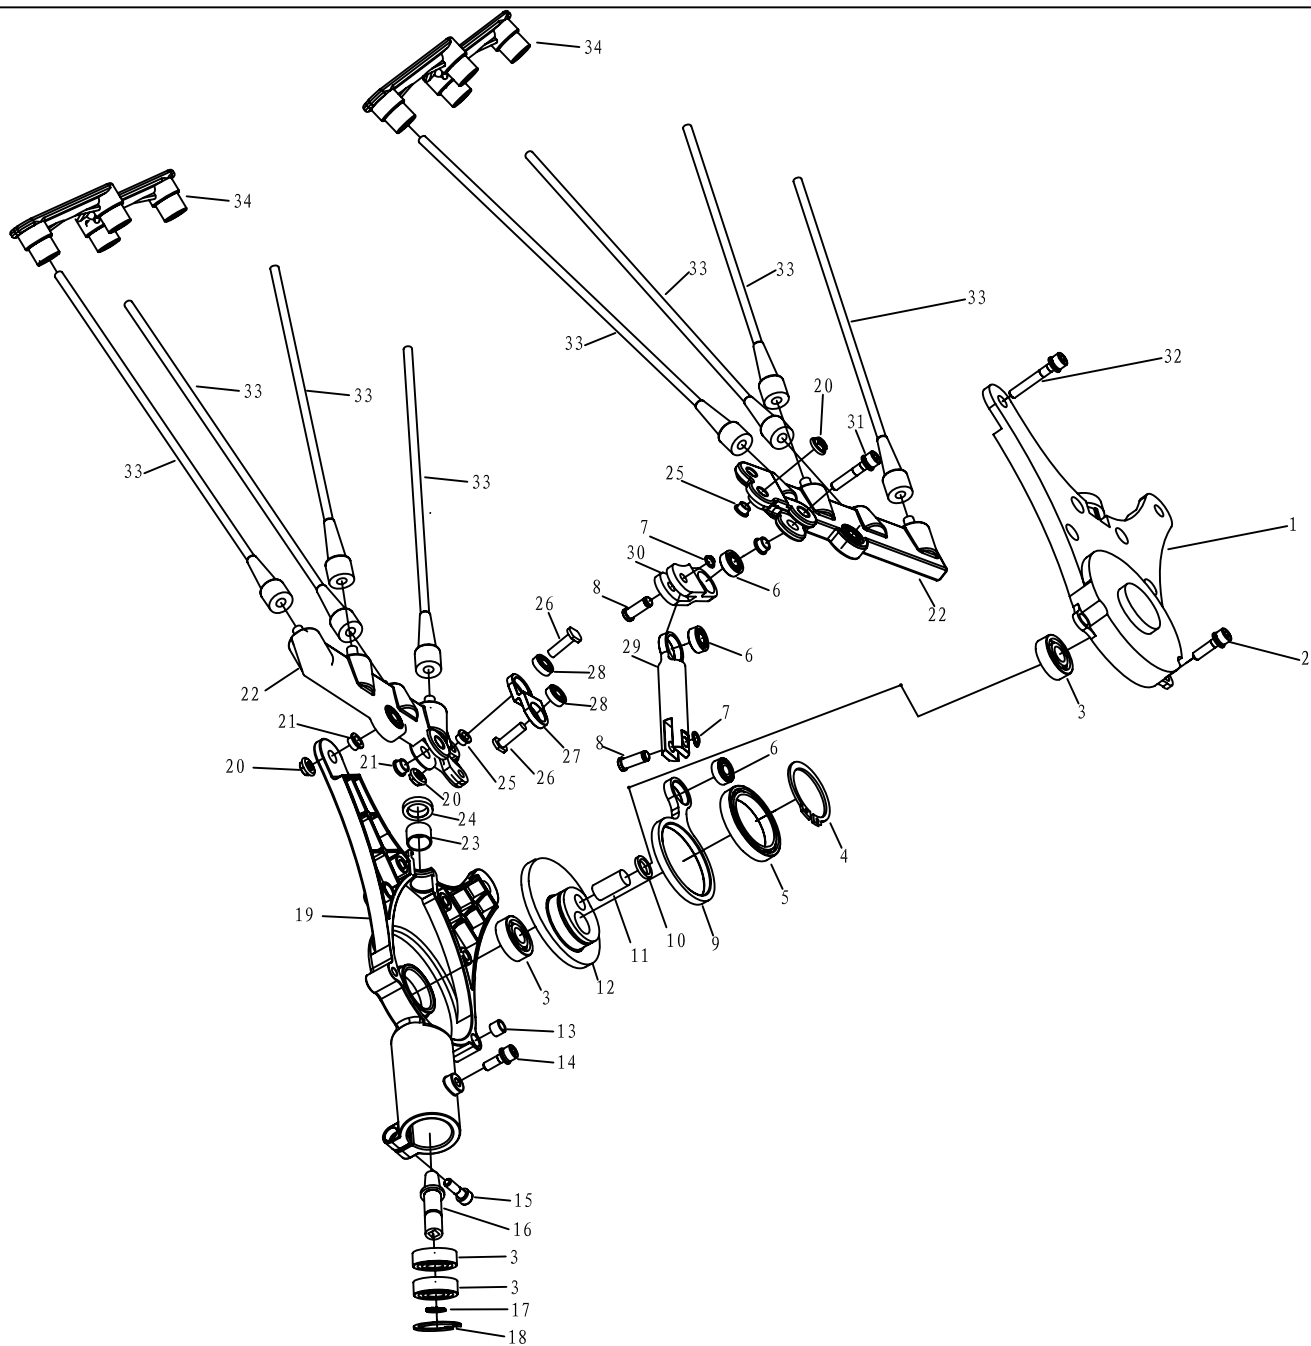

NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	PART NAME	QTY.
1	4GS-50.1-3	Case Cover	1	14	GB/T70+GB93+GB97	Screw M5 × 16	1	27	4GS-50.1-15	Plate	1
2	GB/T70+GB93+GB97	Screw M5 × 20	6	15	GB/T70.1	Screw M5 × 20	1	28	GB/T276	Bearing 619/5-RZ/P6	2
3	GB/T276	Bearing 6000-2RZ/P5	4	16	4GS-50.1.2	Pinion	1	29	4GS-50.1-5	Drive Shaft	1
4	GB894.1	Stop Ring 35	1	17	GB894.1	Stop Ring 10	1	30	4GS-50.1-7	Plate	1
5	GB/T276	Bearing 61807-2RZ/P6	1	18	GB893.2	Stop Ring 26	1	31	GB/T70+GB93+GB97	Screw M5 × 25	1
6	GB/T276	Bearing 619/6-RZ/P6	3	19	4GS-50.1-8	Wheel Box	1	32	GB/T70+GB93+GB97	Screw M5 × 35	2
7	GB894.1	Stop Ring 6	2	20	GB/T6183	Nut M5	5	33	4GS-50.1.3	Pole	8
8	4GS-50.1-6	Shaft	2	21	4GS-50.1-12	Harness	6	34	4GS-50.1-16	Plank	2
9	4GS-50.1-9	Crank Shaft	1	22	4GS-50.1.1	Gatherer	2	35			
10	4GS-50.1-2	Washer	1	23	4GS-50.1-4	Harness	1	36			
11	4GS-50.1-10	Shaft	1	24	4GS-50.1-19	felt	1	37			
12	4GS-50.1-11	Gear	1	25	4GS-50.1-14	Harness φ5	2	38			
13	6MF-30.1-4	Pin	2	26	4GS-50.1-18	Screw	2	39			