

CERUTI

www.ceruticenter.it

ESPLOSO


Soffiatore

EBV230E



KASEI


FIGURE 1 EXPLODED
VIEW OF EBV230E.1

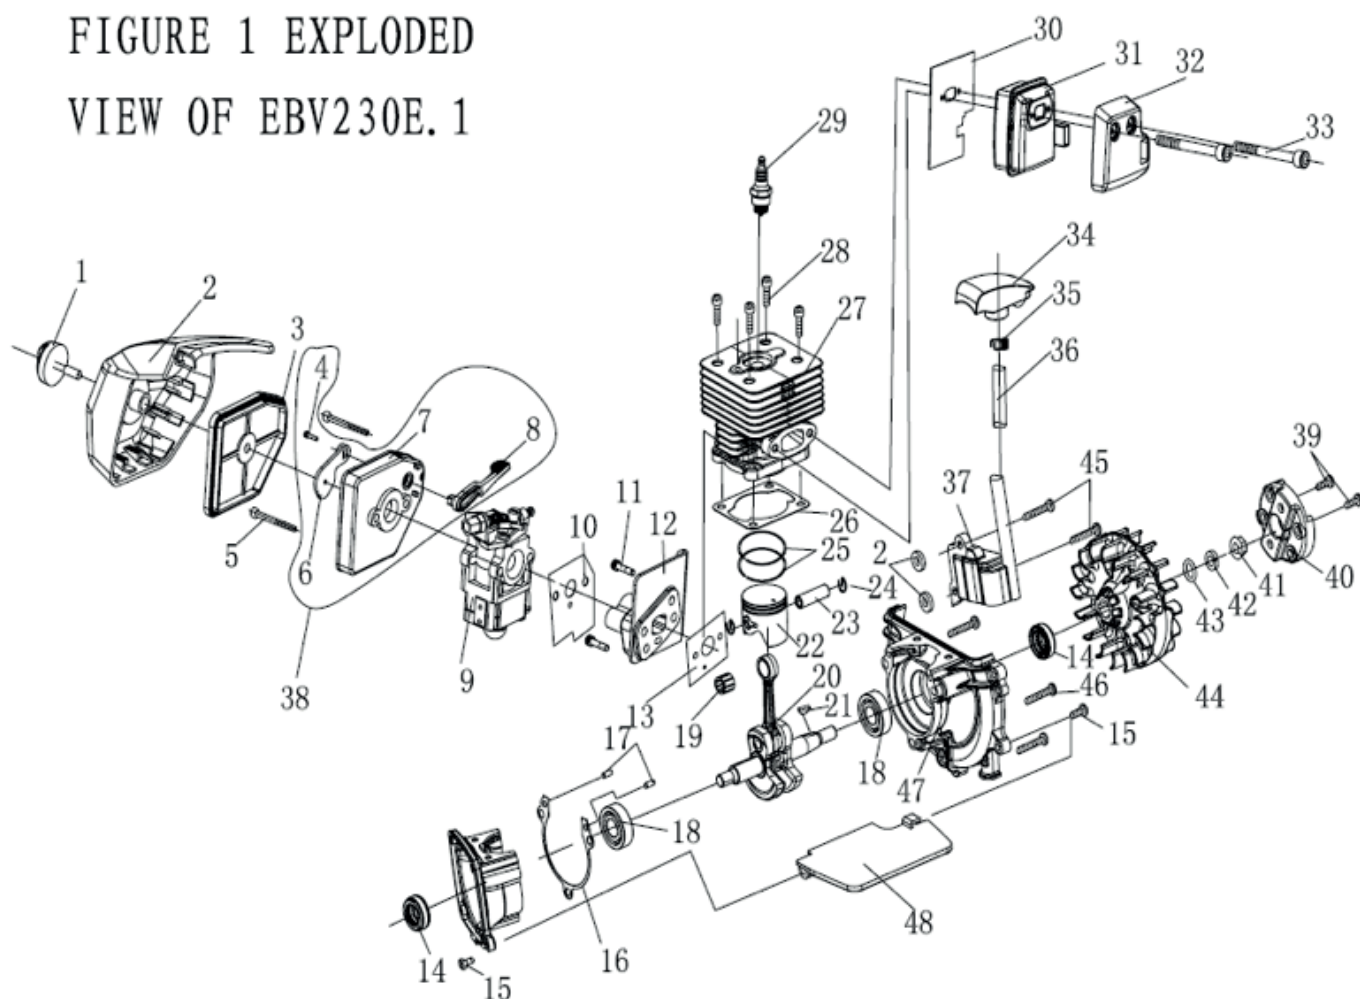

1	EBV230E.1.5	SCREW	1
2	EBV230E.1.4-1	OUTSIDE COVER	1
3	EBV230E.1.4.2	FILTER NET	1
4	*	SCREW 3×8	1
5	GB70.1+GB93+GB97	M5×65	2
6	EBV230E.1.4.1-2	Choke	1
7	EBV230E.1.4.1-1	INSIDE COVER	1
8	EBV230E.1.4.1-3	Choke HANDLE	1
9	EBV230E.1.1	CARBURETOR	1
10	EBV230E.1-5	GASKET	1
11	GB70.1+GB93+GB97	SCREW M5×25	1
12	EBV230E.1.3	ADMITTING PIPE	1
13	1E34F-2	GASKET	1
14	1E36F.2	OIL SEAL	2
15	GB70.1+GB93+GB97	SCREW M5×12	1
16	P23.11-3	CRANK CASE GASKET	1
17	GB119.1	PIN B4*8	2
18	GB276	BEARING 6001-P6	2
19	KBK081211.5	NEEDLE BEARING	1
20	SLP500.1.3B.1	CRANK SHAFT COMP	1
21	1E40FP-3Z.3-1	KEY	1

22	P23.6-1	PISTON	1
23	P23.5.1.2	CARBURETOR	1
24	1E34F.6-2	PISTON PIN CIRCLIP	2
25	P23.6-2	PISTON RING	2
26	P23-2	GASKET	1
27	P23-1	CYLINDER	1
28	GB70.1	M5×16	4
29	CMR6A	PLUG	1
30	EBV230E.1-3	MUFFLER GASKET	1
31	EBV230E.1.2	MUFFLER	1
32	EBV230E.1-1	MUFFLER COVER	1
33	GB70.1+GB93	SCREW M5×55	1
34	HP23.2.1-1	CAP	1
35	HP23.2.1-2	SPRING	1
36	*	6*60 PIPE	1
37	P23.5.1.2	IGNITION COIL COMP	1
38	EBV230E.1.4.1	INSIDE COVER 'ASSEMBLAGE	1
39	GB70+GB93+GB848	SCREW M6×16	2
40	SLP500.1.9	START REEL	1
41	GB6177.1	NUT 8	1
42	GB93	WASHER 8	1
43	GB97	WASHER 8	1
44	EBV230E.1.6-1	FLY WHEEL	1
45	GB70+GB93+GB97	SCREW M4×20	2
46	GB70	SCREW M5×20	3
47	P23.11-1	REAR HALF CRANK CASE	1
48	EBV230E.1-4	GASKET	1

FIGURE 2 EXPLODED
VIEW OF EBV230E

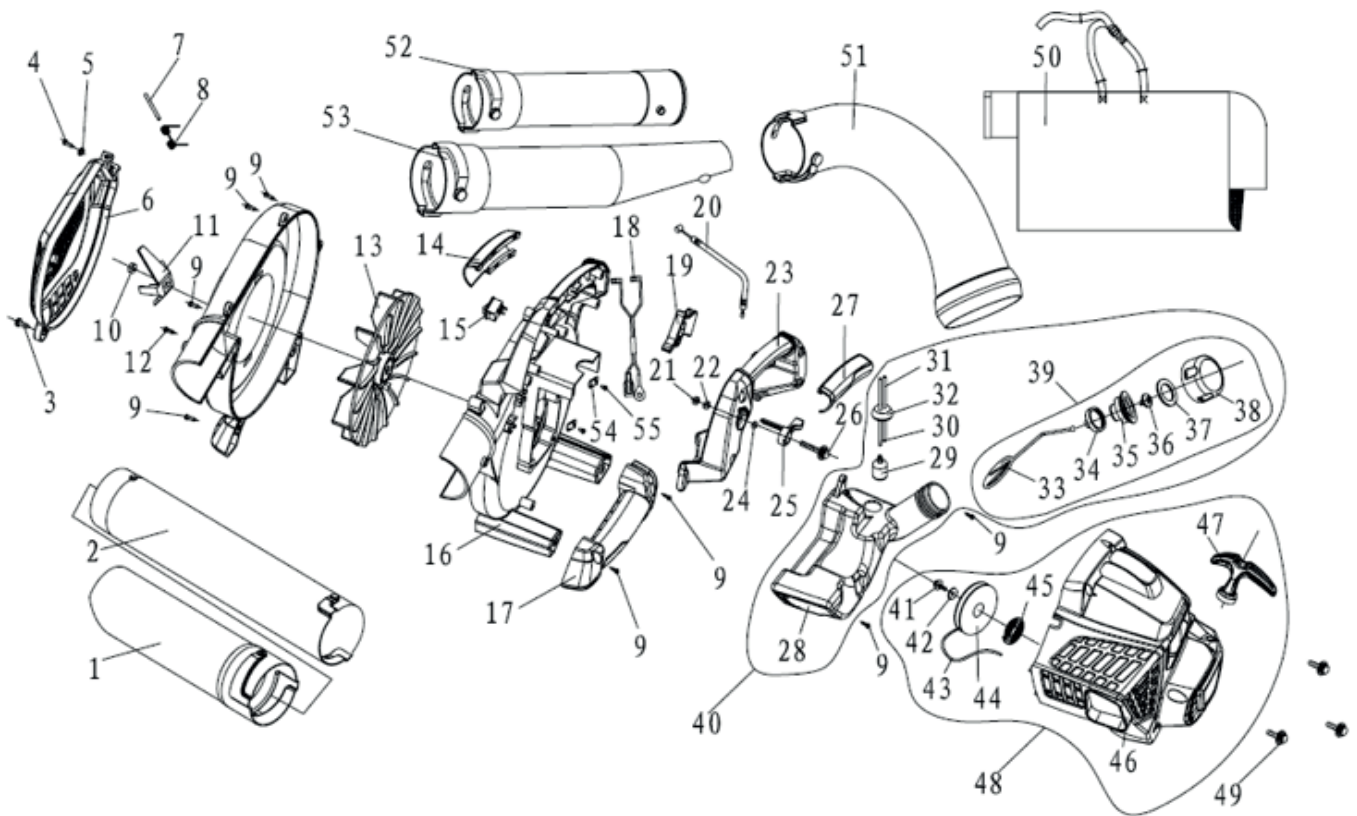

1	EBV260-8	PIPE(2	1
2	EBV260A-1	PIPE 1	1
3	3WF-20.9-1	SCREW M5×10	1
4	1E40F-5A-CE-4	SCREW M5×16	1
5	GB96.1	WASHER Φ5	1
6	EBV230E.2.5	PROTECTION	1
7	EBV260.2-2	SPING SCREW	1
8	EBV260.2-3	SPING	1
9	3WF-20.9-2	SCREW M5×16	11
10	GB6171	NUT M8×1 LH	1
11	EBV245A.8	COMMUNUTE BOARD	1
12	XSS46-2.2-5	SCREW M5×20	1
13	EBV230E.2.4	IMPELLER	1
14	EBV230E-4	HANDLE COVER(2)	1
15	EBV260E.6	STOP SWITCH	1
16	EBV230E.2.2	VALUTE CASE	1
17	EBV260E.6	STOP SWITCH	1
18	EBV230E.4	STOP WIRE	1
19	EBV230E-1	CONTROL HANDLE	1
20	EBV230E.3	FUEL THROTTLE	1
21	GB6172	NUT M5	1

22	GB6177	NUT M5	1
23	EBV230E.2-1	HANDLE	1
24	EBV260E-2	WASHER	1
25	EBV230E-2	CONTROL HANDLE	1
26	GB9074.4	SCREW M5×25	1
27	EBV230E-3	HANDLE COVER(1)	1
28	EBV230E.6-1	FUEL TANK	1
29	P40.12.2-3A	FILTER	1
30	CG420.1.3.2-2	FUEL PIPE	1
31	EB-415.4.1.1-1	FUEL PIPE	1
32	1E32FL.6.2-3	PLUG	1
33	1E32FL.6.2-4	CHAIN	1
34	EB-415.4.1.1-1	AIRVALVE	1
35	1E32FL.6.2-3	END COVER	1
36	CG420.1.3.1-2	SEALING WASHER	1
37	1E32FL.6.2-2	LID	1
38	1E32FL.6.2-1	FUEL TANK LID	1
39	1E32FL.6.2	FUEL TANK LID	1
40	EBV230E.6	ASSEMBLAGE	1
41	GB9074.6	FUEL TANK ASSEMBLAGE	1
42	GB96.1	SCREW M5×10	1
43	1E34F.11-3	WASHER Φ5	1
44	1E34F.11-2	ROPE	1
45	1E34F.11-1	STARTER ROPE REEL	1
46	EBV230E.2.1.1	RECOIL SPRING	1
47	CG520-HL.5-1	STARTER BODY	1
48	EBV230E.2.1	STARTER HANDLE	1
49	GB9074.4	STARTER	1
50	EBV245A.7	SCREW M5×12	1
51	EBV230E-9	COLLECTING BAG	1
52	EBV230E-8	COLLECTING PIPE	1
53	EBV230E-7	PIPE	1
54	EBV245A-9	BAFFLE	2