

# **CERUTI**

**[www.ceruticenter.it](http://www.ceruticenter.it)**


# ESPLOSO

## Tagliasiepi

## SLP600-E




# The Parts List of Model 1E34FL-3E Engine

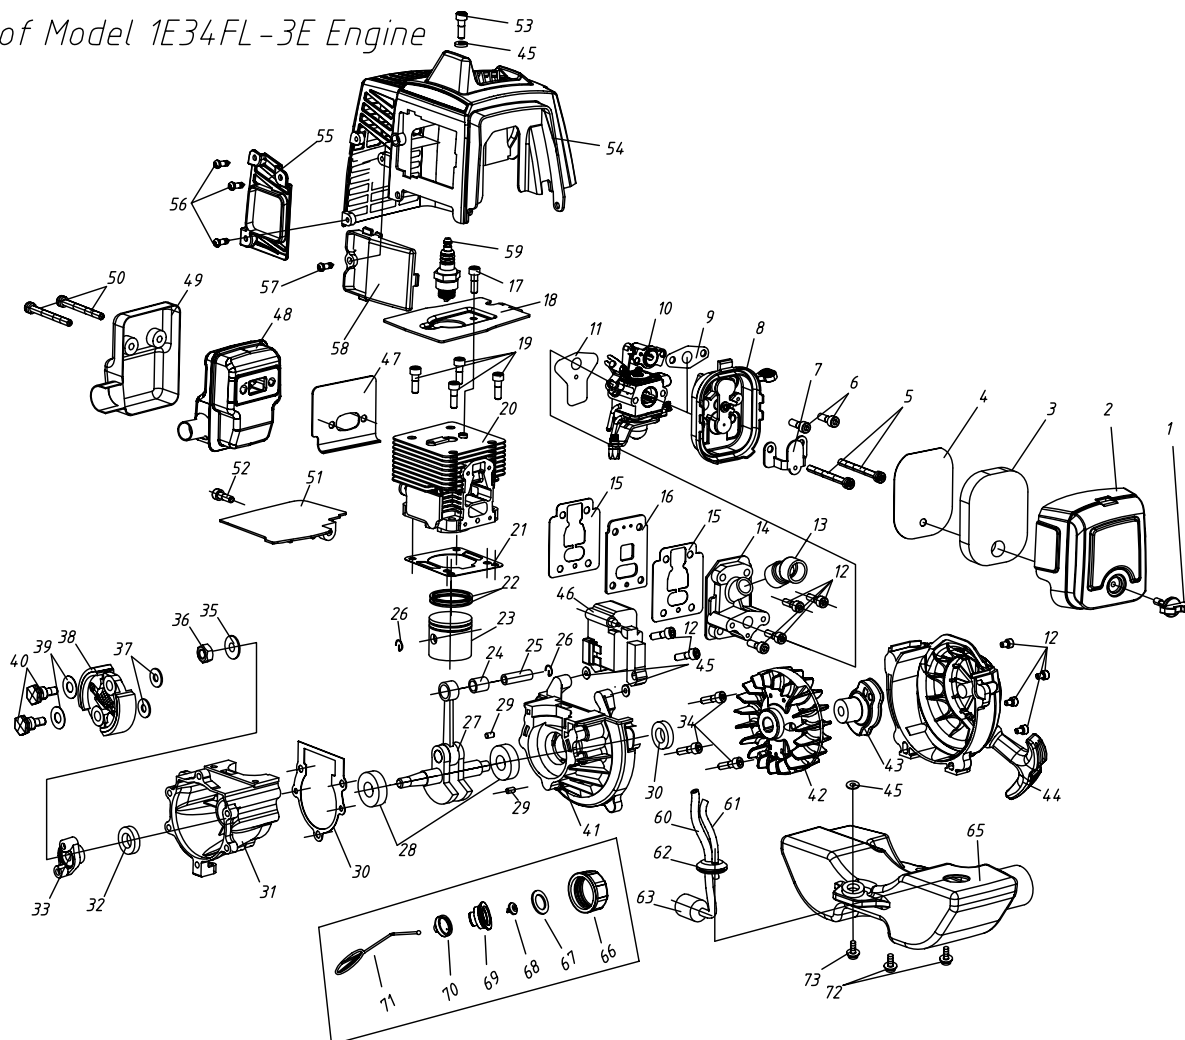

| NO. | PART NO.         | PART NAME             | QTY. | NO. | PART NO.       | PART NAME             | QTY. | NO. | PART NO.        | PART NAME     | QTY. |
|-----|------------------|-----------------------|------|-----|----------------|-----------------------|------|-----|-----------------|---------------|------|
| 1   | 1E34F.1.2A       | SCREW                 | 1    | 32  | 1E36F-3E.11    | OIL SEAL              | 2    | 63  | P40.12.2-3A     | CLEANER COVER | 1    |
| 2   | 1E34F-3E.13-1    | OUTSIDE COVER         | 1    | 33  | 1E32FL-3       | CLUTCH LAMPSTAND      | 1    | 64  |                 |               |      |
| 3   | 1E34F-3E.13-3    | FILTER NET            | 1    | 34  | GB/T70.1       | SCREW 5×25            | 3    | 65  | 1E34FL-3E.10-1A | FUEL TANK     | 1    |
| 4   | 1E34F-3E.13-4    | BAFFLE                | 1    | 35  | GB/T97         | WASHER Φ8             | 1    | 66  | 1E32FL.6.2-1    | FUEL TANK LID | 1    |
| 5   | GB/T70.1         | SCREW M5×60           | 2    | 36  | GB/T6171       | NUT M8×1              | 1    | 67  | CG420.1.3.1-2   | GASKET        | 1    |
| 6   | GB70+GB93+GB97   | SCREW M5×14           | 2    | 37  | 1E34F-11       | WASHER                | 2    | 68  | EB-4.15.4.1.1-1 | INLET         | 1    |
| 7   | 1E34F-3E.13-2    | BAFFLE                | 1    | 38  | 1E34F.10       | CLUTCH                | 1    | 69  | 1E32FL.6.2-2    | INSIDE LID    | 1    |
| 8   | 1E34F-3E.13.1    | INSIDE COVER          | 1    | 39  | 1E34F-13       | WASHER                | 2    | 70  | 1E32FL.6.2-3    | INSIDE LID    | 1    |
| 9   | 1E48FP-7         | GASKET                | 1    | 40  | 1E34F-12       | CLUTCH STEP SCREW     | 2    | 71  | HB33.2.2.1      | CHAIN         | 1    |
| 10  | 1E36F-3E.1       | CARBURETOR            | 1    | 41  | 1E34FL-3E.8-2  | REAR HALF CRANK CASE  | 1    | 72  | GB70+GB93+GB96  | SCREW M5×25   | 2    |
| 11  | 1E36F-3E-2       | GASKET                | 1    | 42  | 1E34FL-3E.6.3  | FLY WHEEL             | 1    | 73  | GB70+GB93+GB96  | SCREW M5×30   | 1    |
| 12  | GB70+GB93+GB97   | SCREW M5X20           | 10   | 43  | 1E32FL.2       | Start Reel            | 1    |     |                 |               |      |
| 13  | 1E40F-3E-9       | PIPE                  | 1    | 44  | 1E34FL-3E.7    | STARTER COMP.         | 1    |     |                 |               |      |
| 14  | 1E34FL-3E.11     | ADMITTING PIPE        | 1    | 45  | 1E33F-4        | GASKET                | 4    |     |                 |               |      |
| 15  | 1E34F-3E-1A      | GASKET                | 2    | 46  | 1E34FL-3E.6.1  | IGNITION COIL COMP.   | 1    |     |                 |               |      |
| 16  | 1E34F-3E.3       | REED VALVE            | 1    | 47  | 1E34FL-3E-4    | MUFFLER GASKET        | 1    |     |                 |               |      |
| 17  | GB70.1+GB93+GB97 | SCREW M5X16           | 1    | 48  | 1E34FL-E.4     | MUFFLER               | 1    |     |                 |               |      |
| 18  | 1E34FL-3E-2      | GUIDE WIND GASKET     | 1    | 49  | 1E34FL-3E-3A   | MUFFLER COVER         | 1    |     |                 |               |      |
| 19  | GB/T70.1         | SCREW M5X18           | 4    | 50  | GB/T70.1+GB97  | SCREW M5×60-12.9      | 2    |     |                 |               |      |
| 20  | 1E34F-3E.4-1     | CYLINDER              | 1    | 51  | 1E34FL-3E-1    | GASKET                | 1    |     |                 |               |      |
| 21  | 1E34F-3E-3       | GASKET                | 1    | 52  | GB70+GB93+GB97 | SCREW M5×12           | 1    |     |                 |               |      |
| 22  | 1E34F.6-5        | PISTON RING           | 2    | 53  | GB70+GB93+GB97 | SCREW M5×16           | 1    |     |                 |               |      |
| 23  | 1E34F-3E.7-1     | PISTON                | 1    | 54  | 1E34FL-3E.3.1  | GUIDE COVER           | 1    |     |                 |               |      |
| 24  | 1E31F.4.1        | NEEDLE BEARING        | 1    | 55  | 1E34FL-3E.3-2  | GUIDE WIND GASKET TWO | 1    |     |                 |               |      |
| 25  | 1E31F.4-2        | PISTON PIN            | 1    | 56  | GB845          | SCREW ST4.2×9.5       | 3    |     |                 |               |      |
| 26  | 1E31F.4-3        | PISTON PIN CIRCLIP    | 2    | 57  | GB845          | SCREW ST4.2×13        | 1    |     |                 |               |      |
| 27  | 1E34FL-3E.5.1    | CRANK SHAFT COMP.     | 1    | 58  | 1E34FL-3E.3-1  | GUIDE WIND GASKET     | 1    |     |                 |               |      |
| 28  | GB/T 276         | BALL BEARING 6001/P6  | 2    | 59  | L8RTC          | SPARK PLUG            | 1    |     |                 |               |      |
| 29  | GB/T119.2        | PIN 4 h8X10           | 2    | 60  | CG420.1.3.2-2  | FUEL PIPE 245mm       | 1    |     |                 |               |      |
| 30  | 1E34F-3E.11-3    | CRANK CASE GASKET     | 1    | 61  | EB415.4.2-4    | FUEL PIPE 100mm       | 1    |     |                 |               |      |
| 31  | 1E34FL-3E.8-1    | FRONT HALF CRANK CASE | 1    | 62  | EB-4.15.4.2-2  | FUEL PIPE PLUG        | 1    |     |                 |               |      |

# The Parts List of Model SLP600-E Hedge-Trimmer

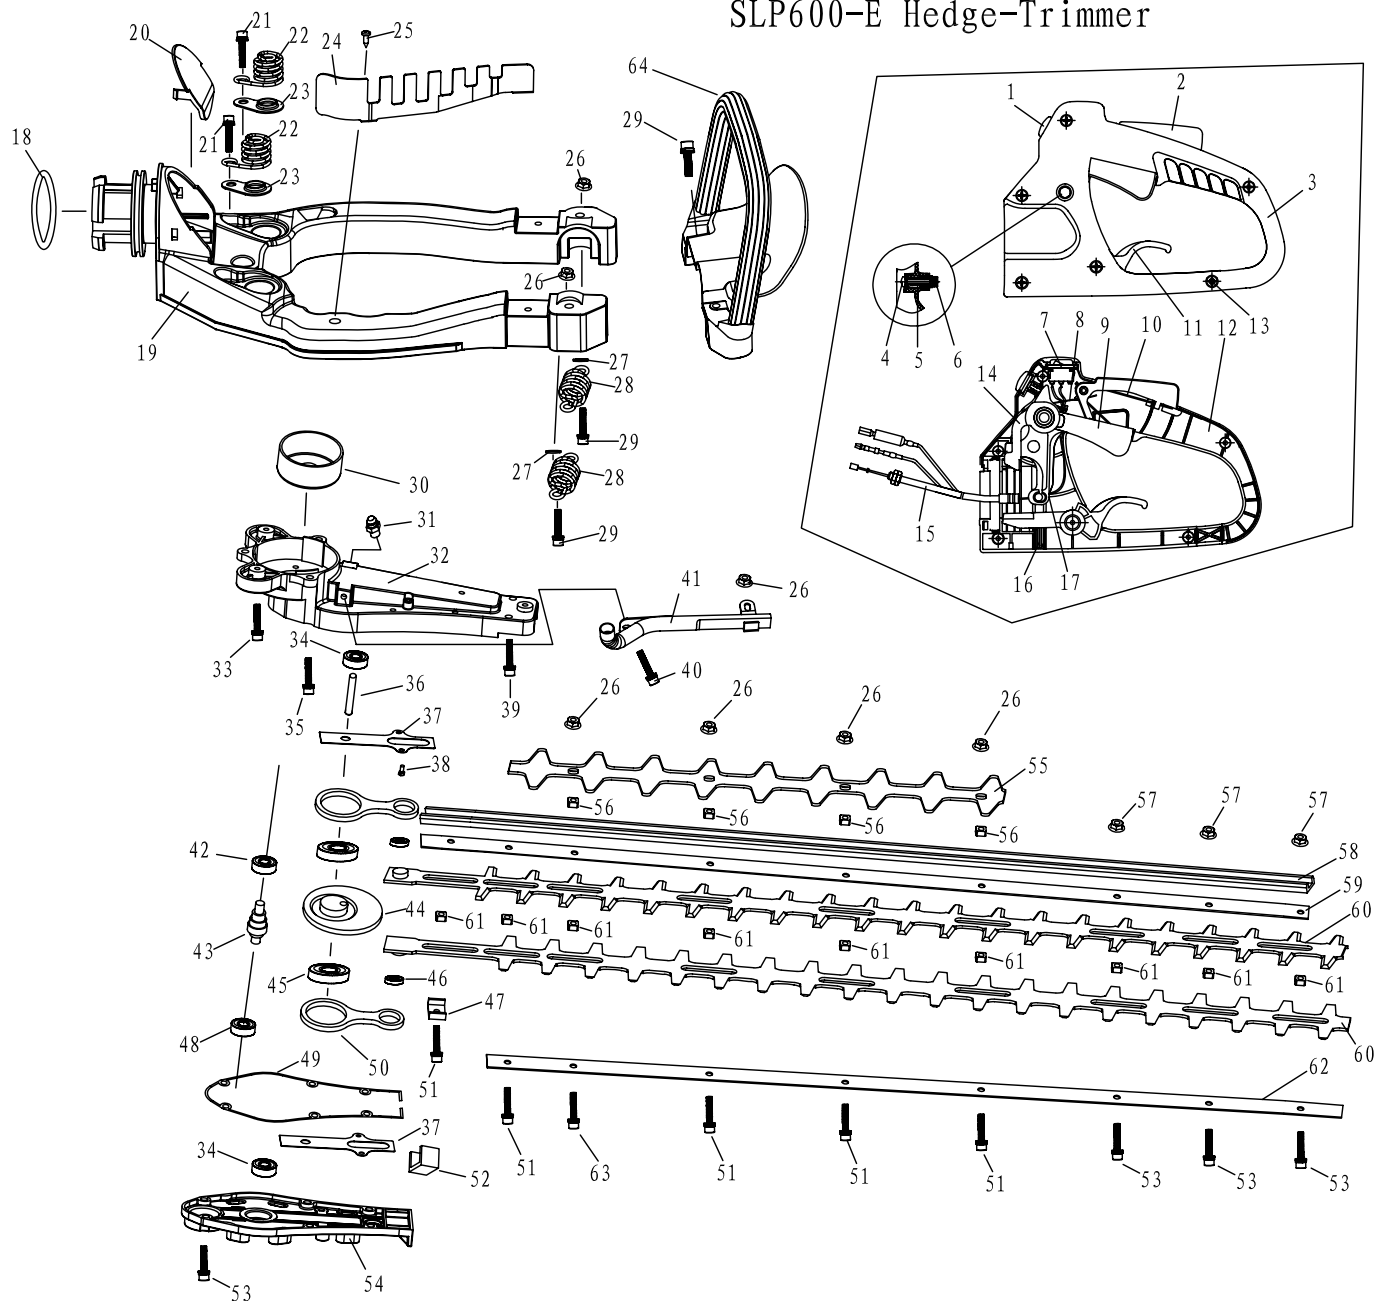

| 序号 | 代 号                        | 名 称             | 数量 | 序号 | 代 号                        | 名 称                  | 数量 | 序号 | 代 号                        | 名 称            | 数量 |
|----|----------------------------|-----------------|----|----|----------------------------|----------------------|----|----|----------------------------|----------------|----|
| 1  | SLP600-E. 1-13             | Plug            | 1  | 24 | SLP600-E. 2. 3             | Cover                | 1  | 47 | SL750B. 1-5                | Bracket        | 1  |
| 2  | SLP600-E. 1-8              | Handgrip        | 1  | 25 | GB/T845                    | Screw ST4.2×16       | 1  | 48 | GB/T276                    | Bearing 628/P6 | 1  |
| 3  | SLP600-E. 1-1              | Handle, left    | 1  | 26 | GB/T6183. 1                | Nut M5               | 7  | 49 | SL750B. 1-11A              | Gasket         | 1  |
| 4  | GB/T6560                   | Screw M4×25     | 1  | 27 | GB/T96. 1                  | Washer               | 2  | 50 | SL750B. 1-9                | Grank Shaft    | 2  |
| 5  | SLP600-E. 1-3              | Spring          | 1  | 28 | SLP600-E. 1-14             | Spring               | 2  | 51 | GB/T70. 1+GB/T93+GB/T97. 1 | Screw M5×25    | 5  |
| 6  | SLP600-E. 1-2              | Lever, lock     | 1  | 29 | GB/T70. 1+GB/T93+GB/T96. 1 | Screw M5×25          | 4  | 52 | SL750B. 1-10               | Felt           | 1  |
| 7  | SLP600-E. 1. 2             | Switch          | 1  | 30 | SLP600E. 3. 2A             | Clutch Drum Comp.    | 1  | 53 | GB/T70. 1+GB/T93+GB/T97. 1 | Screw M5×20    | 9  |
| 8  | SLP600-E. 1-7              | Spring          | 1  | 31 | GB/T1152                   | Fuel Cup M6          | 1  | 54 | SL750B. 1-7A               | Case Cover     | 1  |
| 9  | SLP600-E. 1-5              | Lever, throttle | 1  | 32 | SLP600-E. 2-1              | Wheel Box            | 1  | 55 | SLP600-E. 2-2              | Blade guard    | 1  |
| 10 | SLP600-E. 1-9              | Spring          | 1  | 33 | GB/T70. 1+GB/T93+GB/T97. 1 | Screw M5×12          | 2  | 56 | SLP600S. 1-5               | Spacer         | 4  |
| 11 | SLP600-E. 1-10             | Lever, gyral    | 1  | 34 | GB/T276                    | Bearing 626/P6       | 2  | 57 | GB889. 1                   | Nut M5         | 3  |
| 12 | SLP600-E. 1-4              | Handle, right   | 1  | 35 | GB/T70. 1+GB/T93+GB/T97. 1 | Screw M5×16          | 3  | 58 | SLP600S. 1-2               | Plate, upper   | 1  |
| 13 | GB/T845                    | Screw ST4.2×16  | 6  | 36 | SL750S. 1-7                | Shaft                | 1  | 59 | SLP600S. 1-3               | Cushion        | 1  |
| 14 | SLP600-E. 1-6              | Lever           | 1  | 37 | SL750B. 1-4                | Cushion              | 2  | 60 | SLP600-E. 2. 1             | Blade          | 2  |
| 15 | SLP600-E. 1. 1             | Cable comp.     | 1  | 38 | GB/T70. 1                  | Screw M4×10          | 4  | 61 | SL750B. 1-12               | Spacer         | 9  |
| 16 | SLP600-E. 1-11             | Spring          | 1  | 39 | GB/T70. 1+GB/T93+GB/T96. 1 | Screw M5×16          | 2  | 62 | SLP600S. 1-1               | Plate, lower   | 1  |
| 17 | SLP600-E. 1-12             | Spring          | 1  | 40 | GB/T70. 1+GB/T93+GB/T97. 1 | Screw M5×12          | 1  | 63 | GB/T70. 1+GB/T93+GB/T97. 1 | Screw M5×30    | 1  |
| 18 | JB/T7757. 2                | Seal 48.7×3.1   | 1  | 41 | SLP600-E. 2. 2             | Pipe, exhaust        | 1  | 64 | SLP600-E. 3                | Handle Front   | 1  |
| 19 | SLP600-E. 1. 3             | Frame           | 1  | 42 | GB/T276                    | Bearing 6001-2RS/P6  | 1  |    |                            |                |    |
| 20 | SLP600-E. 1-17             | Frame Lid       | 1  | 43 | SL750C. 2-1                | Gear Shaft           | 1  |    |                            |                |    |
| 21 | GB/T70. 1+GB/T93+GB/T96. 1 | Screw M5×20     | 2  | 44 | SL750B. 1-2A               | Gear and Brace Ass'y | 1  |    |                            |                |    |
| 22 | SLP600-E. 1-15             | Spring          | 2  | 45 | GB/T276                    | Bearing 61805-2RZ    | 2  |    |                            |                |    |
| 23 | SLP600-E. 1-16             | Washer          | 2  | 46 | GB/T276                    | Bearing 61800-2RS    | 2  |    |                            |                |    |