



10T600

Illustrated Parts List

Model Series

10T600

TYPE NUMBER
0001 through 5745.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing/Shrouds	6
Brake	5
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	5
Flywheel	6
Fuel Supply	4
Gasket Set - Engine	3
Gasket Set - Valve	3
Governor Spring	5
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	6
Warning Label	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.








1058 OPERATOR'S MANUAL









1330 REPAIR MANUAL






1036 EMISSIONS LABEL

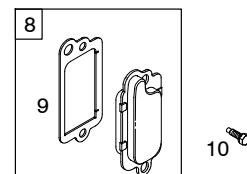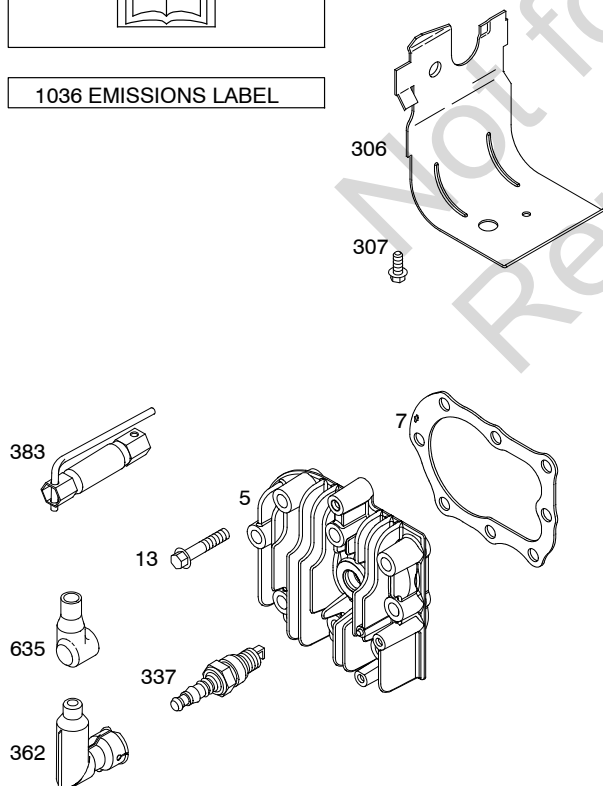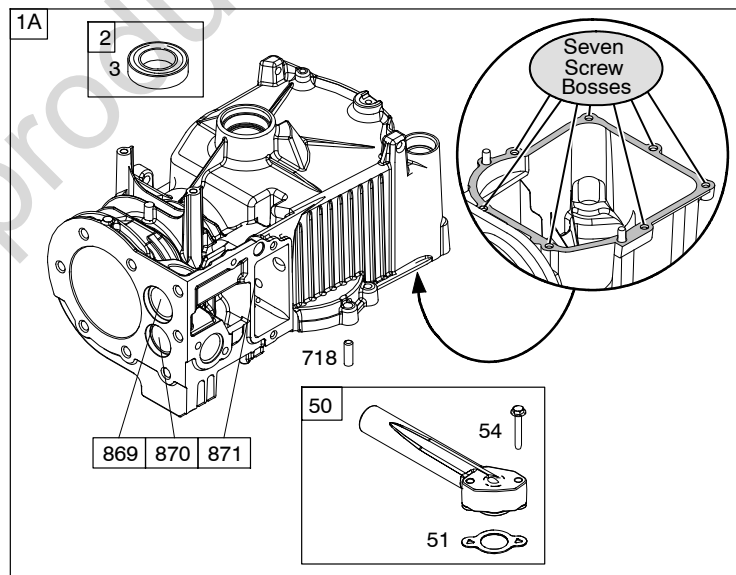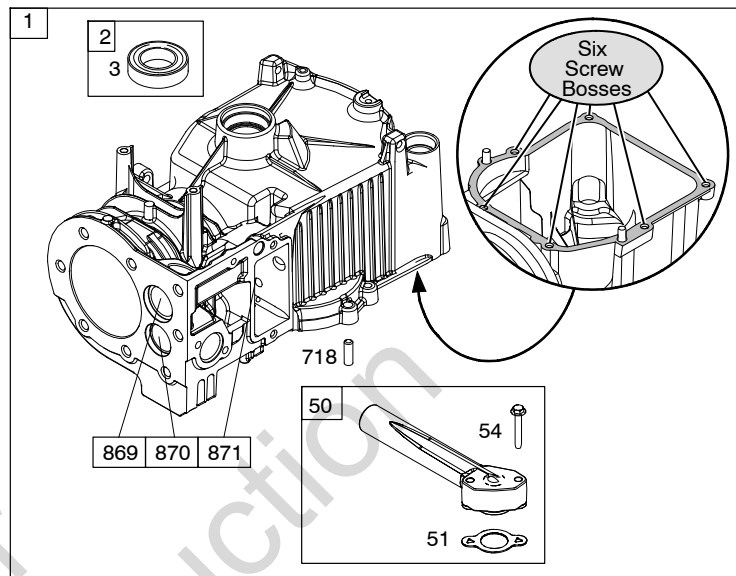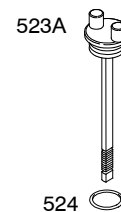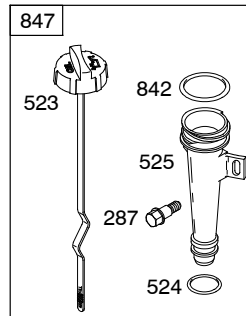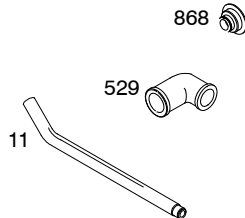


















Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3746-2 Assemblies include all parts shown in frames. 11/29/2012

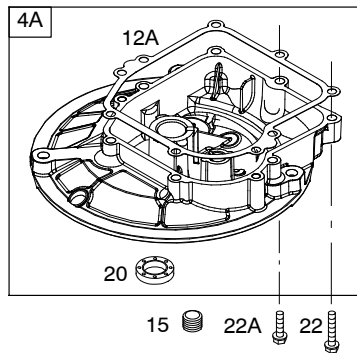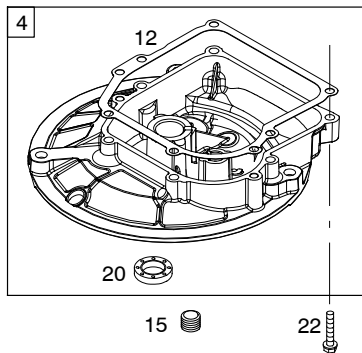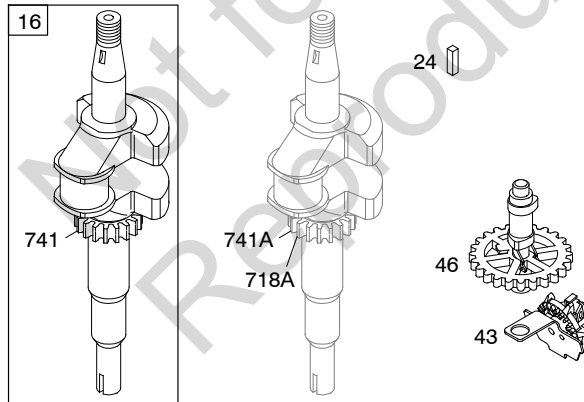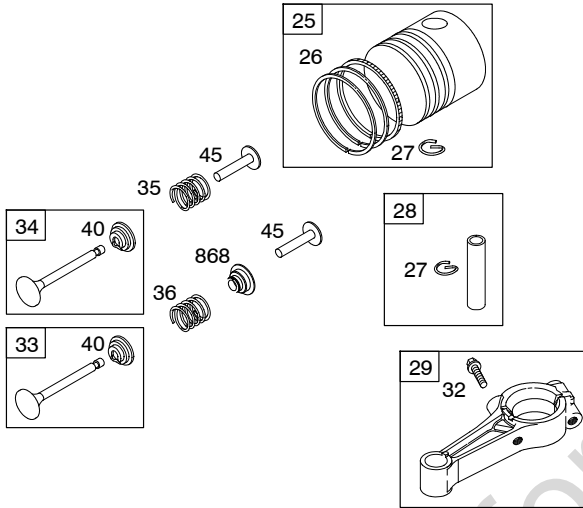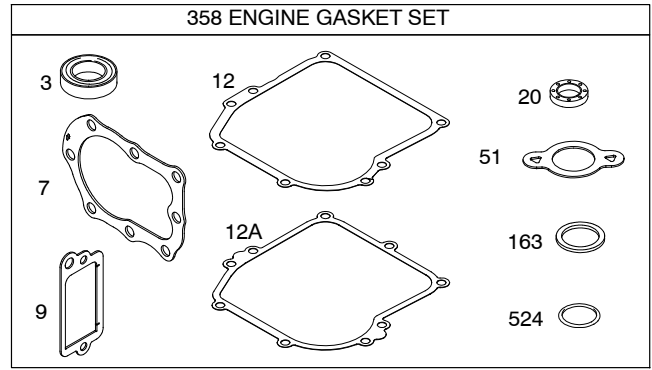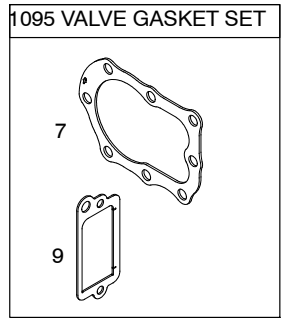







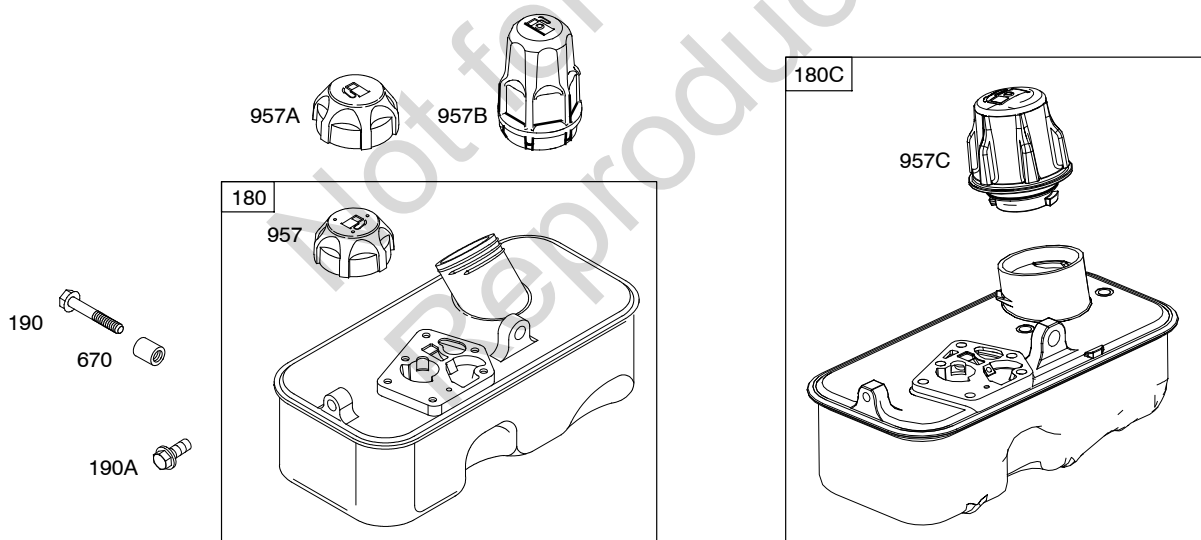
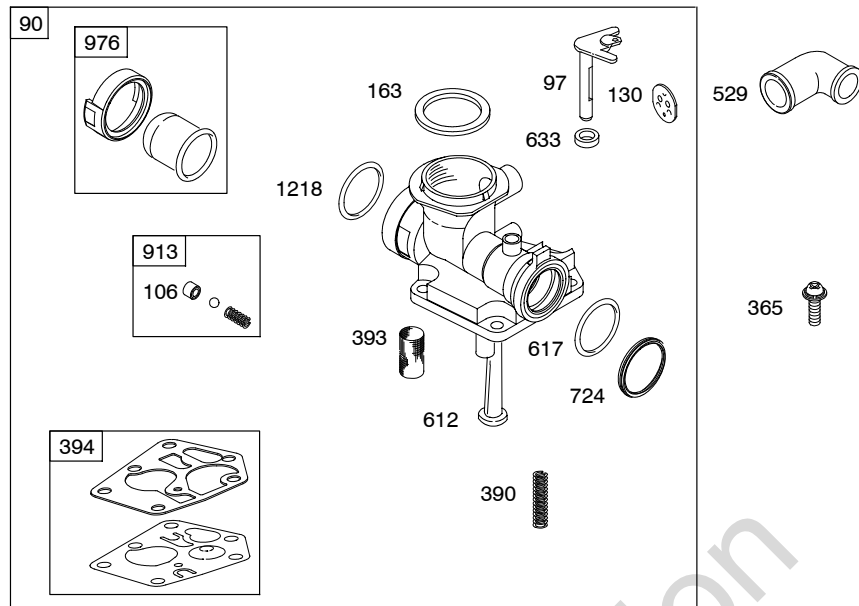


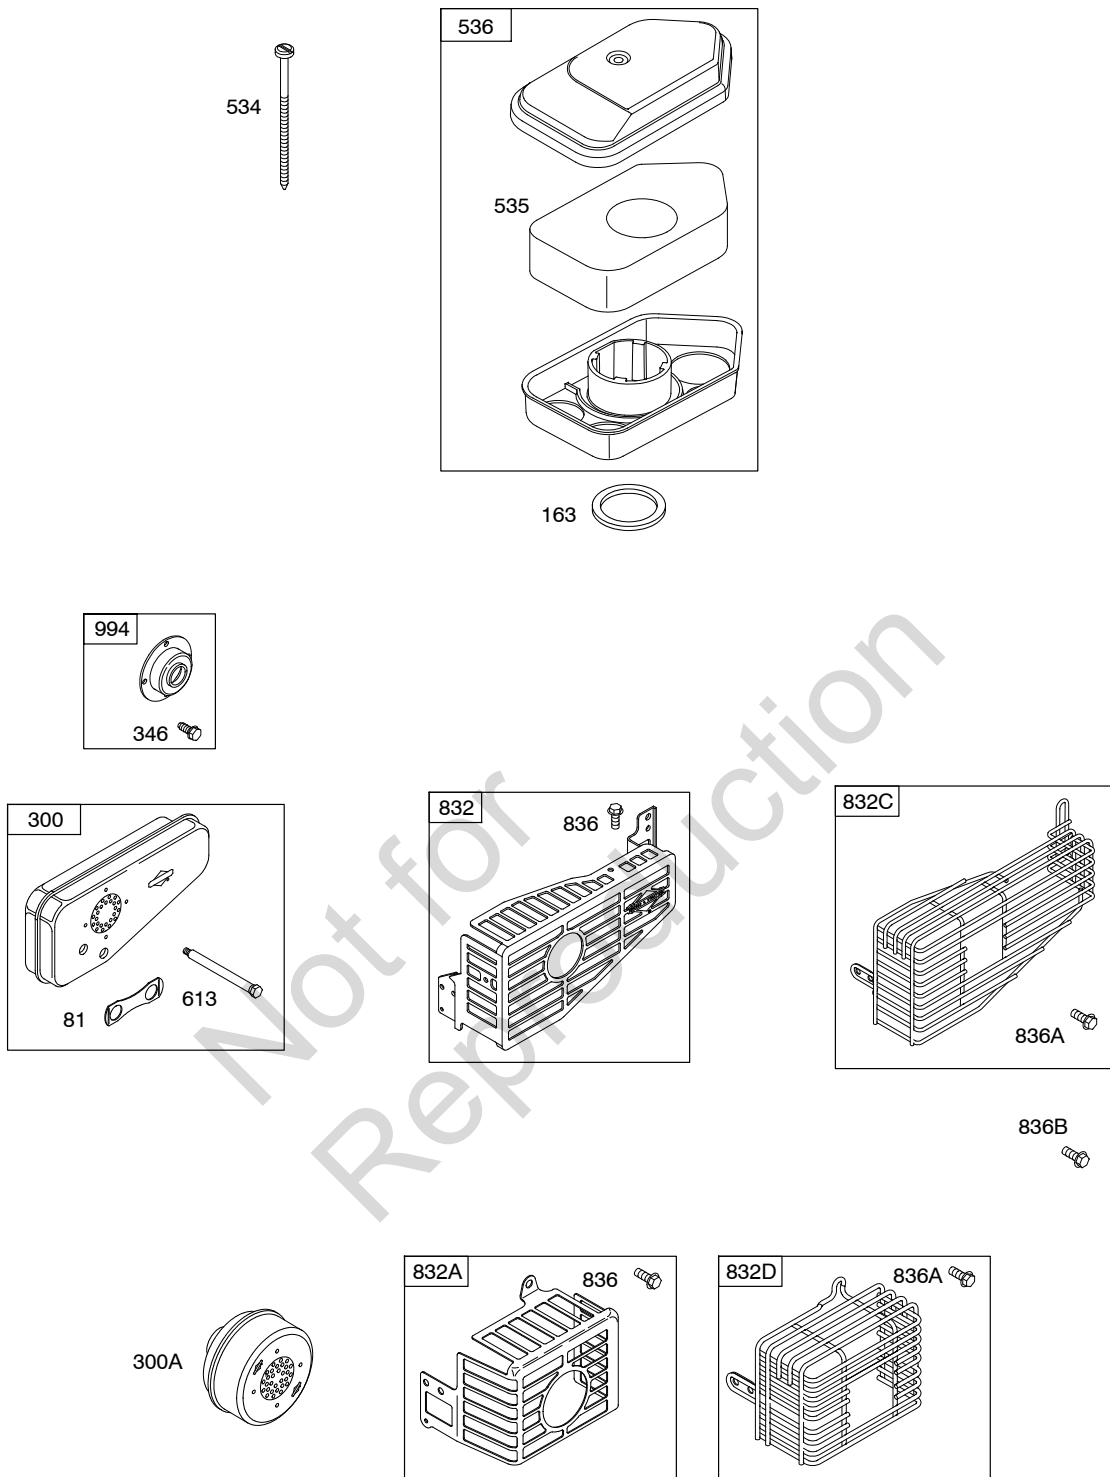

10T600

  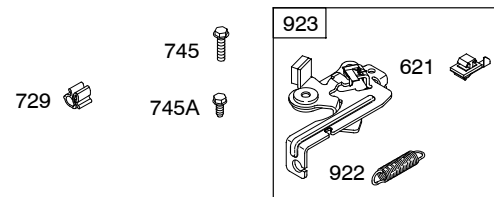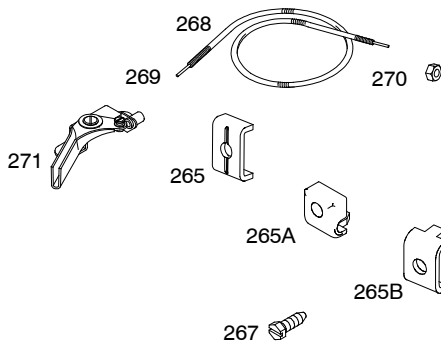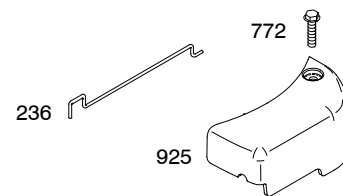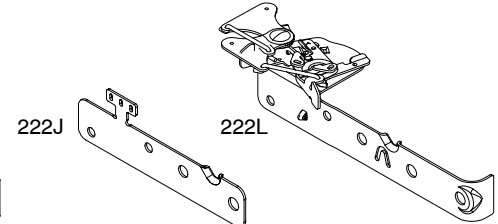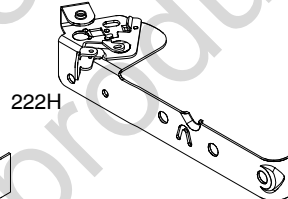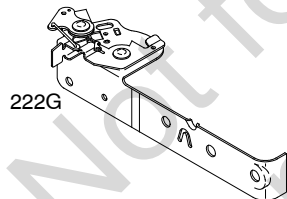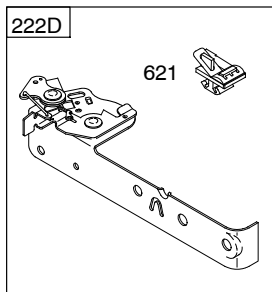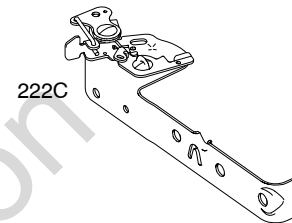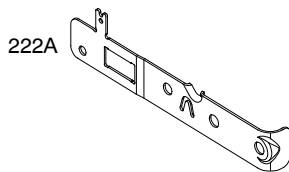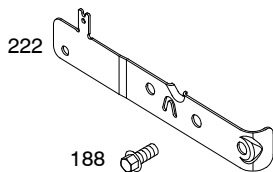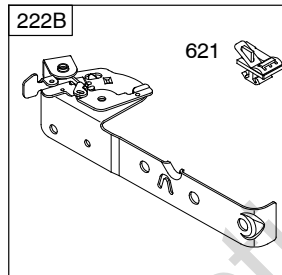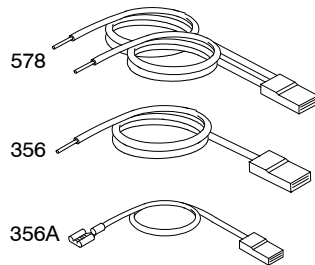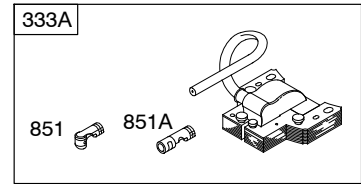  

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3746-6 Assemblies include all parts shown in frames. 11/29/2012

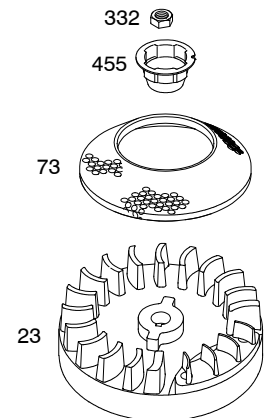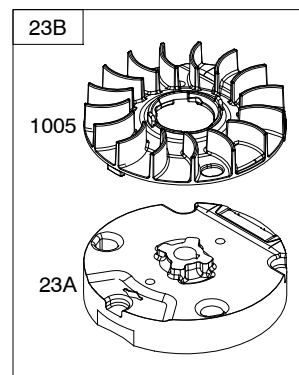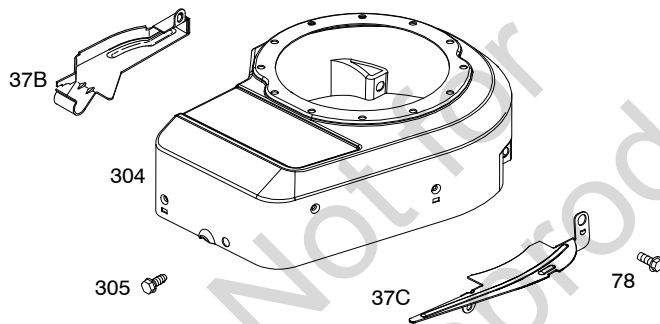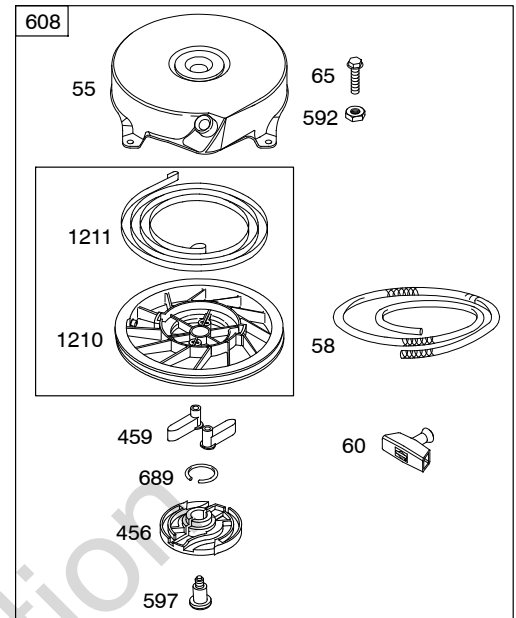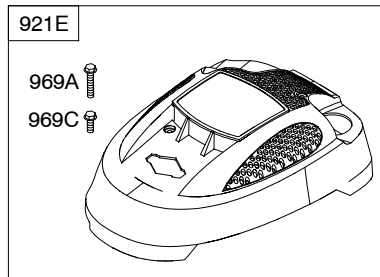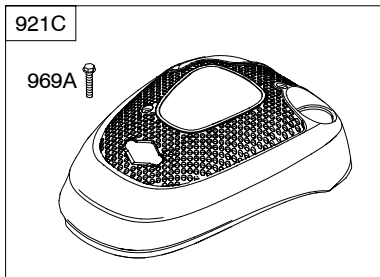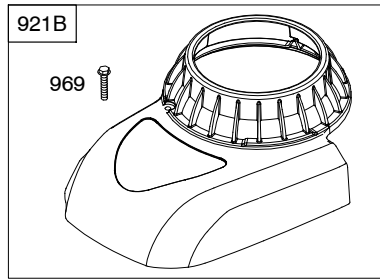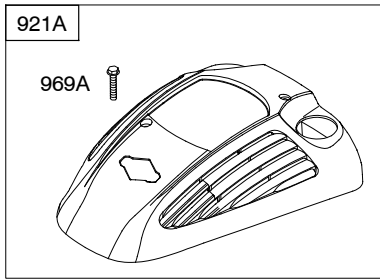

10T600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699650	Cylinder Assembly (Engines with 6 Sump Screws)	15	691680	Plug-Oil Drain	26	795690	Ring Set (Standard)
1A	590770	Cylinder Assembly (Engines with 7 Sump Screws)	16	796217	Crankshaft			----- Note -----
2	796961	Kit-Bushing/Seal (Magneto Side)			----- Note -----			----- Note -----
3	299819S	Seal-Oil (Magneto Side)		796218	Crankshaft Used on Type No(s). 0111, 0112, 0114, 0115, 0119, 0122, 0125, 0181, 0182, 0183, 0185, 0556, 0745, 0973, 3119, 3181, 3182, 3183, 5745.	27	691588	Lock-Piston Pin
4	798264	Sump-Engine (Engines with 6 Sump Screws)		796216	Crankshaft Used on Type No(s). 0001, 0128, 0135, 0143, 0146, 0194, 0195, 0199, 3135, 3143.	28	699659	Pin-Piston
4A	590569	Sump-Engine (Engines with 7 Sump Screws)				29	699654	Rod-Connecting
5	790169	Head-Cylinder				32	691664	Screw (Connecting Rod)
7	698717	Gasket-Cylinder Head				33	296676	Valve-Exhaust
8	791781	Breather Assembly	20	391483S	Seal-Oil (PTO Side)	34	296677	Valve-Intake
9	695890	Gasket-Breather	22	692551	Screw (Crankcase Cover/Sump)	35	690520	Spring-Valve (Intake)
10	691666	Screw (Breather Assembly)	22A	590763	Screw (Crankcase Cover/Sump)	36	690520	Spring-Valve (Exhaust)
11	691245	Tube-Breather				37B	697403	Guard-Flywheel (Carburetor Side)
12	692218	Gasket-Crankcase (.015" Thick) (Standard) (Engines with 6 Sump Screws)	23	799682	Flywheel	37C	793748	Guard-Flywheel (Muffler Side)
		----- Note -----			----- Note -----	40	692194	Retainer-Valve
		270895 Gasket- Crankcase (.005" Thick) (Engines with 6 Sump Screws)			Flywheel (For Replacement Flywheel, Order Reference 23B) Used on Type No(s). 0111, 0112, 0116, 0125, 0128, 0137, 0143, 3137, 3143.	43	697799	Slinger-Governor/Oil
		270896 Gasket- Crankcase (.009" Thick) (Engines with 6 Sump Screws)	23A	592003	Flywheel	45	691762	Tappet-Valve
			23B	592370	Flywheel	46	691998	Camshaft
			24	222698S	Key-Flywheel	50	699644	Manifold-Intake
			25	795691	Piston Assembly (Standard)	51	699649	Gasket-Intake
12A	799587	Gasket-Crankcase (Engines with 7 Sump Screws)			----- Note -----	54	691111	Screw (Intake Manifold)
13	691640	Screw (Cylinder Head)			795689 Piston Assembly (.020" Oversize)	55	692144	Housing-Rewind Starter
						58	697316	Rope-Starter (88 5/8" Long)
								----- Note -----
								691921 Rope-Starter (70" Long) Used on Type No(s). 0111, 0112, 0116, 0125, 0128, 0137, 3137.
						60	691915	Grip-Starter Rope
						65	690837	Screw (Rewind Starter)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
73	699850	Screen-Rotating	222A	792240	Bracket-Control Used on Type No(s). 0111, 0112, 0143, 3143.	271	691028	Lever-Control
78	692198	Screw (Flywheel Guard)				287	691002	Screw (Dipstick Tube)
81	691179	Lock-Muffler Screw	222B	699326	Bracket-Control Used on Type No(s). 0116, 0128, 0556, 0745, 0973, 5745.	300	692307	Muffler (Super Lo Tone)
90	795475	Carburetor				300A	394569S	Muffler (Round Lo Tone)
97	697414	Shaft-Throttle	222C	795390	Bracket-Control Used on Type No(s). 0124, 0130, 0131, 0132, 0133, 0135, 0142, 0181, 0182, 0183, 0185, 0187, 3130, 3131, 3132, 3133, 3135, 3142, 3145, 3181, 3182, 3183.	304	697411	Housing-Blower (Compliance Engines)
106	691901	Seat-Inlet				----- Note -----		
130	691190	Valve-Throttle	222D	699577	Bracket-Control Used on Type No(s). 0125, 0137, 3137.			790297 Housing- Blower (Non Compliance Engines) Used on Type No(s). 0116, 0125, 0128, 0137, 0140, 0143, 0144, 0145, 0146, 0184, 0189, 0194, 0195, 0201, 0556, 0745, 0973, 3137, 3140, 3143, 3144, 3184, 5745.
163	271139S	Gasket-Air Cleaner	222G	794780	Bracket-Control Used on Type No(s). 0110, 0140, 0144, 0145, 0146, 0184, 0189, 0201, 3140, 3144, 3184.			791392 Housing- Blower (Non Compliance Engines) Used on Type No(s). 0111, 0112.
180	494406	Tank-Fuel	222H		Bracket-Control (For Replacement Control Bracket, Order Reference 222J)	305	692198	Screw (Blower Housing)
180C	795473	Tank-Fuel Used on Type No(s). 0127.	222J	798686	Bracket-Control	306	690400	Shield-Cylinder (Used Before Code Date 06101100).
188	692198	Screw (Control Bracket)	222L	591905	Bracket-Control Used on Type No(s). 0194, 0195.	307	690345	Screw (Cylinder Shield) (Used Before Code Date 06101100).
190	691640	Screw (Fuel Tank) (1 3/4" Long)	227	697402	Lever-Governor Control	332	690662	Nut (Flywheel)
190A	691108	Screw (Fuel Tank) (9/16" Long)	236	591292	Link-Lockout	333A	591420	Armature-Magneto
202	698835	Link-Mechanical Governor	265	692179	Clamp-Casing	334	691061	Screw (Magneto Armature)
209	698726	Spring-Governor	265A	690798	Clamp-Casing	337	796112S	Plug-Spark
		----- Note -----	265B	691024	Clamp-Casing	----- Note -----		
		790220 Spring- Governor Used on Type No(s). 0111, 0112, 0116, 0187.	267	691044	Screw (Casing Clamp)			697451 Plug-Spark Used on Type No(s). 0110, 0147, 0187, 0973.
		698719 Spring- Governor Used on Type No(s). 0110, 0114, 0115, 0119, 0121, 0122, 0127, 0128, 0141, 0143, 0144, 0146, 0147, 0149, 0184, 0194, 0195, 0201, 0556, 0745, 0916, 0973, 1085, 3119, 3143, 3144, 3184, 4022, 4316, 4457, 5745.	268	691025	Casing-Control Wire			
222		Bracket-Control (For Replacement Control Bracket, Order Reference 222J)	269	691026	Wire-Control			
			270	691027	Nut (Control Wire Casing)			

10T600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
346	690661	Screw (Spark Arrester)	459	281505S	Pawl-Ratchet	633	691321	Seal-Choke/Throttle Shaft (Throttle)
347	691396	Switch-Rocker	505	691251	Nut (Governor Control Lever)	635	66538S	Boot-Spark Plug Used on Type No(s). 0110, 0111, 0114, 0147, 0149, 0187, 0556, 0705, 0745, 0916, 0973, 1085, 3705, 4022, 4316, 4457, 5745.
356	692390	Wire-Stop	523	692040	Dipstick	670	691633	Spacer-Fuel Tank
356A	693010	Wire-Stop Used on Type No(s). 0111, 0112, 0143, 3143.	523A	691913	Dipstick Used on Type No(s). 0113, 0114, 0115, 0119, 0120, 0193, 0916, 3119, 3120, 4457.	689	691855	Spring-Friction
358	590777	Gasket Set-Engine	524	691876	Seal-Dipstick Tube	718	690959	Pin-Locating (Cylinder)
362	793351	Shield-Spark Plug Used on Type No(s). 0001, 0112, 0113, 0115, 0116, 0117, 0119, 0120, 0121, 0122, 0124, 0125, 0127, 0128, 0130, 0131, 0132, 0133, 0135, 0136, 0137, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0150, 0181, 0182, 0183, 0184, 0185, 0189, 0191, 0193, 0194, 0195, 0196, 0199, 0201, 1010, 1622, 3117, 3119, 3120, 3130, 3131, 3132, 3133, 3135, 3137, 3140, 3142, 3143, 3144, 3145, 3181, 3182, 3183, 3184.	525	691320	Tube-Dipstick	718A	499047	Pin-Locating (Crankshaft)
363	19069	Puller-Flywheel	529	692189	Grommet	724	697478	Retainer-Seal
365	790029	Screw (Carburetor)	534	691417	Screw (Air Cleaner)	729	690586	Clip-Wire
383	89838S	Wrench-Spark Plug	535	698369	Filter-Air Cleaner Foam	741	796210	Gear-Timing (Plastic)
390	691839	Spring-Choke Diaphragm	536	698472	Cleaner-Air	741	691805	Gear-Timing (Metal)
393	691837	Screen-Carburetor	562	691119	Bolt (Governor Control Lever)	745	691146	Screw (Brake) (7/8" Long)
394	795083	Diaphragm-Carburetor ----- Note ----- 795478 Diaphragm- Carburetor Used on Type No(s). 0127.	578	590800	Wire Assembly Used on Type No(s). 0110.	745A	690859	Screw (Brake) (1/2" Long)
404	690272	Washer (Governor Crank)	592	690800	Nut (Rewind Starter)	772	691111	Screw (Linkage Cover)
455	691236	Cup-Flywheel	597	691696	Screw (Pawl Friction Plate)	832	699299	Guard-Muffler (Super Lo Tone)
456	692299	Plate-Pawl Friction	608	499706	Starter-Rewind (88 5/8" Rope) ----- Note ----- 690101 Starter- Rewind (70" Rope) Used on Type No(s). 0111, 0112, 0116, 0125, 0128, 0137, 3137.	832A	699670	Guard-Muffler (Round Lo Tone)
			612	496046S	Tube-Pick Up	832C	790743	Guard-Muffler
			613	691413	Screw (Muffler)	832D	790744	Guard-Muffler
			615	690340	Retainer-Governor Shaft	836	690664	Screw (Muffler Guard) (13/32" Long)
			616	697405	Crank-Governor	836A	790745	Screw (Muffler Guard) (1/2" Long)
			617	270344S	Seal-O Ring (Intake Manifold)	836B	691125	Screw (Muffler Guard) (5/8" Long)
			621	692310	Switch-Stop (Brake)	842	691870	Seal-O Ring (Dipstick Tube)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
847	691440	Dipstick/Tube Assembly	957B	792878	Cap-Fuel Tank Used on Type No(s). 0111, 0112, 0125, 0128, 0143, 3143.	969C	799015	Screw Used on Type No(s). 0195.
851	493880S	Terminal-Spark Plug				976	694394	Primer-Carburetor
851A	692424	Terminal-Spark Plug	957C	795472	Cap-Fuel Tank Used on Type No(s). 0127.	994	792245	Arrester-Spark
868	697338	Seal-Valve				1005	592366	Fan-Flywheel
869	699641	Seat-Valve (Intake)	969	799013	Screw (Blower Housing Cover) Used on Type No(s). 0113, 0114, 0115, 0143, 0147, 0149, 0187, 0191, 0705, 0745, 0916, 0973, 1010, 1085, 1622, 3143, 3705, 4022, 4316, 4457, 5745.	1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
870	699642	Seat-Valve (Exhaust)				1058	277038	Operator's Manual
871	699643	Bushing-Valve Guide (Exhaust Valve) ----- Note ----- 63709 Bushing-Valve Guide (Intake Valve)				1095	498526	Gasket Set-Valve
883	691880	Gasket-Exhaust	969A	799014	Screw (Blower Housing Cover) ----- Note ----- 799014 Screw (Blower Housing Cover) (Used After Code Date 10061300)	1210	499901	Pulley/Spring Assembly (Pulley)
913	494409	Seat-Check Valve				1211	499901	Pulley/Spring Assembly (Spring)
921A	793973	Cover-Blower Housing				1218	695866	Seal-O Ring (Carburetor)
921B	699796	Cover-Blower Housing Used on Type No(s). 0113, 0114, 0115, 0143, 0147, 0149, 0187, 0191, 0705, 0745, 0916, 0973, 1010, 1085, 1622, 3143, 3705, 4022, 4316, 4457, 5745.				1319	794467	Label-Warning
921C	792273	Cover-Blower Housing Used on Type No(s). 0131, 0133, 0150, 0196, 3131, 3133, 3145.				1319A	797669	Label-Warning
921E	796066	Cover-Blower Housing Used on Type No(s). 0195.				1330	270962	Repair Manual
922	692135	Spring-Brake						
923	691487	Brake						
925	691349	Cover-Linkage						
957	497929S	Cap-Fuel Tank						
957A	791129	Cap-Fuel Tank Used on Type No(s). 0116.						

Not for
Reproduction

