



126T00

Illustrated Parts List

Model Series

126T00

TYPE NUMBERS
0004 through 7932.

TABLE OF CONTENTS

Air Cleaner	4
Blower Housing	7
Blower Housing/Shrouds	6
Camshaft	2
Carburetor	3
Controls	5
Crankshaft	2
Cylinder	2
Electric Starter	7
Electrical	5
Engine Sump	2
Exhaust System	4
Flywheel	7
Flywheel Brake	5
Fuel Supply	3
Governor Spring	5
Ignition	5
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	7
Valves	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL




 
REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL




1330 REPAIR MANUAL

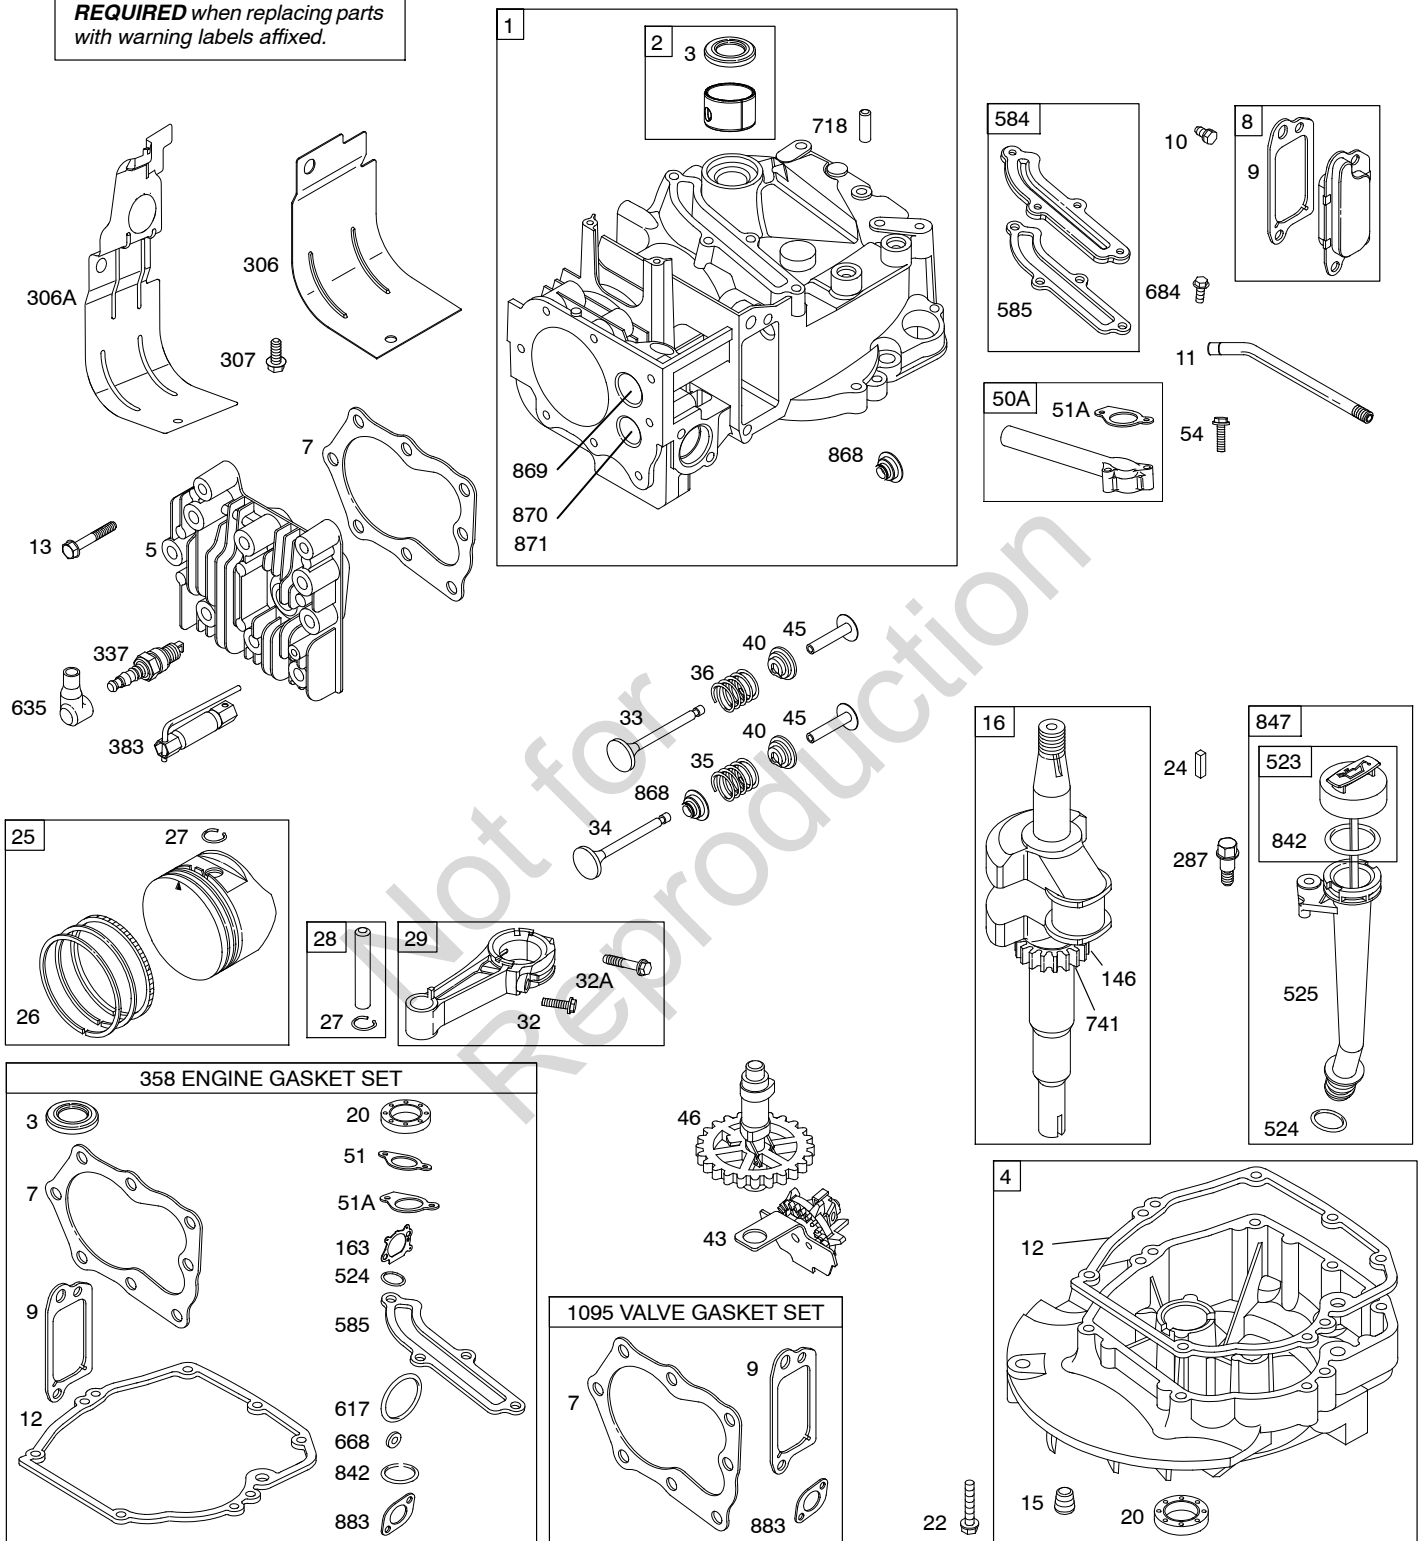



365

 

The diagram illustrates the assembly of the Autochoke System. The components are shown in an exploded view, with their part numbers and assembly order indicated by numbers in boxes. The assembly sequence is as follows:






- 125B**: The main housing or base component.
- 141**: A small circular gasket or seal.
- 108A**: A small circular gasket or seal.
- 633A**: A small circular gasket or seal.
- 97**: A small circular gasket or seal.
- 633**: A small circular gasket or seal.
- 163**: A small circular gasket or seal.
- 231**: A small circular gasket or seal.
- 127**: A small circular gasket or seal.
- 130**: A small circular gasket or seal.
- 134**: A small circular gasket or seal.
- 617**: A small circular gasket or seal.
- 133**: A small circular gasket or seal.
- 104**: A small circular gasket or seal.
- 975**: A small circular gasket or seal.
- 137**: A small circular gasket or seal.
- 276**: A small circular gasket or seal.
- 117B**: A small circular gasket or seal.
- 276**: A small circular gasket or seal.

The components are shown in a sequence that suggests the order of assembly, with the main housing (125B) at the top and the final assembly (117B, 276) at the bottom.

121 CARBURETOR OVERHAUL KIT

104		134		137		617	
127				163		633	
				276		633A	

121 CARBURETOR OVERHAUL KIT

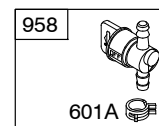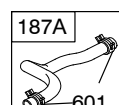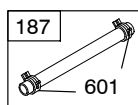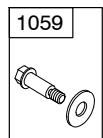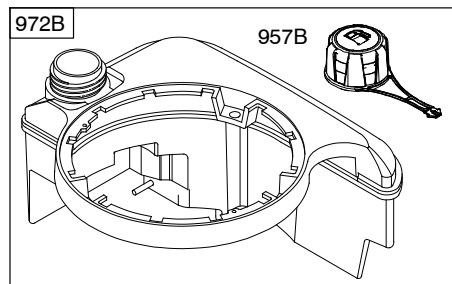



670

3728-3

Assemblies include all parts shown in frames.


10/19/2012

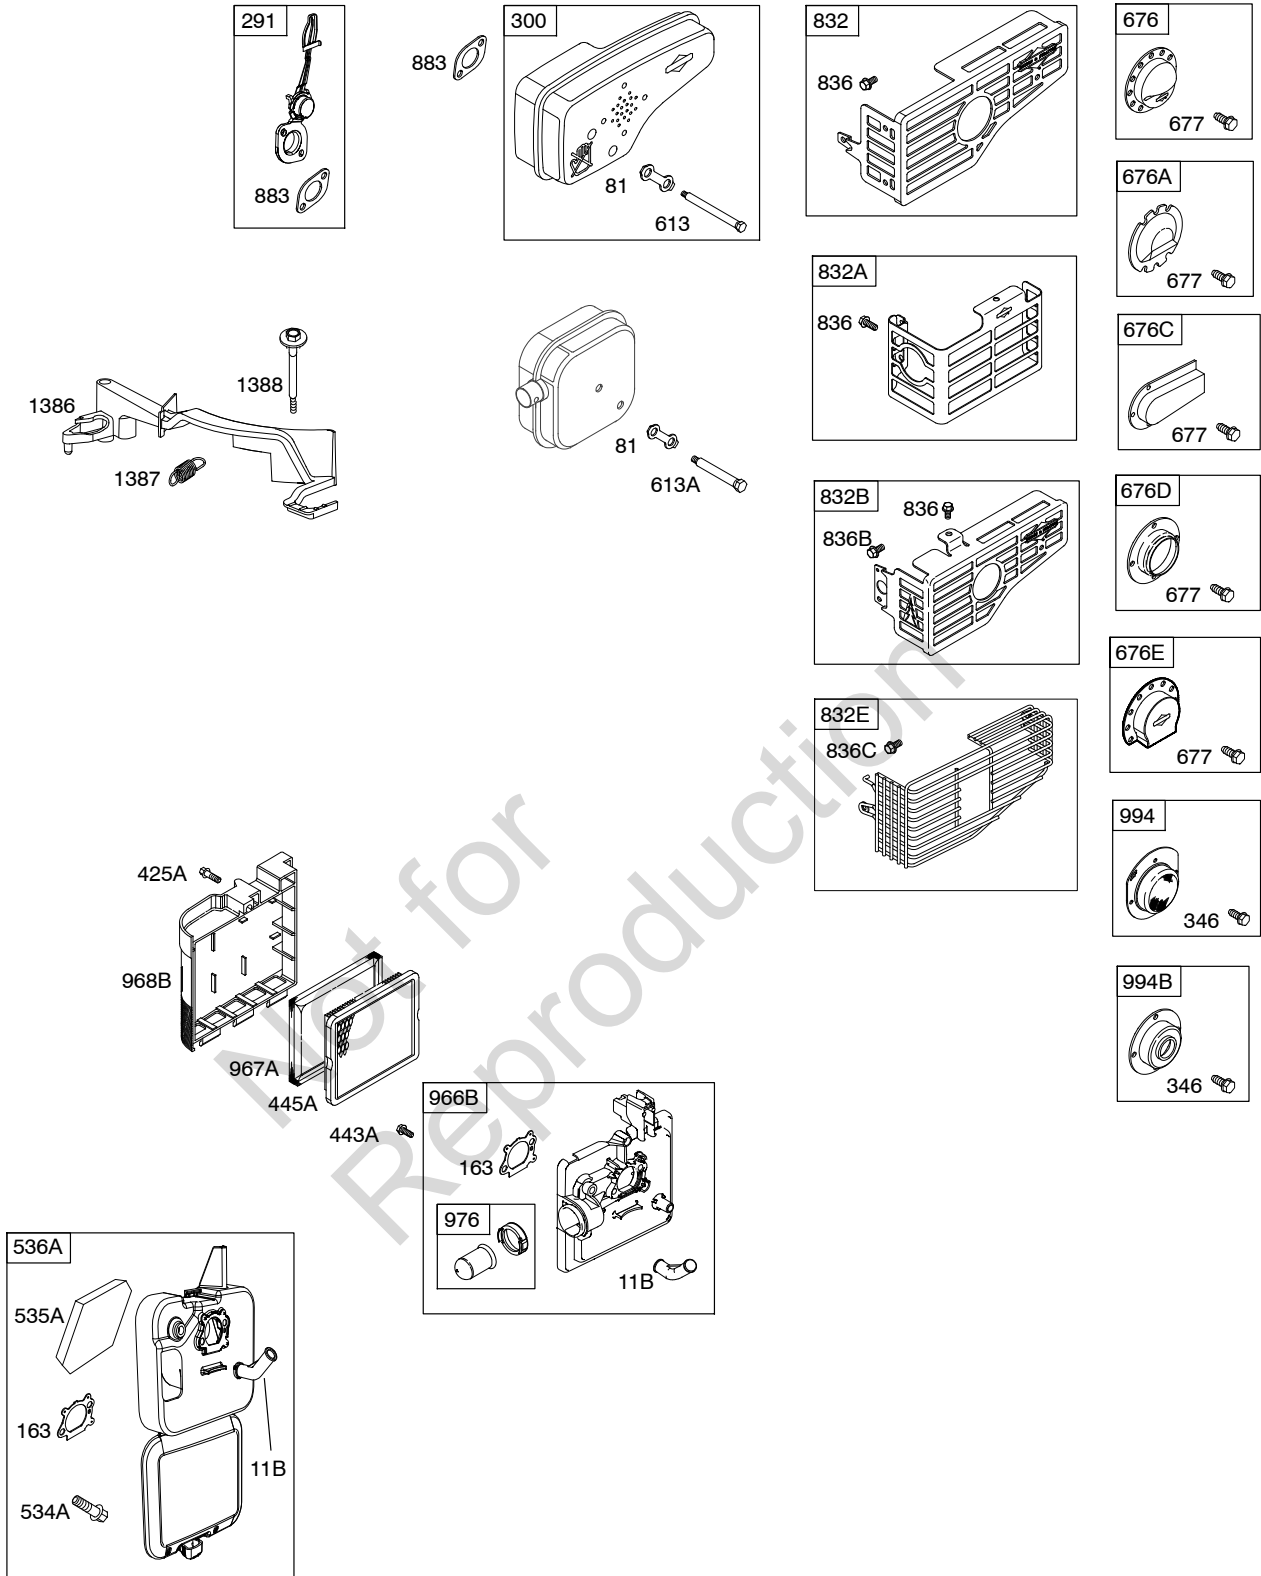

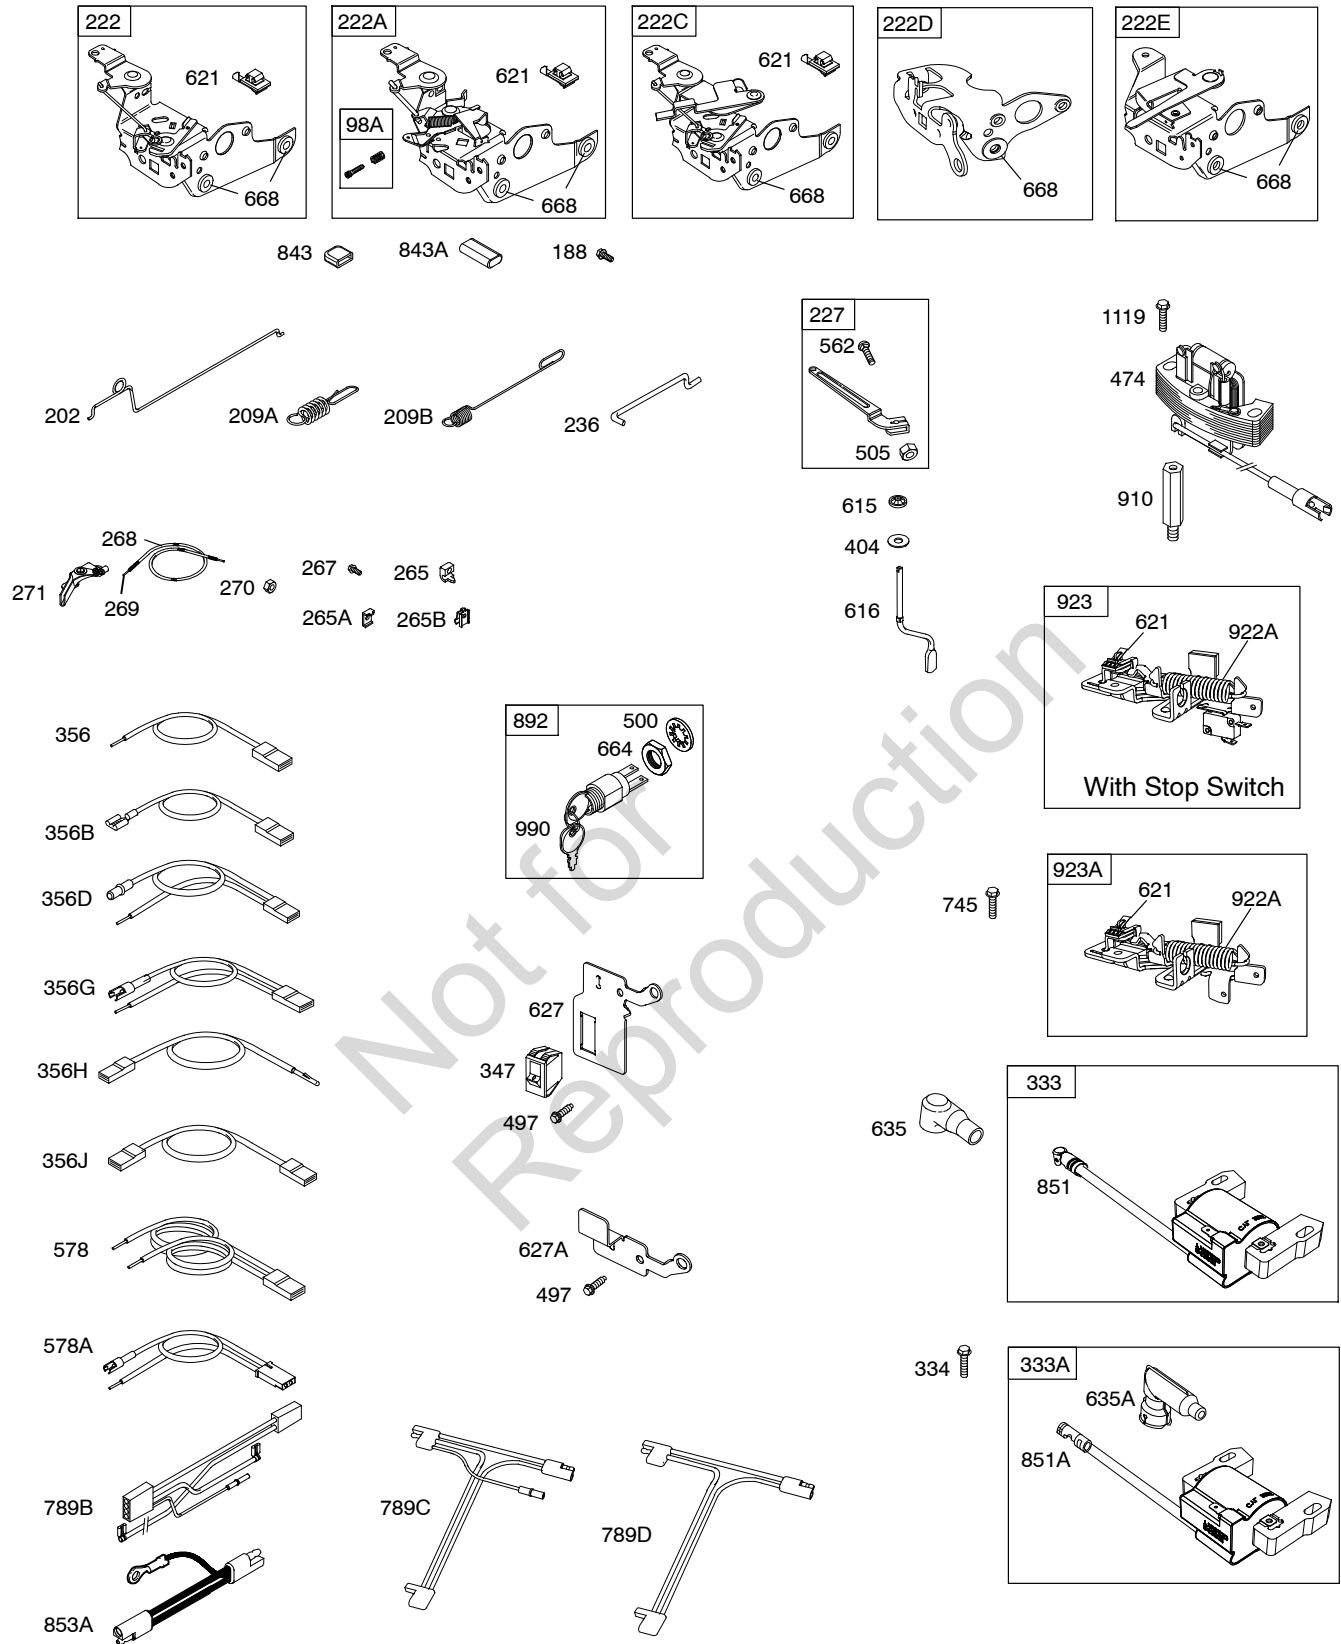

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-5 Assemblies include all parts shown in frames. 10/19/2012

126T00










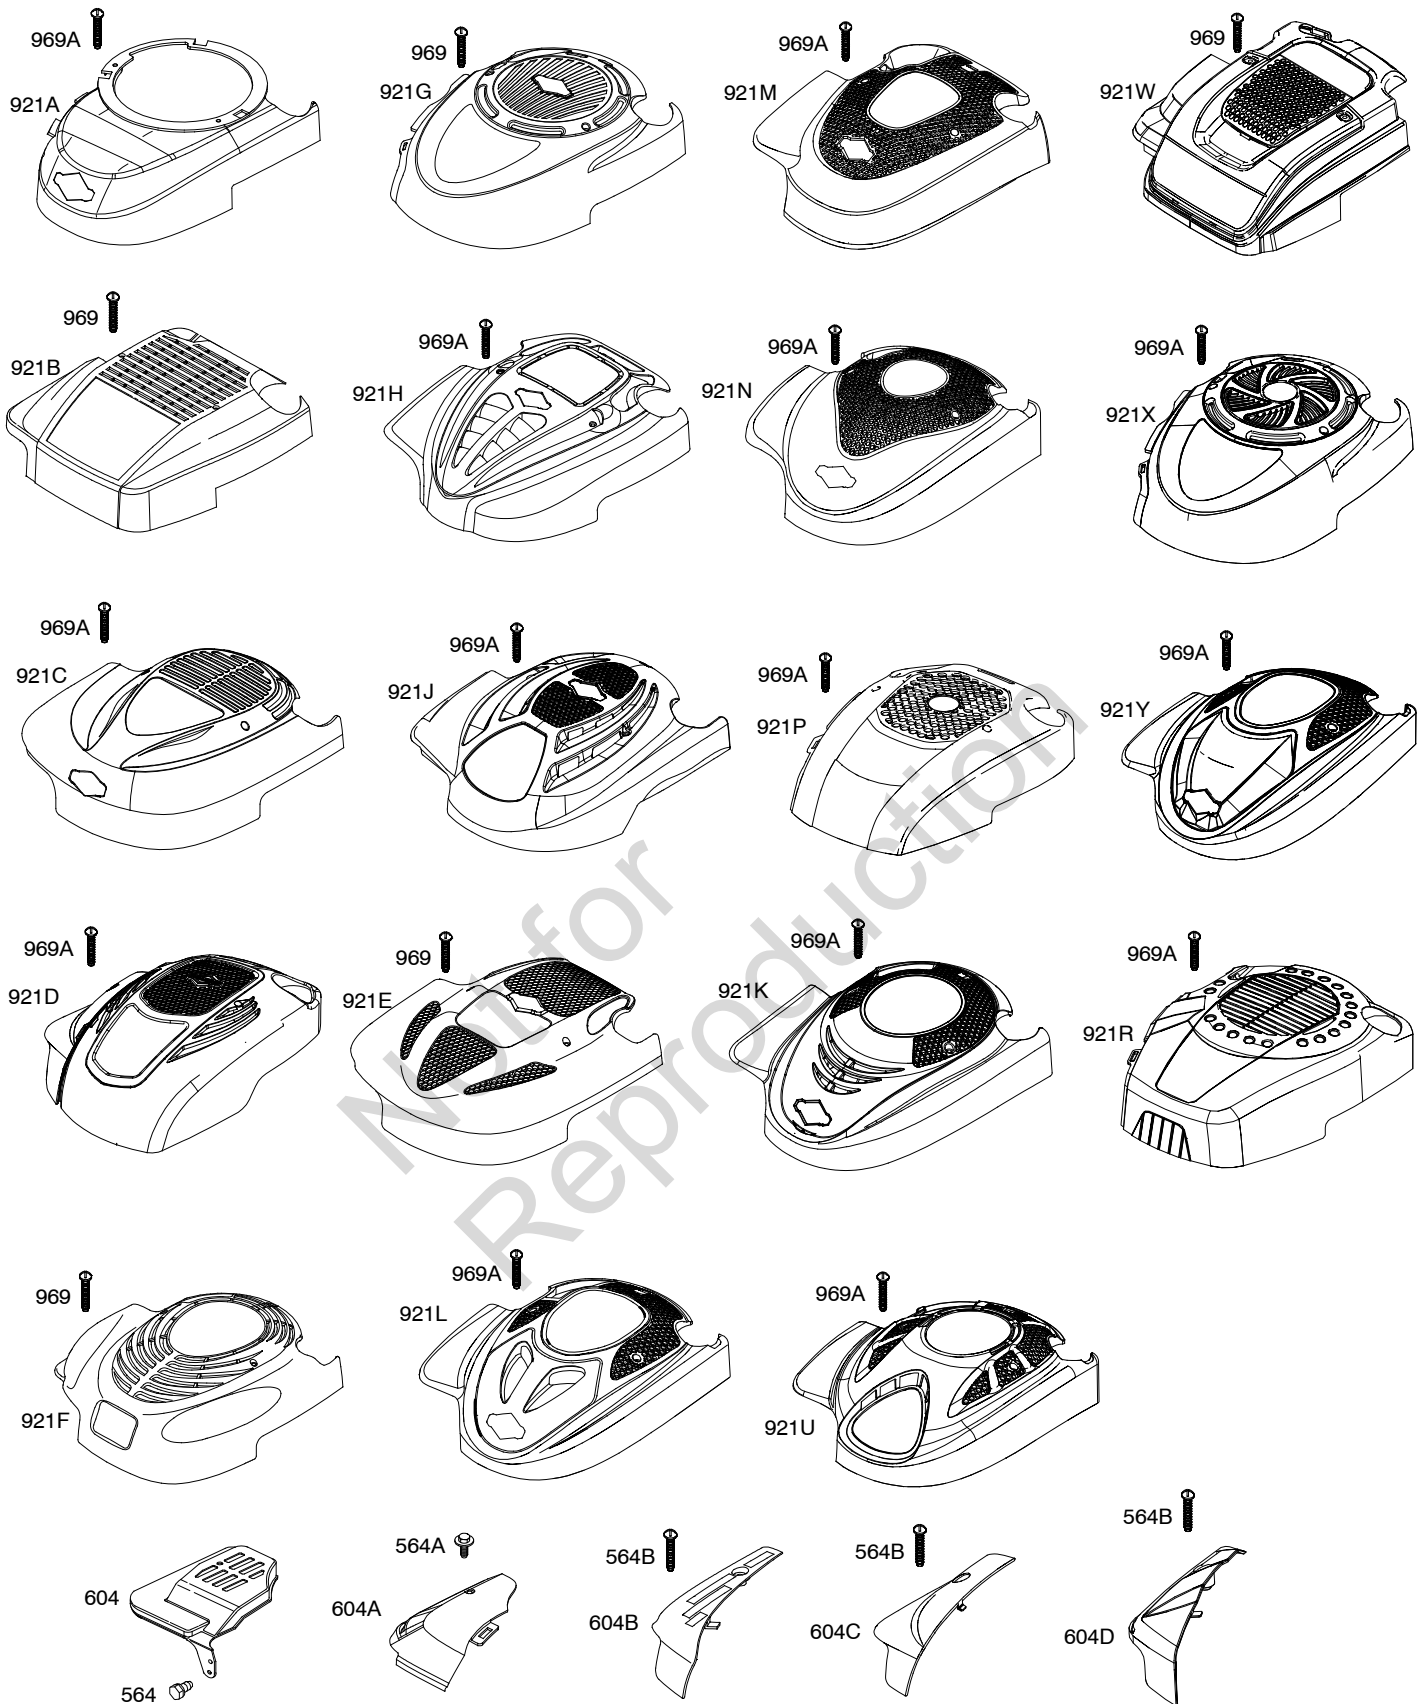


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3728-6

Assemblies include all parts shown in frames.

10/19/2012

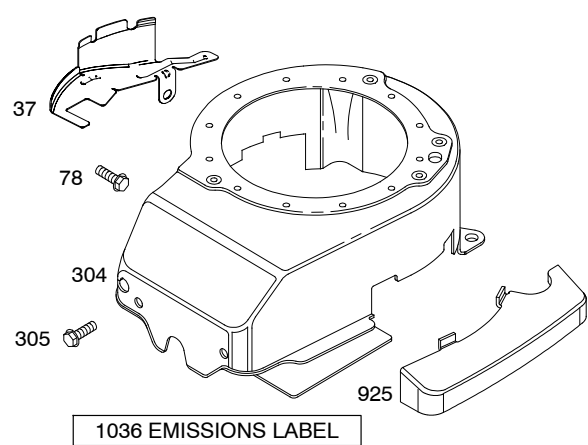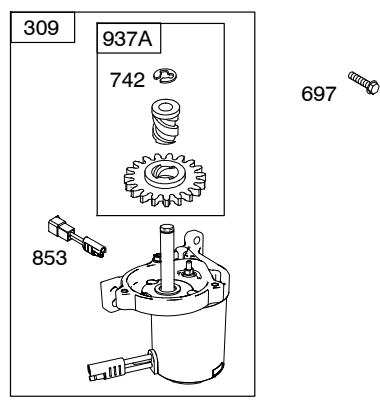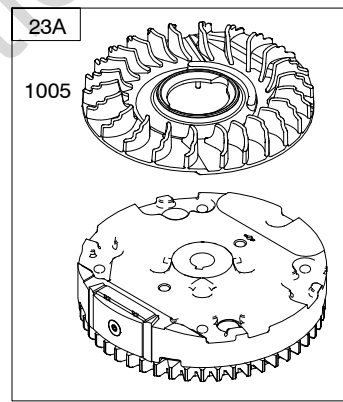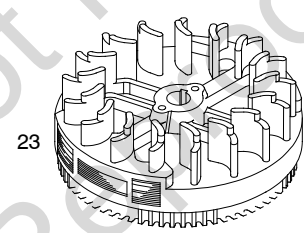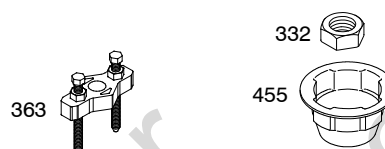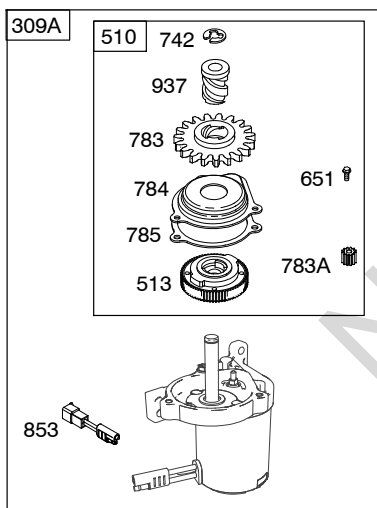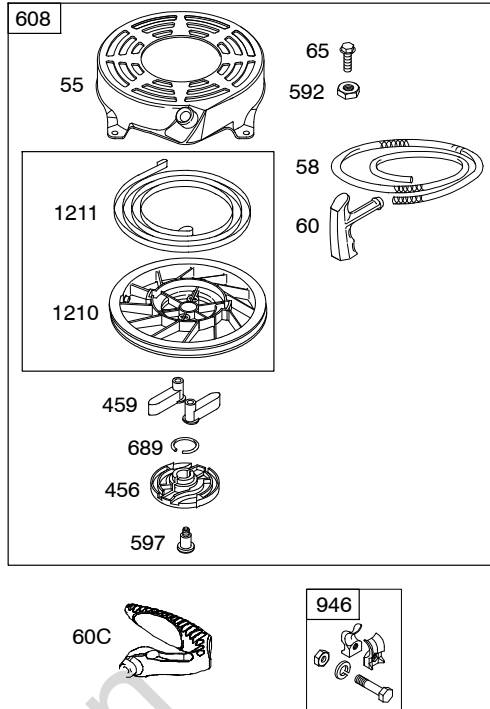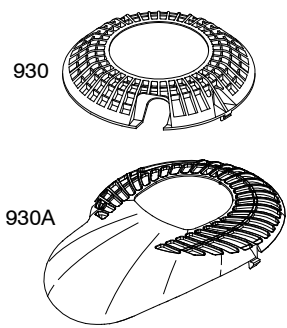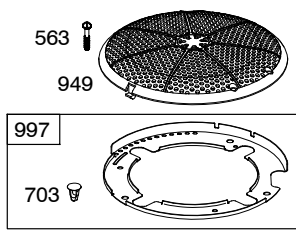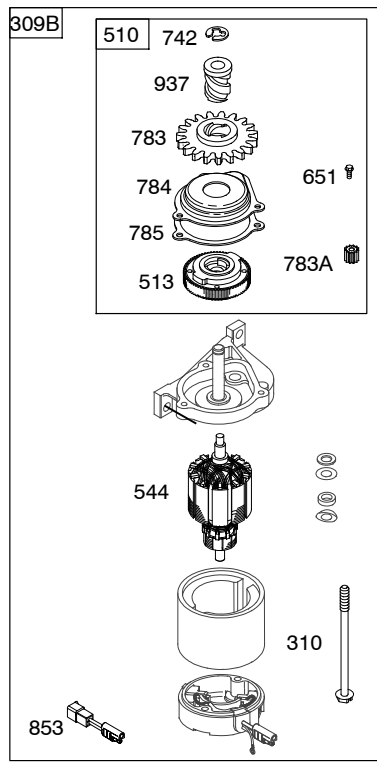

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	590401	Cylinder Assembly	16	797017	Crankshaft		797018	Crankshaft
2	796961	Kit-Bushing/Seal (Magnetos Side)		797372	Crankshaft Used on Type No(s). 0005, 0114, 0128, 0129, 0130, 0131, 0179, 0188, 0191, 0260, 0295, 0301, 0304, 0305, 0321, 0342, 0343, 0344, 0356, 2013, 7128, 7129, 7304, 7305, 7344.		Used on Type No(s). 0004, 0010, 0011, 0015, 0050, 0060, 0121, 0135, 0138, 0148, 0153, 0158, 0159, 0159, 0169, 0172, 0173, 0192, 0194, 0197, 0199, 0203, 0213, 0217, 0235, 0243, 0253, 0254, 0258, 0275, 0276, 0278, 0279, 0281, 0284, 0286, 0291, 0294, 0307, 0309, 0312, 0313, 0318, 0319, 0329, 0339, 0341, 0349, 0359, 0365, 0366, 0377, 0380, 0381, 0383, 0454, 0475, 0479, 0487, 0491, 0555, 0615, 0660, 0826, 1064, 1172, 1724, 1728, 1729, 1750, 1767, 1791, 1802, 1807, 1817, 1820, 1822, 1824, 1833, 1963, 2003, 2004, 2011, 2016, 2021, 2022, 2034, 2041, 2091, 2388, 3281, 4011, 4021, 4121, 4175, 4199, 4244, 4329, 4568, 4824, 4852, 5213, 5244, 5313, 5329, 6021, 6172, 6194, 6199, 6217, 6235, 6243, 6244, 6254, 6258, 6275, 6276, 6281, 6286, 6307, 6319, 6339, 6615, 6824, 7341, 7366, 7852	
3	299819s	Seal-Oil (Magnetos Side)						
4	493279	Sump-Engine ----- Note ----- 498983 Sump-Engine Used on Type No(s). 0006, 0007, 0122.			694850 Crankshaft Used on Type No(s). 0289, 0298. 696290 Crankshaft Used on Type No(s). 0297, 0335. 590808 Crankshaft Used on Type No(s). 0190, 0222, 0256, 0261, 0326, 0330, 0331, 0332, 0374, 0379, 0403, 5332, 7261, 7326, 7330, 7374, 7403. 696009 Crankshaft Used on Type No(s). 0031, 0115, 0123, 0124, 0125, 0139, 0181, 0182, 0183, 0184, 0193, 0204, 0206, 0207, 0216, 0219, 0220, 0224, 0231, 0233, 0236, 0240, 0241, 0271, 0299, 0325, 0327, 0328, 0336, 0933, 1426, 1840, 1841, 3205, 3206, 3212, 4181, 4183, 4216, 4219, 4231, 4233, 4236, 4241, 5123, 5207, 5219, 5507, 5519, 6336, 6628, 7183, 7193, 7206, 7212, 7216, 7233, 7241, 7325, 7841.			
5	590411	Head-Cylinder (Used After Code Date 11063000). ----- Note ----- 691160 Head-Cylinder (Used Before Code Date 11070100).						
7	799875	Gasket-Cylinder Head (Used After Code Date 11063000). ----- Note ----- 692249 Gasket- Cylinder Head (Used Before Code Date 11070100).						
8	590395	Breather Assembly						
9	699833	Gasket-Breather						
10	691125	Screw (Breather Assembly)						
11	691781	Tube-Breather						
11B	691923	Tube-Breather						
12	692232	Gasket-Crankcase						
13	590422	Screw (Cylinder Head) (Used After Code Date 11063000). ----- Note ----- 690912 Screw (Cylinder Head) (Used Before Code Date 11070100).						
15	691680	Plug-Oil Drain (Square Socket)						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
	797019	Crankshaft Used on Type No(s). 0007, 0016, 0122, 0126, 0127, 0147, 0150, 0151, 0154, 0163, 0164, 0168, 0198, 0218, 0221, 0242, 0246, 0255, 0257, 0262, 0277, 0279, 0280, 0282, 0290, 0306, 0311, 0317, 0333, 0357, 0364, 0367, 0370, 0375, 0402, 0480, 0568, 0680, 0878, 1727, 1733, 1734, 1737, 1738, 1739, 1740, 1748, 1749, 1794, 1801, 1803, 1804, 1805, 1808, 1810, 1814, 1816, 1818, 1821, 1823, 1825, 1826, 1827, 1829, 1830, 1831, 1832, 1835, 1837, 1839, 1844, 1845, 1846, 1847, 1849, 1852, 1853, 1904, 1914, 1917, 1926, 1941, 1958, 1965, 1966, 1992, 1995, 2006, 2008, 2010, 2112, 2014, 2015, 2017, 2023, 2027, 2035, 2148, 2149, 2304, 3198, 3279, 3280, 4015, 4135, 4163, 4164, 4169, 4242, 4680, 4816, 4823, 4825, 4829, 4830, 4837, 4849, 4995, 5262, 5823, 6126, 6135, 6169, 6198, 6218, 6242, 6277, 6280, 6317, 6333, 6357, 6367, 6375, 6621, 6623, 6657, 6679, 6680, 6695, 6816, 6825, 6829, 6830, 6837, 6845, 6849, 6941, 7306, 7878.		797020	Crankshaft Used on Type No(s). 0283, 0539, 1706, 4706, 6246, 6539, 6683, 6706. 797681 Crankshaft Used on Type No(s). 0006, 0018, 0334, 0523, 6356. 695242 Crankshaft Used on Type No(s). 0026. 791061 Crankshaft Used on Type No(s). 0030, 0116, 0209, 0225, 0227, 0230, 0234, 0237. 694478 Crankshaft Used on Type No(s). 0521, 0538. 694079 Crankshaft Used on Type No(s). 1701.	20 399781s	Seal-Oil (PTO Side)	23 691987	Flywheel	23A 591282	Flywheel Used on Type No(s). 0004, 0005, 0006, 0007, 0010, 0030, 0050, 0114, 0116, 0122, 0128, 0129, 0130, 0131, 0164, 0169, 0179, 0188, 0190, 0191, 0192, 0198, 0203, 0209, 0213, 0222, 0225, 0227, 0230, 0234, 0237, 0256, 0261, 0281, 0282, 0289, 0290, 0291, 0295, 0298, 0301, 0304, 0305, 0309, 0312, 0317, 0321, 0326, 0330, 0331, 0332, 0334, 0335, 0342, 0343, 0344, 0364, 0365, 0366, 0374, 0375, 0379, 0403, 0523, 0826, 0933, 1064, 1137, 1802, 1807, 1822, 1849, 2013, 2016, 3198, 3281, 4164, 4242, 4824, 4849, 5213, 5332, 6198, 6242, 6281, 6317, 6375, 6824, 6849, 7128, 7129, 7261, 7304, 7305, 7326, 7330, 7344, 7366, 7374, 7403.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
24	222698s	Key-Flywheel	26	590402	Ring Set (Standard) (Used After Code Date 11063000). ----- Note ----- 797304 Ring Set (Standard) (Used After Code Date 09041600 and Before Code Date 11070100). 795431 Ring Set (Standard) (Used After Code Date 07090300 and Before Code Date 09041700). 791098 Ring Set (Standard) (Used Before Code Date 07090400). 590403 Ring Set (.020" Oversize) (Used After Code Date 11063000). 797305 Ring Set (.020" Oversize) (Used After Code Date 09041600 and Before Code Date 11070100). 795432 Ring Set (.020" Oversize) (Used After Code Date 07090300 and Before Code Date 09041700). 791324 Ring Set (.020" Oversize) (Used Before Code Date 07090400).	29	797306	Rod-Connecting (Used After Code Date 09041600). ----- Note ----- 499424 Rod-Connecting (Used Before Code Date 09041700).
25	590404	Piston Assembly (Standard) (Used After Code Date 09041600) ----- Note ----- 795429 Piston Assembly (Standard) (Used Before Code Date 09041700). 590405 Piston Assembly (.020" Oversize) (Used After Code Date 11063000). 797303 Piston Assembly (.020" Oversize) (Used After Code Date 09041600 and Before Code Date 11070100). 799064 Piston Assembly (.020" Oversize) (Used Before Code Date 09041700).				32	691664	Screw (Connecting Rod)
						32A	695759	Screw (Connecting Rod)
						33	590394	Valve-Exhaust
						34	590393	Valve-Intake
						35	691270	Spring-Valve (Intake)
						36	691270	Spring-Valve (Exhaust)
						37	793756	Guard-Flywheel
						40	692194	Retainer-Valve
						43	691997	Slinger-Governor/Oil ----- Note ----- 691486 Slinger-Governor/Oil Used on Type No(s). 0321.
						45	690548	Tappet-Valve
						46	691449	Camshaft
						50A	794305	Manifold-Intake
						51	272199s	Gasket-Intake
						51A	794306	Gasket-Intake
						54	691650	Screw (Intake Manifold)
						55	691421	Housing-Rewind Starter
						58	697316	Rope-Starter (Cut To Required Length) ----- Note ----- 791362 Rope-Starter Used on Type No(s). 0132, 0133, 0143, 0144, 0165, 0166, 0175, 0181, 0201, 0208, 0234, 0263, 0264, 0266, 0268, 0479, 0487, 0491, 4132, 5132, 5208, 5264, 5266, 5566, 7263.
			27	691588	Lock-Piston Pin (Used After Code Date 09041600). ----- Note ----- 691866 Lock-Piston Pin (Used Before Code Date 09041700).			
			28	298909	Pin-Piston (Used After Code Date 09041600). ----- Note ----- 499423 Pin-Piston (Used Before Code Date 09041700).			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
60	281434s	Grip-Starter Rope	117	498978	Jet-Main (Standard)		797574	Jet-Main (Standard)
60C	799716	Grip-Starter Rope			----- Note -----			Used on Type No(s).
65	690837	Screw (Rewind Starter)			692677 Jet-Main (Standard)			3198, 3279, 3280,
78	691108	Screw (Flywheel Guard)			(Used After Code Date 07020600).			3281, 6198, 6280,
81	691740	Lock-Muffler Screw			Used on Type No(s).			6281, 6679, 6683,
95	691636	Screw (Throttle Valve)			0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761.			6706.
97	493267	Shaft-Throttle (Metal)			494870 Jet-Main (Standard)			590440 Jet-Main (Standard)
		----- Note -----			(Used Before Code Date 07020700).			Used on Type No(s).
		696565 Shaft-Throttle (Plastic)			Used on Type No(s).			0376, 0377, 0383,
		795881 Shaft-Throttle Used on Type No(s).			0761, 3761.			0384, 0480, 5317,
		0007, 0192, 0122, 0213, 5213.			798661 Jet-Main (Standard)			5519, 5522, 5523,
98A	493280	Kit-Idle Speed			Used on Type No(s).			5524, 5540, 5563,
104	797622	Pin-Float Hinge			5507, 6126, 6243, 6244, 6941, 7174, 7272, 7341, 7366, 7380, 7404, 7841, 7878.			5566, 5373, 5584,
108	691182	Valve-Choke						5585, 5594, 6021,
		----- Note -----						6135, 6150, 6151,
		796993 Valve-Choke Used on Type No(s).						6155, 6169, 6172,
		7129.						6175, 6194, 6199,
108A	795935	Valve-Choke (Used After Code Date 08031200).	117A	498981	Jet-Main (Standard)			6217, 6218, 6229,
		----- Note -----			----- Note -----			6235, 6241, 6242,
		790844 Valve-Choke (Used Before Code Date 08031300).			697355 Jet-Main (Standard)			6246, 6254, 6258,
		799465 Valve-Choke Used on Type No(s).			Used on Type No(s).			6275, 6276, 6277,
		3198, 3279, 3280, 3281, 6198, 6280, 6281, 6679, 6683, 6706.			0007, 0122, 0192, 0213, 5213.			6286, 6307, 6317,
109	494218	Shaft-Choke			797574 Jet-Main (Standard)			6319, 6333, 6336,
109A	498593	Shaft-Choke	117B	498977	Jet-Main (Standard)			6339, 6356, 6357,
					(Used After Code Date 08061900).			6367, 6375, 6539,
					----- Note -----			6603, 6610, 6615,
					691428 Jet-Main (Standard)			6621, 6623, 6628,
					(Used After Code Date 07020600 and Before Code Date 08062000).			6657, 6659, 6680,
					697355 Jet-Main (Standard)			6694, 6695, 6816,
					(Used Before Code Date 07020700).			6824, 6825, 6829,
					695042 Jet-Main (Standard)			6830, 6837, 6845,
					Used on Type No(s).			6847, 7128, 7177,
					0343, 0344, 7344.			7183, 7193, 7196,
								7206, 7212, 7215,
								7216, 7233, 7241,
								7242, 7261, 7263,
								7268, 7287, 7288,
								7304, 7305, 7306,
								7308, 7310, 7315,
								7316, 7325, 7326,
								7330, 7338, 7340,
								7351, 7355, 7368,
								7369, 7374, 7403,
								7435, 7594, 7852,
								7932.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118	498975	Jet-Main (High Altitude) ----- Note ----- 497315 Jet-Main (High Altitude) Used on Type No(s). 0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761. 798660 Jet-Main (High Altitude) Used on Type No(s). 5507, 6126, 6243, 6244, 6941, 7174, 7272, 7341, 7366, 7380, 7404, 7841, 7878.		798661 Jet-Main (High Altitude) Used on Type No(s). 0376, 0377, 0383, 0384, 0480, 5317, 5519, 5522, 5523, 5524, 5540, 5563, 5566, 5373, 5584, 5585, 5594, 6021, 6135, 6150, 6151, 6155, 6169, 6172, 6175, 6194, 6199, 6217, 6218, 6229, 6235, 6241, 6242, 6246, 6254, 6258, 6275, 6276, 6277, 6286, 6307, 6317, 6319, 6333, 6336, 6339, 6356, 6357, 6367, 6375, 6539, 6603, 6610, 6615, 6621, 6623, 6628, 6657, 6659, 6680, 6694, 6695, 6816, 6824, 6825, 6829, 6830, 6837, 6845, 6847, 7128, 7177, 7183, 7193, 7196, 7206, 7212, 7215, 7216, 7233, 7241, 7242, 7261, 7263, 7268, 7287, 7288, 7304, 7305, 7306, 7308, 7310, 7315, 7316, 7325, 7326, 7330, 7338, 7340, 7351, 7355, 7368, 7369, 7374, 7403, 7435, 7594, 7852, 7932.		121	498260	Kit-Carburetor Overhaul
						125	498170	Carburetor (Primer System) ----- Note ----- 694882 Carburetor (Primer System) (Used After Code Date 07020600). Used on Type No(s). 0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761. 799872 Carburetor (Primer System) (Used Before Code Date 07020700). Used on Type No(s). 0761, 3761. 799868 Carburetor (Primer System) Used on Type No(s). 5507, 6126, 6243, 6244, 6941, 7174, 7272, 7341, 7366, 7380, 7404, 7841, 7878.
118A	494870	Jet-Main (High Altitude) ----- Note ----- 692677 Jet-Main (High Altitude) Used on Type No(s). 0007, 0122, 0192, 0213, 5213. 797575 Jet-Main (High Altitude) Used on Type No(s). 7129.				125A	799869	Carburetor (Choke System) ----- Note ----- 790978 Carburetor (Choke System) Used on Type No(s). 1746, 1801, 1802, 1803, 1804, 1805. 799870 Carburetor (Choke System) Used on Type No(s). 0007, 0122, 0192, 0213, 5313.
118B	694250	Jet-Main (High Altitude) (Used After Code Date 08061900). ----- Note ----- 695042 Jet-Main (High Altitude) (Used After Code Date 07020600 and Before Code Date 08062000). 692677 Jet-Main (High Altitude) (Used Before Code Date 07020700). 694975 Jet-Main (High Altitude) Used on Type No(s). 0343, 0344, 7344. 797575 Jet-Main (High Altitude) Used on Type No(s). 3198, 3279, 3280, 3281, 6198, 6280, 6281, 6679, 6683, 6706.				125B	794304	Carburetor (Autochoke System) (Used After Code Date 07020600). ----- Note ----- 799871 Carburetor (Autochoke System) (Used Before Code Date 07020700). 798280 Carburetor (Autochoke System) Used on Type No(s). 0343, 0344, 7344.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	799464	Carburetor (Autochoke System) Used on Type No(s). 3198, 3279, 3280, 3281, 6198, 6280, 6281, 6679, 6683, 6706.	127	694468	Plug-Welch	209B	691292	Spring-Governor
	799866	Carburetor (Autochoke System) Used on Type No(s). 0376, 0377, 0383, 0384, 0480, 5317, 5519, 5522, 5523, 5524, 5540, 5563, 5566, 5373, 5584, 5585, 5594, 6021, 6135, 6150, 6151, 6155, 6169, 6172, 6175, 6194, 6199, 6217, 6218, 6229, 6235, 6241, 6242, 6246, 6254, 6258, 6275, 6276, 6277, 6286, 6307, 6317, 6319, 6333, 6336, 6339, 6356, 6357, 6367, 6375, 6539, 6603, 6610, 6615, 6621, 6623, 6628, 6657, 6659, 6680, 6694, 6695, 6816, 6824, 6825, 6829, 6830, 6837, 6845, 6847, 7128, 7177, 7183, 7193, 7196, 7206, 7212, 7215, 7216, 7233, 7241, 7242, 7261, 7263, 7268, 7287, 7288, 7304, 7305, 7306, 7308, 7310, 7315, 7316, 7325, 7326, 7330, 7338, 7340, 7351, 7355, 7368, 7369, 7374, 7403, 7435, 7594, 7852, 7932.	130	696564	Valve-Throttle ----- Note ----- 799466 Valve-Choke Used on Type No(s). 3198, 3279, 3280, 3281, 6198, 6280, 6281, 6679, 6683, 6706.			----- Note ----- 699056 Spring-Governor Used on Type No(s). 0004,0015,0016,0018, 0025,0026,0030,0031, 0060,0062,0101,0126, 0138,0140,0143,0144, 0148,0165,0166,0173, 0177,0194,0242,0243, 0244,0248,0284,0318, 0362,0370,0372,0375, 0378,0379,0454,0475, 0479,0480,0487,0491, 0548,0615,0625,0660, 0662,0675,0677,0678, 0709,0761,0763,0782, 0795,0841,0842,0849, 0856,0863,0867,0875, 0878,0880,0890,0893, 0909,0932,1024,1044, 1045,1047,1055,1070, 1071,1111,1133,1135,1 1136,1184,1225,1252, 1297,1298,1343,1346, 1347,1349,1350,1395, 1401,1426,1443,1446, 1525,1527,1561,1576, 1586,1601,1701,1926, 2388,3205,3212,3216, 3217,3709,3761,3763, 3841,3842,3849,4242, 4244,4248,4678,5216, 5217,5244,5248,5252, 5349,5395,5426,5517, 5678,5856,6126,6135, 6194,6242,6243,6244, 6375,6615,7177,7212, 7878,7932.
			130A	691203	Valve-Throttle			
			133	398187	Float-Carburetor			
			134	398188	Kit-Needle/Seat			
			137	796610	Gasket-Float Bowl (1/8" Thick) ----- Note ----- 693981 Gasket-Float Bowl (1/16" Thick)			
			141	796193	Shaft-Choke			
			146	690979	Key-Timing			
			163	795629	Gasket-Air Cleaner			
			187	791766	Line-Fuel (Cut to Required Length)			
			187A	791873	Line-Fuel (Molded)			
			188	693399	Screw (Control Bracket)			
			190	690940	Screw (Fuel Tank)			
			202	691829	Link-Mechanical Governor			
			209A	795883	Spring-Governor			

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		691852 Spring-Governor Used on Type No(s). 0150,0151,0154,0155, 0158,0159,0163,0164, 0168,0180,0182,0183, 0184,0198,0207,0208, 0217,0218,0221,0230, 0231,0233,0234,0235, 0240,0241,0257,0258, 0261,0268,0274,0278, 0279,0280,0282,0286, 0303,0308,0319,0322, 0324,0325,0326,0328, 0332,0333,0336,0341, 0351,0355,0357,0367, 0680,1706,1727,1728, 1729,1739,1740,1748, 1749,1794,1807,1814, 1818,1820,1821,1822, 1823,1824,1825,1830, 1831,1832,1833,1835, 1840,1841,1844,1846, 1847,1914,1958,2006, 2010,2015,2016,2021, 2023,2035,3198,3279, 3280,4015,4021,4135, 4150,4151,4163,4164, 4168,4169,4171,4183, 4184,4231,4233,4240, 4241,4680,4706,4823, 4825,4830,5184,5207, 5208,5240,5264,5266, 5322,5332,5507,5522, 5540,5584,6021,6150, 6151,6169,6198,6217, 6218,6235,6258,6280, 6286,6319,6333,6336, 6357,6367,6603,6621, 6623,6628,6657,6679, 6680,6706,6825,6830, 7183,7196,7233,7241, 7261,7268,7308,7325, 7326,7341,7351,7355, 7374,7841. 691290 Spring-Governor Used on Type No(s). 0005,0114,0129,0130, 0131,0169,0179,0188, 0191,0197,0295,0301, 0304,0305,0321,0342, 0343,0344,2013,7129, 7304,7305,7344.			791157 Spring-Governor Used on Type No(s). 1746,1801,1803,1804, 1805. 691835 Spring-Governor Used on Type No(s). 1802. 790944 Spring-Governor Used on Type No(s). 0523. 795879 Spring-Governor Used on Type No(s). 0007,0122,0192,0213, 5213. 691291 Spring-Governor Used on Type No(s). 0006,0010,0011,0050, 0297,0313,0335,0349, 0521,0538,0826,1064, 1137,5313. 691851 Spring-Governor Used on Type No(s). 0121,0132,0133,0134, 0143,0165,0187,0201, 0263,0264,0266,0272, 0316,0334,0363,0364, 0368,0369,3139,3140, 4121,4132,5132,5563, 5566,7263,7272,7316, 7368,7369. 217 690354 Spring-Choke Return 222 790143 Bracket-Control (Remote/Manual Friction)(Primer) 222A 692021 Bracket-Control (Remote, Choke A Matic, Non Compliance) ----- Note ----- 790982 Bracket-Control Used on Type No(s). 1746, 1801, 1803, 1804, 1805.			222C 692150 Bracket-Control (Variable Speed) (5 Position Manual Choke) ----- Note ----- 795880 Bracket-Control Used on Type No(s). 0007, 0122, 0192, 0213, 5213. 222D 793754 Bracket-Control (Fixed Speed) 222E 692982 Bracket-Control (Manual Friction, 5 Position Manual Choke) 227 690783 Lever-Governor Control 231 691636 Screw (Choke Valve) 236 691826 Link-Lockout 265 690798 Clamp-Casing 265A 691024 Clamp-Casing 265B 692179 Clamp-Casing 267 691044 Screw (Casing Clamp) 268 691025 Casing-Control Wire (Cut to Required Length) 269 691026 Wire-Control (Cut to Required Length) 270 691027 Nut (Control Wire Casing) 271 691028 Lever-Control 276 271716 Washer-Sealing 287 690940 Screw (Dipstick Tube) 291 790830 Thermostat

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	692038	Muffler ----- Note ----- 790828 Muffler Used on Type No(s). 0030,0031,0114,0121, 0123,0124,0125,0128, 0130,0132,0133,0140, 0143,0144,0150,0151, 0158,0159,0161,0164, 0165,0166,0168,0172, 0173,0175,0177,0180, 0181,0183,0190,0191, 0193,0194,0196,0198, 0200,0201,0203,0208, 0215,0216,0217,0218, 0219,0220,0218,0221, 0222,0224,0225,0227, 0230,0231,0233,0234, 0235,0236,0237,0239, 0240,0241,0245,0246, 0247,0248,0251,0253, 0254,0255,0256,0257, 0258,0261,0263,0264, 0265,0266,0267,0268, 0271,0275,0276,0277, 0279,0280,0281,0282, 0283,0284,0285,0286, 0287,0288,0289,0291, 0294,0295,0298,0299, 0301,0303,0304,0305, 0306,0307,0308,0309, 0310,0311,0312,0315, 0316,0317,0318,0319, 0321,0322,0323,0324, 0325,0326,0327,0328, 0330,0331,0332,0333, 0336,0338,0339,0340, 0342,0344,0351,0355, 0356,0357,0359,0362, 0363,0364,0365,0367, 0368,0369,0370,0372, 0373,0374,0375,0376, 0377,0378,0384,0383, 0379,0395,0400,0401, 0402,0403,0454,0475, 0480,0487,0491,0539, 0548,0555,0615,0625, 0660,0662,0675,0677, 0678,0709,0782,0795, 0849,0856,0863,0867, 0875,0880,0890,0893, 0932,0933,0985,0992, 1003,1006,1024,1044, 1045,1047,1055,1071, 1133,1135,1155,1163, 1164,1184,1225,1229,			1241,1242,1252,1297, 1298,1343,1346,1347, 1349,1350,1394,1395, 1401,1426,1435,1446, 1561,1586,1594,1706, 1738,1807,1808,1823, 1825,1827,1831,1845, 1847,1849,1851,1963, 1965,2011,2015,2016, 2017,2021,2022,2034, 2041,3205,3206,3212, 3216,3217,3279,3280, 3281,3709,3849,4011, 4015,4021,4121,4132, 4135,4150,4151,4163, 4164,4169,4171,4175, 4181,4183,4184,4199, 4216,4219,4231,4233, 4236,4240,4241,4242, 4248,4329,4410,4568, 4678,4680,4706,4816, 4823,4824,4825,4829, 4830,4837,4849,4852, 4995,5123,5132,5184, 5208,5216,5217,5219, 5239,5248,5252,5264, 5266,5285,5322,5323, 5324,5332,5349,5373, 5394,5395,5400,5426, 5517,5519,5522,5523, 5524,5540,5563,5566, 5573,5584,5585,5594, 5678,5823,5856,6021, 6135,6150,6151,6155, 6169,6172,6175,6194, 6198,6199,6217,6218, 6229,6235,6241,6242, 6246,6254,6258,6275, 6276,6277,6280,6281, 6286,6307,6317,6319, 6333,6336,6339,6356, 6357,6367,6375,6539, 6603,6610,6615,6621, 6623,6628,6657,6659, 6679,6680,6683,6694, 6695,6706,6816,6824, 6825,6829,6830,6837, 6845,6849,7128,7177, 7183,7193,7196,7206, 7212,7215,7216,7233, 7241,7242,7261,7263, 7268,7287,7288,7304, 7305,7306,7308,7310, 7315,7316,7325,7326, 7330,7338,7340,7344, 7351,7355,7368,7369,			7374,7403,7435,7594, 7852,7932. 792677 Muffler Used on Type No(s). 0329,0343,1003,1844, 5329.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	790826	Housing-Blower ----- Note ----- 795071 Housing-Blower Used on Type No(s). 0015,0016,0018,0025, 0026,0060,0062,0115, 0139,0147,0162,0171, 0173,0204,0206,0226, 0238,0244,0479,0841, 1701,1727,1728,1733, 1734,1740,1767,1791, 1794,1801,1803,1804, 1805,1810,1814,1821, 1832,1833,1840,1904, 1914,1958,1992,1995, 2003,2004,2006,2008, 2010,2023,2304,2388, 3841,5062. 493294 Housing -Blower Used on Type No(s). 0004,0005,0006,0007, 0010,0050,0116,0122, 0129,0131,0169,0179, 0187,0188,0192,0197, 0203,0209,0213,0242, 0252,0272,0289,0290, 0291,0297,0298,0309, 0312,0313,0334,0335, 0349,0365,0366,0521, 0523,0538,0826,0878, 1064,1137,1377,1378, 1380,1729,1802,1822, 1839,1926,1941,2013, 2014,2027,3139,3140, 5213,5313,6941,7129, 7272,7366,7380,7878. 790983 Housing-Blower Used on Type No(s). 0132,0140,0143,0166, 0181,0182,0183,0184, 0220,0224,0279,0329, 0475,0660,0662,0880, 0893,0933,1070,1071, 1136,1738,1739,1808, 1823,1826,1847,2015, 2017,5823.		695892 Housing-Blower Used on Type No(s). 0011,0101,0117,0126, 0134,0135,0138,0145, 0146,0148,0153,0154, 0174,0176,0199,0207, 0243,0251,0341,0401, 0404,0568,0680,0761, 0763,0842,0951,1009, 1037,1172,1724,1737, 1742,1746,1749,1818, 1820,1830,1837,1841, 1850,1852,1917,1966, 2012,2035,2148,2149, 3761,3763,3842,4162, 4244,5207,5244,5507, 6126,6243,6244,7174, 7341,7404,7841. 791291 Housing -Blower Used on Type No(s). 0030,0114,0128,0130, 0164,0190,0191,0222, 0225,0227,0230,0234, 0237,0256,0258,0260, 0261,0277,0281,0282, 0295,0301,0304,0305, 0316,0321,0326,0330, 0331,0332,0342,0343, 0344,0363,0364,0368, 0369,0374,0375,0379, 0380,0403,0480,1750, 1807,1817,1824,1849, 1851,2016,2034,3281, 4164,4242,4824,4849, 5332,5563,6242,6258, 6277,6281,6317,6375, 6824,6849,7128,7261, 7304,7305,7316,7326, 7330,7344,7368,7369, 7374,7403.	310	692327	Bolt (Starter Motor)	
				332	690662	Nut (Flywheel)		
				333	590454	Armature-Magneto Used on Type No(s). 0004, 0005, 0006, 0007, 0010, 0011, 0015, 0016, 0018, 0025, 0026, 0030, 0031, 0050, 0060, 0062, 0101, 0114, 0115, 0122, 0123, 0124, 0125, 0126, 0130, 0131, 0132, 0133, 0134, 0138, 0139, 0140, 0162, 0165, 0166, 0173, 0181, 0182, 0191, 0192, 0197, 0200, 0201, 0203, 0204, 0206, 0209, 0210, 0213, 0215, 0220, 0222, 0224, 0225, 0226, 0243, 0244, 0256, 0264, 0267, 0272, 0284, 0289, 0290, 0291, 0295, 0297, 0298, 0299, 0301, 0321, 0331, 0334, 0335, 0342, 0362, 0364, 0370, 0378, 0379, 0402, 0454, 0475, 0479, 0480, 0487, 0491, 0521, 0523, 0538, 0548, 0615, 0625, 0660, 0662, 0675, 0677, 0687, 0709, 0761, 0763, 0782, 0795, 0849, 0856, 0863, 0890, 0932, 0933, 1024, 1044, 1045, 1055, 1064, 1070, 1071, 1184, 1225, 1252, 1297, 1298, 1346, 1347, 1349, 1350, 1378, 1401, 1426, 1443, 1446, 1525, 1527, 1561, 1601, 1701, 1724, 1727, 1728, 1733, 1734, 1738, 1740, 1746, 1767, 1791, 1794, 1801, 1802, 1803, 1804,		
	305	691108	Screw (Blower Housing)					
	306	690450	Shield-Cylinder					
	306A	790836	Shield-Cylinder					
	307	690345	Screw (Cylinder Shield)					
	309	799045	Motor-Starter					
	309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)					
	309B		Motor-Starter (For Replacement Starter Motor, Order Reference 309)					

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		1805, 1817, 1839, 1851, 1904, 1914, 1958, 1966, 1992, 2003, 2004, 2006, 2008, 2010, 2013, 2014, 2027, 2034, 2304, 2388, 3139, 3140, 3205, 3216, 3709, 3761, 3763, 3841, 3842, 3849, 4132, 4162, 4181, 4226, 4244, 4678, 5062, 5123, 5132, 5213, 5216, 5226, 5244, 5252, 5264, 5349, 5426, 5563, 5678, 5856, 6198, 7368, 7369.						
333A	590455	Armature-Magneto	347	691396	Switch-Rocker	535A	797301	Filter-Air Cleaner Foam
334	691061	Screw (Magneto Armature)	356	692390	Wire-Stop	536A	798293	Cleaner-Air
337	591868	Plug-Spark (Used After Code Date 11063000).	356B	693010	Wire-Stop	544	690786	Armature-Starter
		----- Note -----	356D	496381	Wire-Stop	562	691119	Bolt (Governor Control Lever)
		796112s Plug-Spark (Resistor) (Used Before Code Date 11070100).	356G	695283	Wire-Stop	563	691138	Screw (Debris Guard Screen)
		697451 Plug-Spark (EMS) (Used Before Code Date 11070100).	356H	690791	Wire-Stop	564	690664	Screw (Control Cover)
		----- Note -----	356J	691423	Wire-Stop	564A	691142	Screw (Control Cover)
		591910 Plug-Spark Used on Type No(s). 0399.	358	590508	Gasket Set-Engine	564B	698589	Screw (Control Cover)
346	690661	Screw (Spark Arrester)	363	19069	Flywheel Puller	578	398153	Wire-Assembly
			365	691688	Screw (Carburetor)	578A	695283	Wire-Assembly
			383	89838S	Wrench-Spark Plug	584	697734	Cover-Breather Passage
			404	690272	Washer (Governor Crank)	585	691879	Gasket-Breather Passage
			425A	690670	Screw (Air Cleaner Cover)	592	690800	Nut (Rewind Starter)
			443A	692523	Screw (Air Cleaner Primer Base)	597	691696	Screw (Pawl Friction Plate)
			445A	491588S	Filter-Air Cleaner Cartridge			
			455	791960	Cup-Flywheel			
			456	692299	Plate-Pawl Friction			
			459	281505s	Plate-Ratchet			
			474	691991	Alternator			
			497	690664	Screw (Stop Switch Bracket)			
			500	691086	Washer (Key Switch)			
			505	691251	Nut (Governor Control Lever)			
			510	795093	Drive-Starter			
			513	795100	Clutch-Drive			
			523	499621	Dipstick			
			524	692296	Seal-Dipstick Tube			
			525	495265	Tube-Dipstick			
			534A	798294	Screw (Air Cleaner)			

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
601	791850	Clamp-Hose			0321,0322,0323,0324,			6135,6150,6151,6155,
601A	691038	Clamp-Hose			0325,0326,0327,0328,			6169,6172,6175,6194,
604	691757	Cover-Control			0330,0331,0332,0333,			6198,6199,6217,6218,
604A	691344	Cover-Control			0336,0338,0339,0340,			6229,6235,6241,6242,
604B	790703	Cover-Control			0342,0344,0351,0355,			6246,6254,6258,6275,
604C	792418	Cover-Control			0356,0357,0359,0362,			6276,6277,6280,6281,
604D	793770	Cover-Control			0363,0364,0365,0367,			6286,6307,6317,6319,
608	497680	Starter-Rewind			0368,0369,0370,0372,			6333,6336,6339,6356,
		----- Note -----			0373,0374,0375,0376,			6357,6367,6375,6539,
		791363 Starter-Rewind			0377,0378,0383,0384,			6603,6610,6615,6621,
		Used on Type No(s).			0379,0395,0400,0401,			6623,6628,6657,6659,
		0132, 0133, 0143,			0402,0403,0454,0475,			6679,6680,6683,6694,
		0144, 0165, 0166,			0480,0487,0491,0539,			6695,6706,6816,6824,
		0175, 0181, 0201,			0548,0555,0615,0625,			6825,6829,6830,6837,
		0208, 0234, 0263,			0660,0662,0675,0677,			6845,6849,7128,7177,
		0264, 0266, 0268,			0678,0709,0782,0795,			7183,7193,7196,7206,
		0479, 0487, 0491,			0849,0856,0863,0867,			7212,7215,7216,7233,
		4132, 5132, 5208,			0875,0880,0890,0893,			7241,7242,7261,7263,
		5264, 5266, 5566,			0932,0933,0985,0992,			7268,7287,7288,7304,
		7263.			1003,1006,1024,1044,			7305,7306,7308,7310,
					1045,1047,1055,1071,			7315,7316,7325,7326,
613	691340	Screw			1133,1135,1155,1163,			7330,7338,7340,7344,
		(Muffler)			1164,1184,1225,1229,			7351,7355,7368,7369,
		----- Note -----			1241,1242,1252,1297,			7374,7403,7435,7594,
		790833 Screw			1298,1343,1346,1347,			7852,7932
		(Muffler)			1349,1350,1394,1395,			792678 Screw
		Used on Type No(s).			1401,1426,1435,1446,			(Muffler)
		0030,0031,0114,0121,			1561,1586,1594,1706,			Used on Type No(s).
		0123,0124,0125,0128,			1738,1807,1808,1823,			0329,0343,1003,1844,
		0130,0132,0133,0140,			1825,1827,1831,1845,			5329.
		0143,0144,0150,0151,			1847,1849,1851,1963,	613A	691653	Screw
		0158,0159,0161,0164,			1965,2011,2015,2016,			(Muffler)
		0165,0166,0168,0172,			2017,2021,2022,2034,	615	690340	Retainer-Governor
		0173,0175,0177,0180,			2041,3205,3206,3212,			Shaft
		0181,0183,0190,0191,			3216,3217,3279,3280,	616	698801	Crank-Governor
		0193,0194,0196,0198,			3281,3709,3849,4011,	617	270344	Seal-O Ring
		0200,0201,0203,0208,			4015,4021,4121,4132,			(Intake Manifold)
		0215,0216,0217,0218,			4135,4150,4151,4163,	621	692310	Switch-Stop
		0219,0220,0218,0221,			4164,4169,4171,4175,	627	792565	Bracket-Stop Switch
		0222,0224,0225,0227,			4181,4183,4184,4199,	627A	793211	Bracket-Stop Switch
		0230,0231,0233,0234,			4216,4219,4231,4233,	633	691321	Seal-Choke/Throttle
		0235,0236,0237,0239,			4236,4240,4241,4242,			Shaft
		0240,0241,0245,0246,			4248,4329,4410,4568,	633A	693867	Seal-Choke/Throttle
		0247,0248,0251,0253,			4678,4680,4706,4816,			Shaft
		0254,0255,0256,0257,			4823,4824,4825,4829,	635	66538s	Boot-Spark Plug
		0258,0261,0263,0264,			4830,4837,4849,4852,	635A	793351	Boot-Spark Plug
		0265,0266,0267,0268,			4995,5123,5132,5184,	651	691660	Screw
		0271,0275,0276,0277,			5208,5216,5217,5219,			(Starter Gear Cover)
		0279,0280,0281,0282,			5239,5248,5252,5264,	664	691087	Nut
		0283,0284,0285,0286,			5266,5285,5322,5323,			(Key Switch)
		0287,0288,0289,0291,			5324,5332,5349,5373,			
		0294,0295,0298,0299,			5394,5395,5400,5426,			
		0301,0303,0304,0305,			5517,5519,5522,5523,			
		0306,0307,0308,0309,			5524,5540,5563,5566,			
		0310,0311,0312,0315,			5573,5584,5585,5594,			
		0316,0317,0318,0319,			5678,5823,5856,6021,			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
668	493823	Spacer	842	★691031	Seal-O Ring (Dipstick Tube)	921A	695886	Cover-Blower Housing
670	692294	Spacer-Fuel Tank				921B	692931	Cover-Blower Housing
676	396548	Deflector-Muffler	843	691884	Sleeve-Lever (Speed Control)	921C	695889	Cover-Blower Housing
676A	393756	Deflector-Muffler				921D	591955	Cover-Blower Housing
676C	493871	Deflector-Muffler	843A	691895	Sleeve-Lever (Choke)	921E	696262	Cover-Blower Housing
676D	497682	Deflector-Muffler				921F	697343	Cover-Blower Housing
676E	393760	Deflector-Muffler	847	692047	Dipstick/Tube Assembly	921G	795064	Cover-Blower Housing
677	690661	Screw (Muffler Deflector)				921H	790037	Cover-Blower Housing
684	690345	Screw (Breather Passage Cover)	851	493880S	Terminal-Spark Plug	921J	790036	Cover-Blower Housing
			851A	692424	Terminal-Spark Plug	921K	699984	Cover-Blower Housing
689	691855	Spring-Friction	853	695268	Adapter-Wire ----- Note ----- 698471 Adapter-Wire Used on Type No(s). 4244, 5244, 6244 799467 Adapter-Wire Used on Type No(s). 0363, 0376, 5563.	921L	791026	Cover-Blower Housing
692	690572	Spring-Detent				921M	792652	Cover-Blower Housing
697	691127	Screw (Drive Cap)				921N	792675	Cover-Blower Housing
703	696309	Clip				921P	792687	Cover-Blower Housing
718	690959	Pin-Locating				921R	793771	Cover-Blower Housing
741	797521	Gear-Timing (Metal) (Used After Code Date 08021700). ----- Note ----- 794388 Gear-Timing (Use Without Woodruff Key) (Used After Code Date 07093000 and Before Code Date 08021800). 790345 Gear-Timing (Use Without Woodruff Key) (Used Before Code Date 07100100). 691830 Gear-Timing (Uses Woodruff Key)	853A	695897	Adapter-Wire	921U	794355	Cover-Blower Housing
			868	590410	Seal-Valve (Used After Code Date 11063000). ----- Note ----- 697338 Seal-Valve (Used Before Code Date 11070100).	921W	796921	Cover-Blower Housing
						921X	796706	Cover-Blower Housing
			869	691155	Seat-Valve (Intake)	921Y	798277	Cover-Blower Housing
			870	690380	Seat-Valve (Exhaust)	921Z	591955	Cover-Blower Housing
						922A	692135	Spring-Brake
						923	796387	Brake (Electric Starter)
						923A	796136	Brake (Rewind Starter) ----- Note ----- 798276 Brake Used on Type No(s). 0198, 0317, 3198, 6198, 6317.
742	93941	Retainer-E Ring	871	590409	Bushing-Valve Guide (Exhaust) (Used After Code Date 11063000). ----- Note ----- 590409 Bushing-Valve Guide (Intake) (Used After Code Date 11063000). 262001 Bushing-Valve Guide (Exhaust) (Used Before Code Date 11070100). 63709 Bushing-Valve Guide (Intake) (Used Before Code Date 11070100).	925	795403	Cover-Linkage
745	691648	Screw (Brake)				930	691919	Guard-Rewind
783	795099	Gear-Pinion				930A	691345	Guard-Rewind
783A	795096	Gear-Pinion				937	795098	Spline-Starter
784	795095	Cover-Starter Gear				937A	799420	Spline-Starter
785	692352	Gasket-Starter Cover				946	691738	Stop-Rope
789B	792685	Harness-Wiring				949	696306	Guard-Debris Screen
789C	796385	Harness-Wiring				957B	796577	Cap-Fuel Tank (Plastic)
789D	796574	Harness-Wiring				958	698183	Valve-Fuel Shut Off (Plastic)
832	590486	Guard-Muffler				966B	795259	Base-Air Cleaner Primer
832A	691424	Guard-Muffler				967A	493537s	Filter-Pre Cleaner
832B	497683	Guard-Muffler				968B	692298	Cover-Air Cleaner
832E	793568	Guard-Muffler				969	690700	Screw (Blower Housing Cover)
836	690664	Screw (Muffler Guard)				969A	691138	Screw (Blower Housing Cover)
836B	691147	Screw (Muffler Guard)	883	691881	Gasket-Exhaust			
836C	790745	Screw (Muffler Guard)	892	690646	Switch-Key	970	691669	Screw (Air Cleaner Primer Bracket)
			910	691094	Stud (Alternator)			

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
972B	699374	Tank-Fuel (Plastic)	1058	380567	Operator's Manual (Used After Code Date 11063000).	1211	498144	Pulley/Spring Assembly (Spring)
975	796611	Bowl-Float			----- Note -----	1319	794467	Label-Warning
976	694395	Primer-Carburetor			277039 Operator's Manual	1330	270962	Manual-Repair
990	691959	Key Set			(Used Before Code Date 11070100).	1386	790848	Vane-Air (Autochoke System)
994	398067	Arrestor-Spark				1387	790849	Spring-Air Vane
994B	792245	Arrestor-Spark	1059	692311	Kit-Screw/Washer	1388	790850	Screw (Air Vane)
997	696310	Shield-Debris	1095	59050	Gasket Set-Valve			
1005	691346	Fan-Flywheel	1119	692979	Screw (Alternator)			
1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)	1210	498144	Pulley/Spring Assembly (Pulley)			

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

