

ESPLOSO
Multifunzione
DN3Z36SC

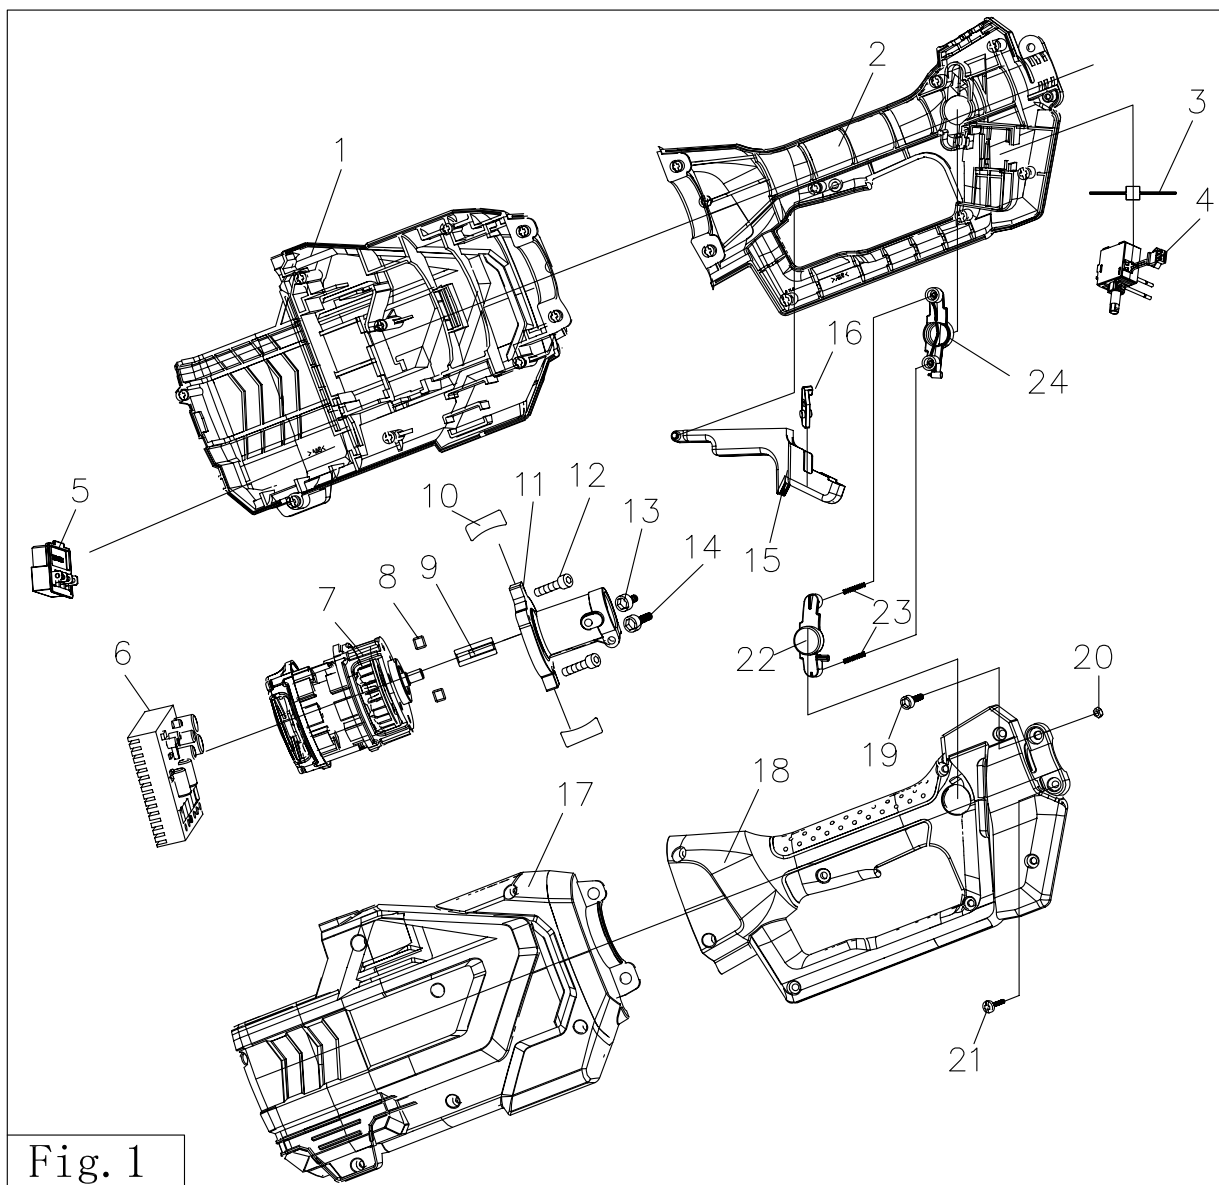


Fig. 1

Appendix List of Attached Fig.1(3GC36D)

Ser.NO.	Part NO.	Part Name	Qty.	Ser.NO.	Part NO.	Part Name	Qty.
1	3GC36D2-1	Left Hemi	1	13	GB70.1+GB93+GB97	SCREW M5×12	1
2	3GC36G.3-2	Left half control box	1	14	GB70.1+GB93+GB97	SCREW M5×25	1
3	3GC36D.3.1-1	Rectifier diode	1	15	3GC36D.3-3	Control handle	1
4	3GC36D.3.1	Speed regulation switch	1	16	3GC36D.3-6	Limit handle	1
5	3GC36D.2.2	Junction plate	1	17	3GC36D.2-2	Right Hemi	1
6	3GC36D.2.3	Controller	1	18	3GC36D.3-1	Right half control box	1
7	3GC36D.2.1	Motor	1	19	GB/T 818	SCREW M5×20	1
8	3GC36D.2-5	Damping rubber	2	20	GB/T 6170	NUT M5	1
9	3GC36D.2-3	Connection sleeve	1	21	3GC36D.2-4	SCREW M4×16	16
10	3GC36G.2-6	Damping rubber	2	22	3GC36D.3-4	Right lock button	1
11	3GC36D.2-7	Connection disk	1	23	3GC36D.3-5	Reset spring	2
12	GB70.1	SCREW M5×14	3	24	3GC36D.3-7	Left lock button	1

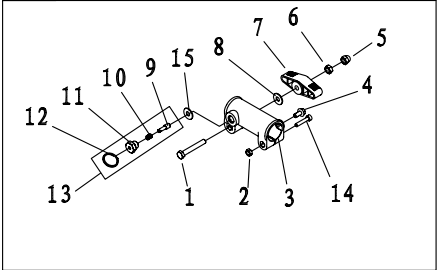
Joining Ass'y		N0.	Part NO.	Part Name	Qty.
		1	GB/T5781	Bolt M6×55	1
		2	GB/T889.1	Nut M5	1
		3	BG430F. 5-1	Joining	1
		4	GB/T5789	Bolt M5×12	1
		5	GB/T923	Nut M6	1
		6	GB/T6170	Screw M6	1
		7	CG260BF. 1. 2-1	Handle	1
		8	GB/T96	Washer 6	1
		9	BG305. 2. 1-1	Bin	1
		10	BG305. 2. 1-2	Spring	1
		11	BG305. 2. 1-3	Cover	1
		12	BG305. 2. 1-4	Loop	1
		13	BG305. 2. 1	Bin comp.	1
		14	GB/T70. 1	Screw M5×25	1
		15	1E46FP-15	Washer	1

Fig. 2


Fore-Pipe Comp.		N0.	PART NO.	PART NAME	QTY.
		1	CG230B. 2-2	Rubber Cover	3
		2	BG430F. 4-4	Oil-bearing	3
		3	CG260BF. 1A. 2-1	Drive Shaft	1
		4	DN3Z36CG-2	Pipe	1
		5	BG-328-8	Rubber Pipe (20mm)	1

Fig. 3



Rear-Pipe Comp.		N0.	PART NO.	PART NAME	QTY.
		1	CG230B. 2-2	Rubber Cover	3
		2	BG430F. 4-4	Oil-bearing	3
		3	DN3Z36CG. 1. 1	Drive Shaft	1
		4	DN3Z36CG-1	Pipe	1
		5	BG-328-8	Rubber Pipe (20mm)	1


Fig. 4

Fig. 5

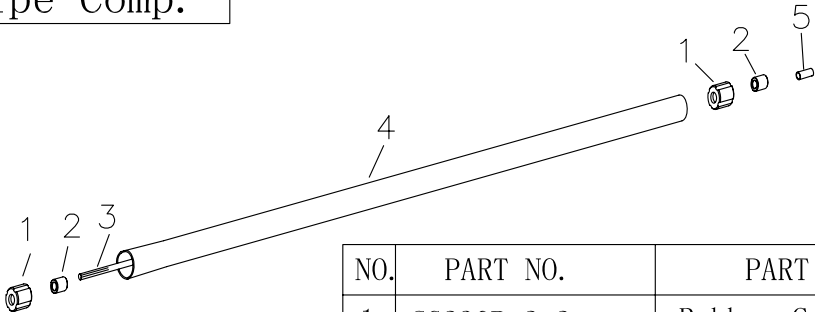


NO.	PART NO.	PART NAME	QTY.
1	CG245Q. 11. 1	Handle Cover	1
2	CG330A-E-MS-1	Rubber Cover	1
3	CG245Q. 11-1	Handle	1
4	1E40F-5A-CE-4	Screw M5×30	4

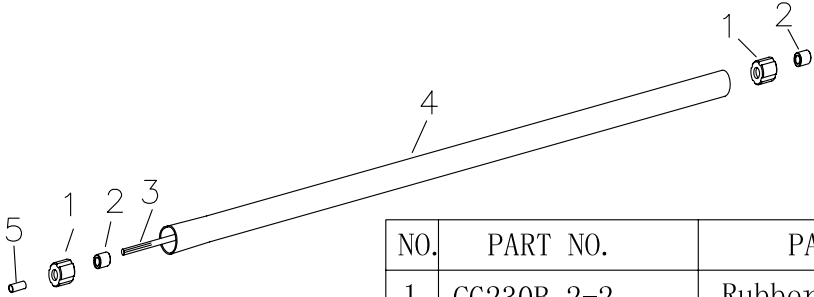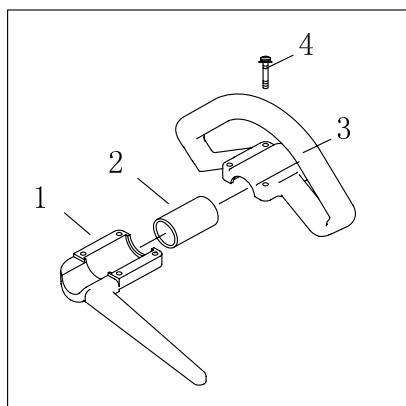Fig. 6

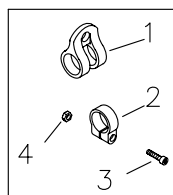

NO.	PART NO.	PART NAME	QTY.
1	CG230B. 3. 1	Harness Clamp	1
2	CG230B. 3. 2	Clamp	1
3	GB/T70. 1	Screw M5×20	1
4	GB/T889. 1	Nut M5	1


Fig. 7

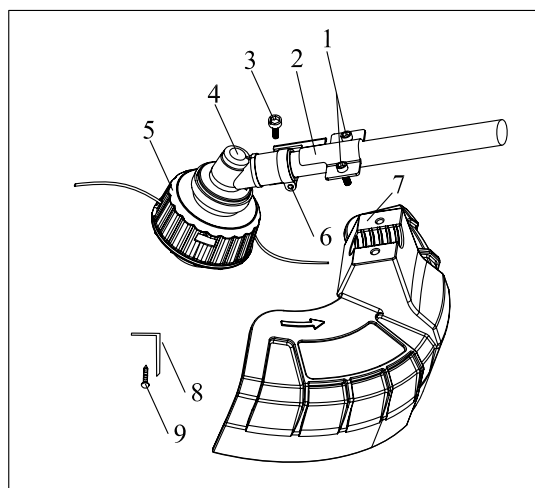

NO.	PART NO.	PART NAME	QTY.
1	GB70. 1+GB93+GB97	Screw M6×20	2
2	3GC36D. 5-1	Safety Guard Bracket	1
3	GB70. 1+GB93+GB97	Screw M5×14	1
4	BG430F-BS. 6	Gear Case Ass'y	1
5	3GC36D. 5. 2	Nylon Cutter Head	1
6	GB/T70. 1+GB/T93	Screw M5×20	1
7	3GC36D. 5. 1	Safety Guard	1
8	CG305F. 11-1	BLade	1
9	XSS46-2. 2-5	Screw M5×20	2

The Parts List of POLE SAW


Fig. 8

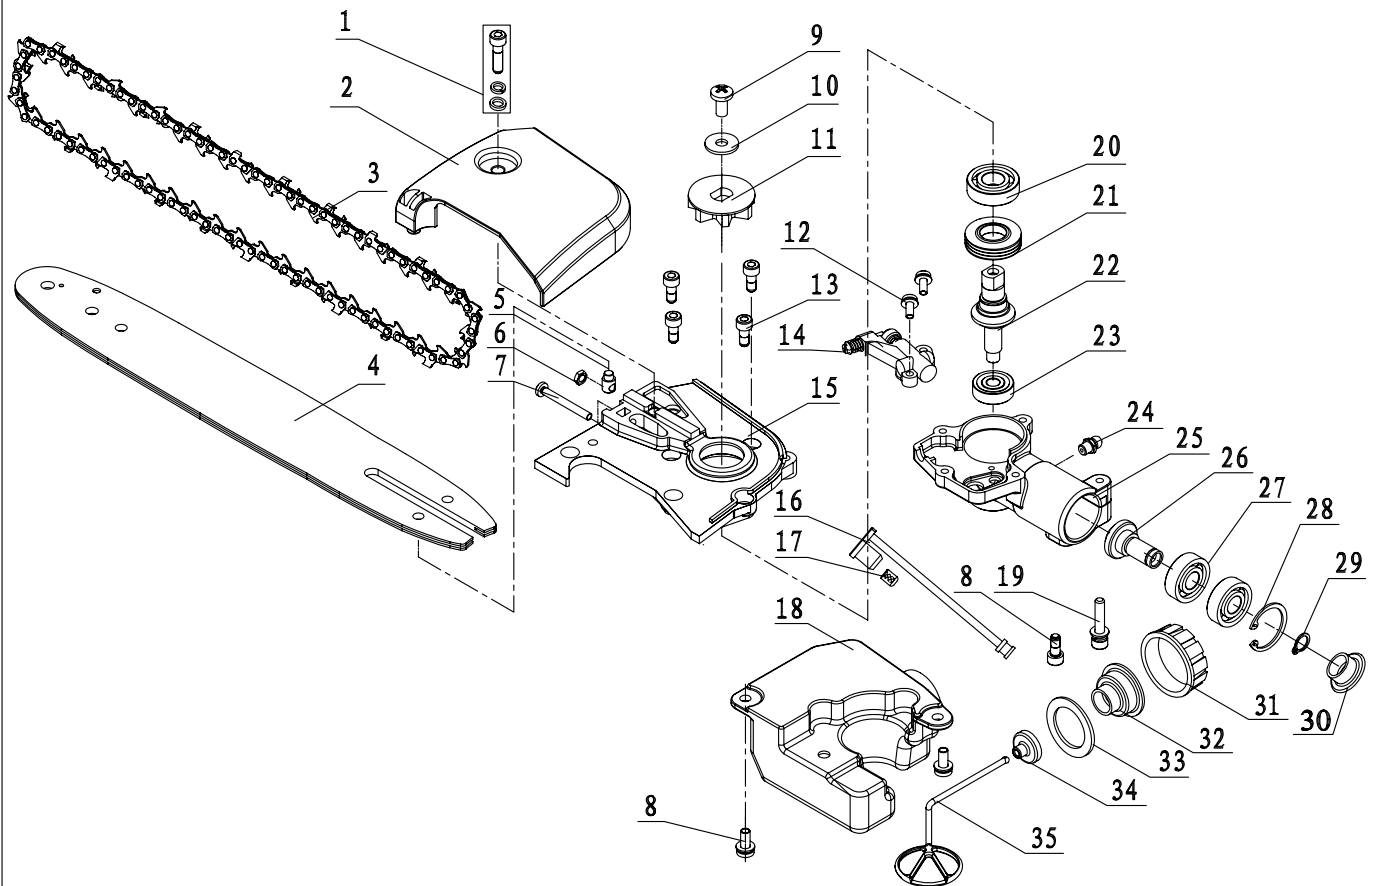

NO.	PART NO.	PART NAME	QTY.	NO.	PART NO.	DESCRIPTION	QTY.	NO.	PART NO.	DESCRIPTION	QTY.
1	GJ330. 1-4+GB93+GB97	Screw M6×25	1	19	GB70+GB93+GB97	Screw M5×25	1				
2	GJ330. 1. 5	Cover Borad Comp.	1	20	GB/T276	Bearing 6001-2RS/P5	1				
3	LY/T1187	ChainJL9-3	1	21	GJ330.1.1-3A	Worm	1				
4	GJ330. 1. 4	"10" Guide board	1	22	GJ330.1.1.3A	Right pinion	1				
5	GJ330. 1. 3-2	Adjust pin	1	23	GB/T276	Bearing 627-Z	1				
6	GB/T889.1	Nut M4	1	24	GB/T1152	Oil cup M6	1				
7	GB/T65	Screw M4×35	1	25	GJ330.1.1-1	Gear case assy	1				
8	GB/T9074.4	BOLT M5×14	3	26	GJ330. 1. 1-4	Left pinion	1				
9	GB/T70.1	Screw M6×16	1	27	GB/T276	Bearing 6000-2RZ/P5	2				
10	GB/T96.1	Washer 6	1	28	GB/T893.2	Stop ring 26	1				
11	GJ330.1-2A	Chain wheel	1	29	GB/T894.1	Stop ring 10	1				
12	GB/T70.1	Screw M4×12	2	30	CG330-E-MS. 3-2A	Adapter	1				
13	GB/T70.1	Screw M5×12	4	31	GJ330-YXG	Fuel Tank Lid	1				
14	GJ330.1.1.1	Worm wheel ass'y	1	32	1E32FL.6.2-2	Inside Cover	1				
15	GJ330.1.3-1	Box cover	1	33	CG420.1.3.1-2	Gasket	1				
16	GJ330.1.1.2-1	grease-vitta	1	34	1E32FL.6.2-3	Lid	1				
17	GJ330.1.1.2.1	Filter	1	35	1E32FL.6.2-4	Chain	1				
18	GJ330.1.2.1	Oil box	1								


The Parts List of LONG REACH TRIMMER

Fig. 9

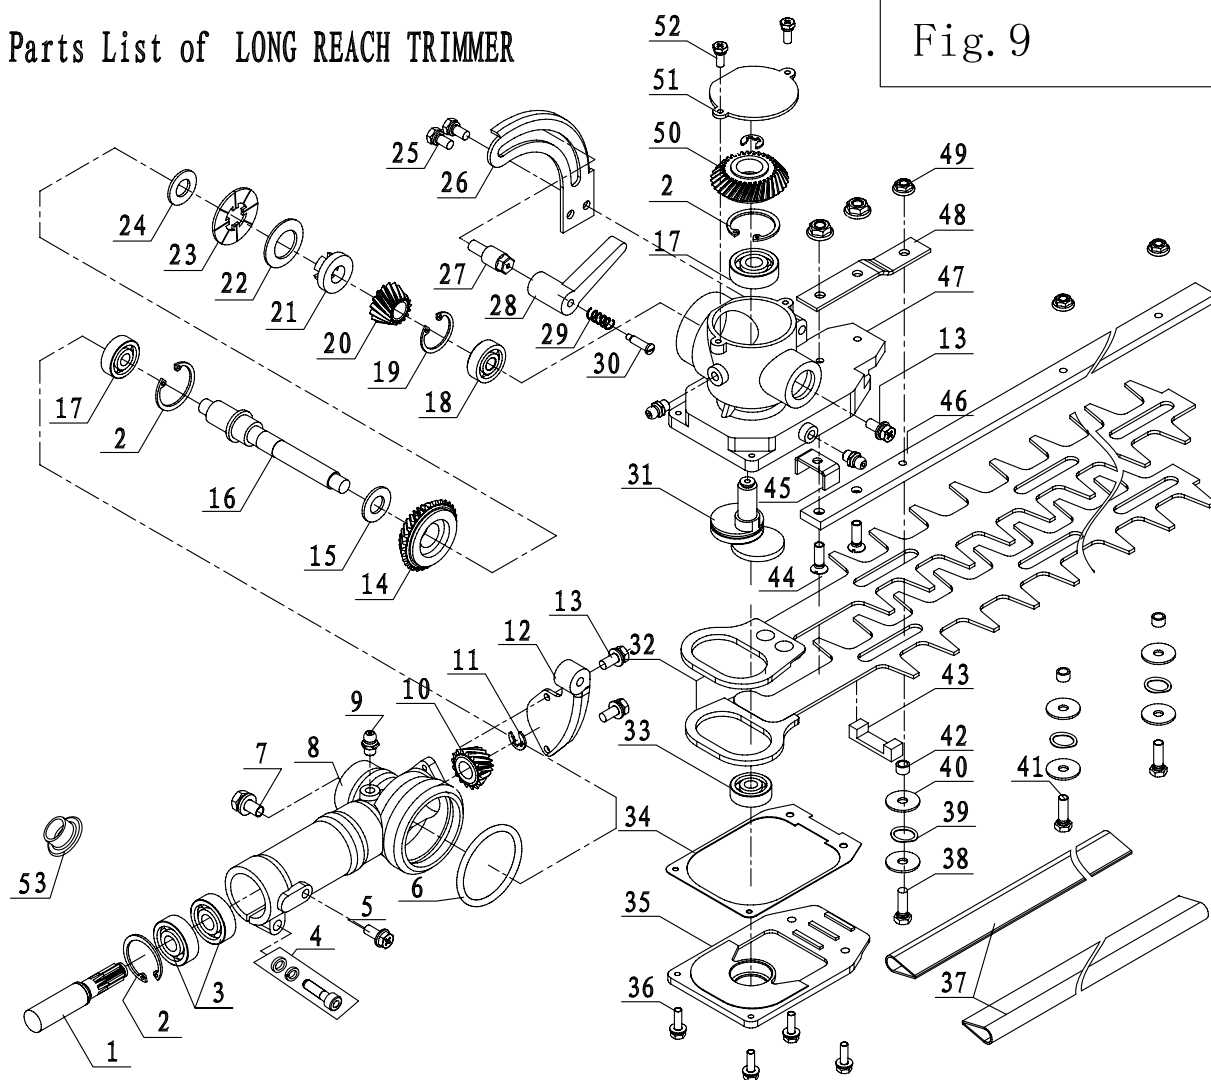

NO.	PART NO.	DESCRIPTION	QTY.	NO.	PART NO.	DESCRIPTION	QTY.	NO.	PART NO.	DESCRIPTION	QTY.
1	GJ330.2.1A	GEAR SHAFT	1	19	GB/T893.1	STOP RING 22	1	37	GJ330.2-3	BLADE COVER	1
2	GB/T893.1	STOP RING 26	3	20	GJ330.2.2-2	PINION	1	38	GB/T29.2	SCREW M5×20	1
3	GB/T276	BEARING 6000-RS/P5	2	21	GJ330.2.2-3	LIMIT LOCATION BLOCK	1	39	1E34F-13	WASHER	4
4	GB70+GB93+GB97	SCREW M5×25	1	22	GJ330.2.2-4	DISHING WASHER	1	40	GJ330.2-6	WASHER 5	8
5	GB/T9074.4	BOLT M5×14	1	23	GJ330.2.2-5	LOCATION PAD	1	41	GB/T29.2	SCREW M5×18	3
6	GJ330.2-4	"O" CIRCLE 40.2	1	24	GJ330.2.2-8	RUBBER COVER 10	1	42	GJ330.2-8	GASKET	4
7	GB/T9074.13	BOLT M6×16	1	25	GB/T9074.12	BOLT M5×10	2	43	GJ330.2-10	SEAL GASKET	1
8	GJ330.2-1	GEAR CASE ASSY	1	26	GJ330.2-15	LOCATION BOARD	1	44	GB/T819	SCREW M5×18	2
9	GB/T 1152	OIL CUP M6	3	27	GJ330.2.4-3	SCREW M6	1	45	GJ330.2-16	LIMIT LOCATION BLOCK	1
10	GJ330.2-2	LEFT PINION	1	28	GJ330.2.4-1	HANDLE	1	46	GJ330.2-7	BLADE BRACKET	1
11	GB/T896	STOP RING 6	2	29	GJ330.2.4-2	SPRING	1	47	GJ330.2-5	DRIVE CASE	1
12	GJ330.2.5	ORIENTATION STAND	1	30	GJ330.2.4-4	SCREW M3×12	1	48	GJ330.2-9	GASKET	1
13	GB/T9074.12	BOLT M4×10	2	31	GJ330.2-12	CAM SHAFT	1	49	GB/T 6187	NUT M5	6
14	GJ330.2.2-7	GEAR	1	32	GJ330.2.3	BLADE RIVETING	1	50	GJ330.2-13	RIGHT PINION	1
15	GJ330.2.2-6	RUBBER COVER 14	1	33	GB/T276	BEARING 608-RS/P5	1	51	GJ330.2-11	DRIVE CAST CAP	1
16	GJ330.2.2-1	SPINDLE	1	34	GJ330.2-17	SEAL GASKET	1	52	GB/T9074.12	BOLT M4×10	2
17	GB/T276	BEARING 6000-2RS/P5	2	35	GJ330.2-14	DRIVE CASE CAP	1	53	CG330-E-MS. 3-2A	Adapter	1
18	GB/T276	BEARING 608-2RS/P5	1	36	GB9074.13	SCREW M4×14	4				


CHARGER DECOMPOSITION DIAGRAM

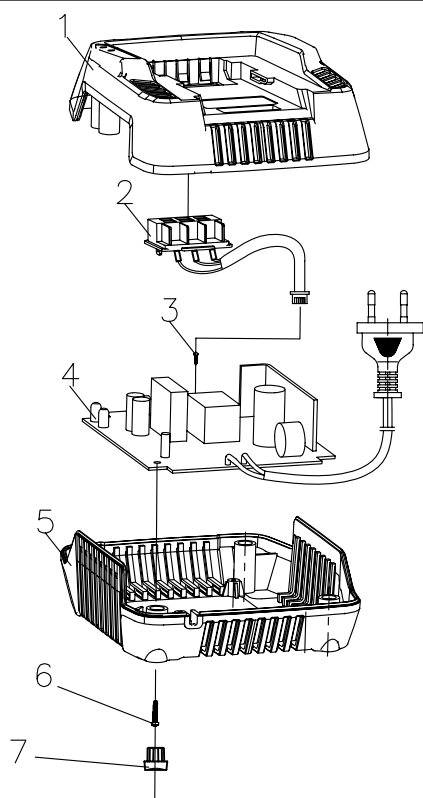

Ser.NO.	Part NO.	Part Name	QTY.
1	3GC36D. 6-1	CHARGER CASE	1
2	3GC36D. 2. 2	BATTERY CONNECTION PLATE	1
3	3GC36D. 1-6	SCREW M3×10	2
4	3GC36D. 6. 1	CHARGE PLATE	1
5	3GC36D. 6-2	CHARGE SHELL	1
6	3GC36D. 2-4	SCREW M4×16	4
7	3GC36D. 6-3	CHARGE RUBBER PAD	4

Fig. 10

BATTERY DECOMPOSITION DIAGRAM

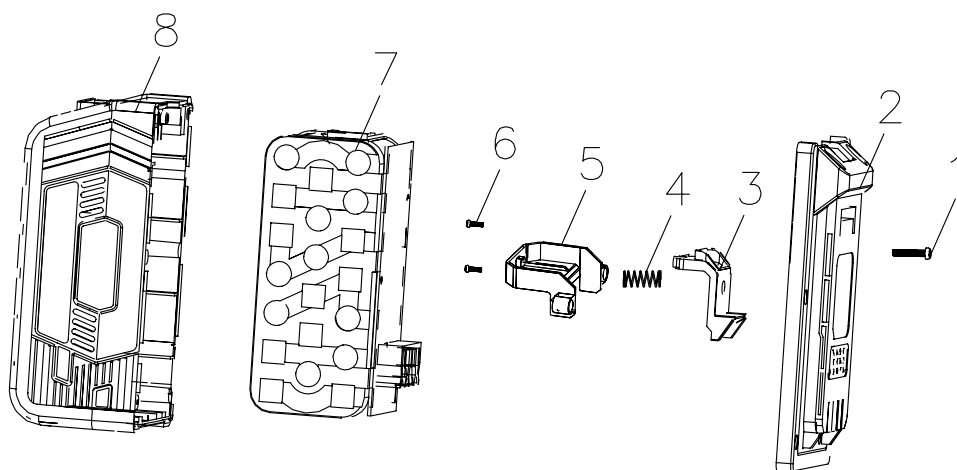

Ser.NO.	Part NO.	Part Name	Qty.
1	3GC36D. 1-7	SCREW M3×16	6
2	3GC36D. 1-1	Front half battery pack	1
3	3GC36D. 1-3	LOck button	1
4	3GC36D. 1-5	Reset spring	1
5	3GC36D. 1-4	Limit plate	1
6	3GC36D. 1-6	SCREW M3×10	2
7	3GC36D. 1. 1	Battery combination	1
8	3GC36D. 1-2	Back half battery pack	1

Fig. 11